

BEBOOK LIVE

7" Android Tablet



User Manual

MYBEBOOK.COM

Copyright

Copyright 2011. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries/regions. Others are copyrights of their respective companies or organizations.

Safety Instructions

Before operating this device, please read carefully and follow the safety instructions below.

- Read the safety and operating instructions carefully before using the product. All warnings on the product and in the operating instructions should be observed.
- Do not place this product under direct sunlight or near heat sources, such as in a closed car under sunlight or near a stove. The outer casing of this product may become deformed and the sophisticated sensors inside may become damaged due to excessive heat.
- Do not use this product near water, in the rain or allow any liquid to get inside this product. Water and moisture may cause short-circuit to the electronic components and lead to malfunctions.
- Do not use this product near strong electromagnetic sources, such as a microwave oven. The electromagnetic interference may cause this product to malfunction.

- Do not drop or apply shock/vibration to this product. Strong impacts may damage the components inside.
- Do not insert objects other than compatible memory cards into the microSD card slot of this product. The metal contacts inside the slot can easily become damaged by foreign objects.
- Do not use an unknown power adapter other than the one supplied with this product. Connecting this product to an unknown power adapter is very dangerous and may lead to fire or explosion.
- Do not cut, bend, modify, place heavy objects, or step on the cable of the power adapter. Otherwise the external insulation may be damaged and result in short-circuit or fire.
- If there are strange odors or heat emitting from this product or any signs of malfunction, disconnect this product from the power immediately and contact your dealer for inspection or service.
- Use a smooth, soft cloth to clean the surface of the screen. Do not use liquid cleaners or glass cleaners.
- If a foreign substance or water gets in this product, please turn the power off immediately and disconnect the power adapter. Next, remove the foreign substance or water, if possible, and then send the product to your nearest service center.



Do not attempt to disassemble or modify this product. There are no user serviceable parts inside this product, and unauthorized modifications will cause the warranty to void.



If the battery is depleted or fails to function properly, send the product to your nearest service center for battery replacement. Do not attempt to replace the battery by yourself.

Using this User Manual


This User Manual provides important procedures and information to familiarize yourself with the device. Please read this User Manual carefully before using your device. Please also keep this User Manual in a safe place for future reference.

- In this User Manual, the On-Screen Display (OSD) menu steps needed to reach a function are shown in a condensed form. For example,

touch  > **Settings**  > **Sound** > **Volume**.

To enable or disable a function, you may need to touch the check box to the right of this function.



The descriptions will be, for example, to touch  >

Settings  > **Wireless & networks** and check **Airplane mode**

 , or to touch  > **Settings**  > **Wireless & networks**

and uncheck **Wi-Fi**  .

- In this User Manual, buttons refer to physical keys on your device that need to be pressed, and icons refer to on-screen keys that need to be touched, or indications shown on the status bar.
- Make sure you have read and understood all the notes and warnings mentioned in this User Manual.



Note: useful tips or additional information to help you get better use of your device.



Warning: instructions that must be followed, or it may cause damage to your device, or result in personal injury.

Table of Contents

Startup	1
Overview	2
Charging	4
Battery status icons	5
Battery maintenance.....	5
Powering On Your Device	6
To turn on/off the screen.....	6
To turn off your device	6
To turn off the sound (Silent mode)	6
To turn off the wireless connections (Airplane mode)	7
Inserting a microSD Card (Optional).....	7
To remove the microSD card:	8
Connecting to an HDMI-enabled TV or Monitor (Optional)	8
Using Your Device.....	9
Unlocking the Screen.....	9
Navigating the On-Screen Display (OSD) Menus.....	9
Using the Touchscreen	10
Touch	10
Touch & Hold	10
Drag & Drop	11
Flick	11
Pinch	12
Adjusting the Screen Orientation.....	12
Knowing the Home Screen	12
Icons in the status bar	14
Knowing the Extension Screens	17
Customizing Your Screens.....	17
Moving an item on the screen	17
Adding an item to the screen	18
Removing an item from the screen	18
Using the Applications	18
Selecting Your OSD Language.....	19
Using the Android Keyboard	19
Managing the input method settings.....	21
Securing Your Device	21
Protecting your device data with a pattern	22
Changing or disabling the screen unlock pattern	22
Protecting your device data with a password	23
Changing or disabling the password	23

- Connectivity..... 24**
 - Wi-Fi..... 24
 - Connecting to a Wi-Fi network..... 24
 - Identifying network notifications..... 25
 - Bluetooth*[®] 25
 - Connecting to a *Bluetooth* device..... 25
 - Sending files to a paired *Bluetooth* device..... 26
 - Editing the device name and making it discoverable 27
 - Unpairing a paired device 27
 - USB Connections 27
- Communication..... 30**
 - Contacts..... 30
 - Adding new contacts..... 30
 - Adding contacts to your favorite 31
 - Editing, sharing, or deleting contacts..... 31
 - Sorting the contact list..... 32
 - Searching contacts 32
 - Sending an email to the contacts..... 32
 - Importing or exporting contacts 32
 - Email 33
 - Adding your email account..... 33
 - Selecting an email account as the default account..... 34
 - Receiving and viewing an email..... 35
 - Composing and sending an email..... 37
 - Editing or deleting your account 38
- Web..... 39**
 - Browser..... 39
 - Opening the Browser 39
 - Going to a webpage..... 39
 - Navigating within and among webpages 39
 - Setting up your homepage..... 41
 - Adding bookmarks to a webpage 42
 - Downloads from a webpage 42
- Entertainment..... 44**
 - Camera 44
 - Taking a picture 45
 - Recording a video..... 46
 - Managing the picture/video..... 47
 - Gallery 47

Opening a file	47
Viewing a picture	48
Cropping a picture	48
Rotating a picture	49
Sharing or deleting a picture	49
Setting a picture as Wallpaper or contact picture	49
Playing back video files	49
Using batch functions to edit files or folders	50
Music	50
Selecting a song	50
Playing a song	51
Creating a playlist	52
Editing the Playlist	52
Tools	53
Clock	53
Setting an alarm	53
Turning off an alarm	54
Deleting an alarm	54
Calendar	55
Creating an event	55
Viewing the calendar	56
Viewing and synchronizing multiple calendars	56
Event reminders	57
File Browser	58
Calculator	58
Customizing Your Device	59
Settings	59
Sound settings	59
Display settings	59
Restoring your device	60
Date and time settings	60
Troubleshooting	61
Specifications	62

Startup

Thank you for purchasing the **BeBook Live Tablet**. This tablet offers you the premium experiences of mobile communication and entertainment via the built-in WiFi, *Bluetooth* and Accelerometer technologies.


Before using this device, please read this User Manual carefully.




Note:

- This device can only download and install applications that are supported by the device's hardware. To view the hardware specifications, refer to "**Specifications**".

Overview

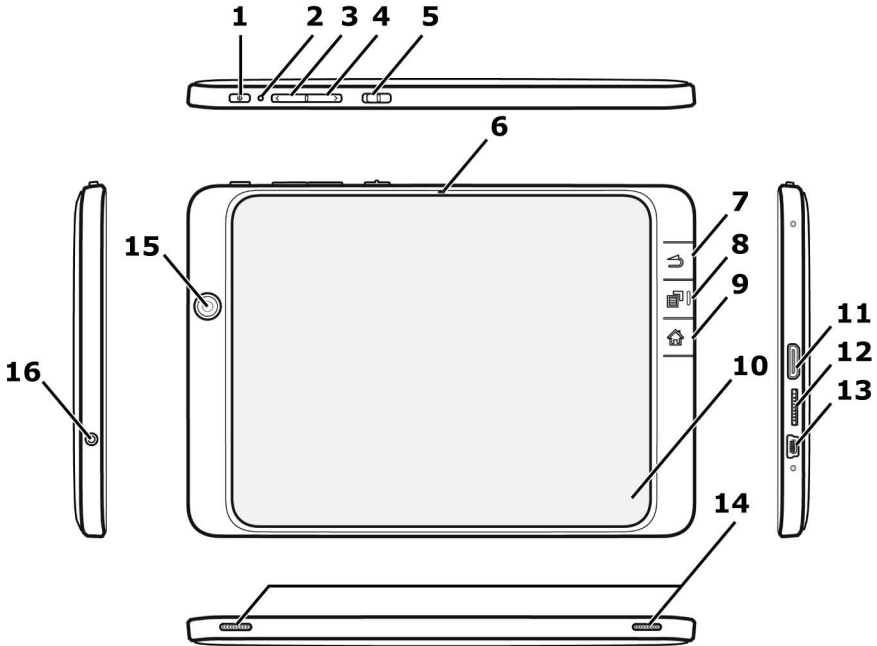

No.	Buttons/ connectors	Functions
1	Power button 	<ul style="list-style-type: none"> ● Press and hold to turn on the device. ● When the device is on, press to turn the screen off or on. To turn the device off, press and hold until the Device options menu appears, and then touch Power off.
2	Reset button	Use a pointed object, such as a pin, to push against this button to reset your device when it does not respond to any operations.
3	Volume Down button	Turns the media volume down.
4	Volume Up button	Turns the media volume up.
5	Sensor lock	To fix the screen to current view without auto orientation, slide the sensor lock to the left. To unlock the screen, slide it to the right.

No.	Buttons/ connectors	Functions
6	Microphone	Used for voice recording.
7	Return button	Returns to the previous screen.
8	Menu button	Opens the menu options that you can perform for the current application or function.
9	Home button	Returns to the Home screen.
10	Touchscreen	Displays information and allows you to perform operations using different gestures.
11	HDMI slot	Connects to an HDMI-enabled device.
12	microSD card slot	Insert a microSD/microSDHC card into the microSD card slot to access files stored on the card.
13	USB port	Allows you to connect the device to a computer so the files can be transferred from your computer to the device, and vice versa. (View USB Connections)
14	Speakers	Built-in speakers for playing sounds. Press the Volume Up/Down buttons to adjust the volume of the speakers.
15	Camera lens	Used to take pictures or record videos.
16	Headphone connector	Supports stereo audio signal output to headphones or external audio devices.



Warning:

Avoid prolonged use of the earphones or listening at high volume. Otherwise, your hearing may be damaged.

Charging


Your device is only partially charged when first unpacked. Charge the battery fully for 6 hours before using the device for the first time.




Warning:

If your device is not in use for a long time, the battery will completely run out and may not be powered on immediately even if it is connected to AC power. When this occurs, fully charge your device for 6 hours before use.

1. Insert the supplied cable's Type A USB connector into the power adapter's Type A USB port.
2. Insert the cable's mini USB connector into the device's mini USB port.
3. Plug the supplied power adapter into an electric outlet to start charging.

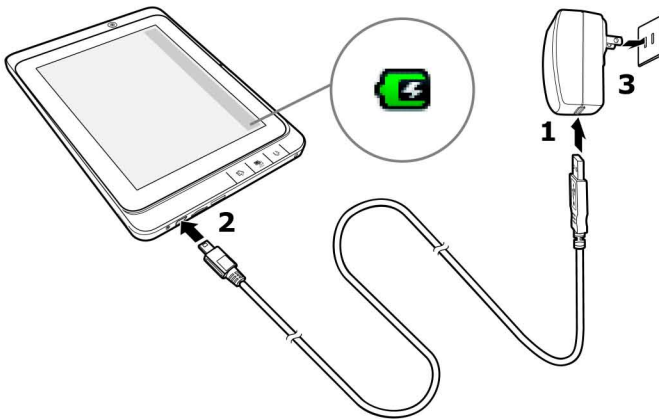

4. After the battery is completely charged, the battery status icon turns "full" . Remove the power adapter and the cable from both the power outlet and the device.



Note:





- Charge your device only by connecting it to a power outlet. Connecting your device to a computer is intended to be used for data exchange only. View "**USB Connections**" for detailed instructions.



Warning: Only use the supplied power adapter and USB cable for charging. Do not remove the cable during charging to avoid possible damage.

Battery status icons

To quickly check the current battery status, refer to the battery status icons displayed on the top right corner of the Home screen.

Icons	Definitions
	Battery is charging.
	Battery is full.
	Battery is low and needs to be charged.
	Battery is depleted. Charge it immediately.



Warning:

Do not try to replace the battery by yourself. Any attempt to disassemble the device may cause damage to the device or result in personal injury.

Battery maintenance

This device contains a built-in Li-Polymer rechargeable battery. The capacity of the battery will reduce each time it is charged/depleted. However, you can still extend the battery life by following the suggestions below:


- Use the device at least once a week.
- Charge the battery regularly and fully. Never leave the battery fully discharged for a long time.
- Always keep the device away from heat.
- If the device only works when the power adapter is connected, contact your local dealer to replace the battery.

Powering On Your Live Tablet



Press and hold the Power button  to turn on your device. You will enter the Home screen after system startup.



Note:

- If the screen is locked automatically, flick  up to unlock the screen.

To turn on/off the screen

- To turn off the screen, press the Power button .
- To turn on the screen, press the Power button  and then flick





up to unlock the screen.

To turn off your device

1. Press and hold the Power button  until the **Device options** menu appears.
2. Touch **Power off** and confirm with **OK**.

To turn off the sound (Silent mode)

- Press and hold the Power button  until the **Device options** menu appears. Touch **Silent mode** to turn off the sound of the device.
- When the screen is locked, flick  down to turn off the sound.



Note:



- To disable Silent mode, touch **Silent mode** again from the **Device options** menu, or flick  down when the screen is locked.

To turn off the wireless connections (Airplane mode)

- Press and hold the Power button  until the **Device options** menu appears. Touch **Airplane mode** to turn off all the wireless connections, including Wi-Fi and *Bluetooth*.
- Touch  > **Settings**  > **Wireless & networks** and check **Airplane mode**  .




Note:



- To disable Airplane mode, touch **Airplane mode** again from the **Device options** menu, or uncheck **Airplane mode**  from **Settings**  > **Wireless & networks**.

Inserting a microSD Card (optional)

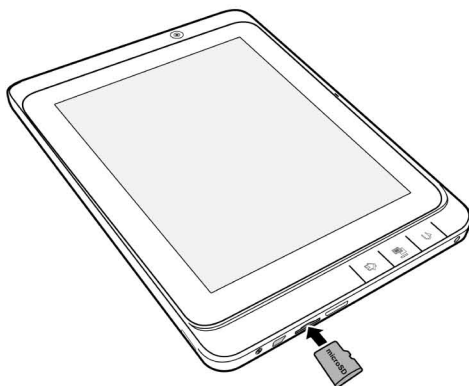Insert the microSD card with its metal contacts facing downwards into the microSD card slot, and push it in until it clicks into place.



To remove the microSD card:

1. Touch  > **Settings**  > **SD card & internal storage** > **Unmount SD card** and confirm with **OK**.
2. Push the card in to eject it from the slot.

Connecting to an HDMI-enabled TV or Monitor (Optional)

You can connect your device to an HDMI-enabled TV or monitor using an HDMI cable.

1. Insert the smaller end of an HDMI cable to your device's HDMI port. Ensure that the arrow side faces up.
2. Insert the larger end of the HDMI cable to your HDMI-enabled TV's or monitor's HDMI port.
3. On your TV or monitor, select the proper input source.




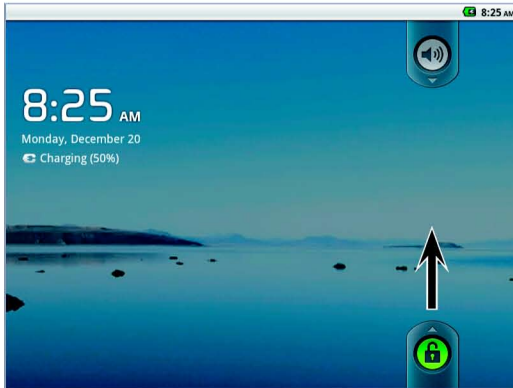 
Note:




- Refer to the documentation of your HDMI-enabled television or monitor for detailed connections and settings.

Using Your Device

Unlocking the Screen

The screen is locked automatically after powering on, or after the device is not in use for a preset period of time. Click  following the arrow direction to unlock the screen.



- To manually turn off the screen, press the Power button .
- To set up the time duration before the screen is off, touch  > **Settings**  > **Display** > **Screen timeout**.

Navigating the On-Screen Display (OSD) Menus


You can operate the device using the On-Screen Display (OSD) menus. Most of the operations can be done using the touchscreen, while some basic functions or hidden menus can be operated through the buttons.

Using the Touchscreen

Your device provides a multi-touchscreen. Use your finger to touch the surface of the touchscreen to perform most functions. Below are the basic gestures of how to use the touchscreen:


Touch

Touch the screen once to select an item or launch an application.

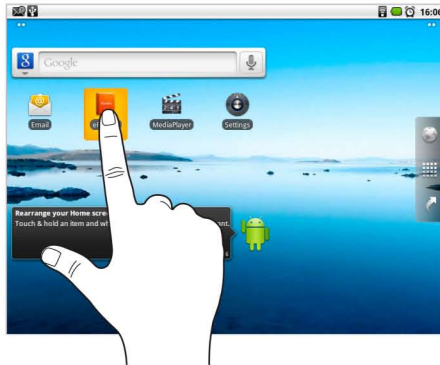

Touch & Hold


- On the Home screen, touch and hold an item until it magnifies, indicating that it can be moved now.

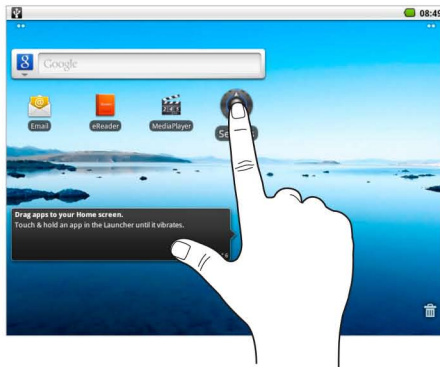

- Touch and hold any space on the Home screen to open the **Add to Home screen** menu.
- On the Launcher screen, touch and hold an application icon and it will appear on the Home screen.

Drag & Drop

1. Touch and hold an item first.
2. Move your finger to a desired position while keeping contact with the screen at all time.
3. Take your finger off the screen to drop the item to the designated position.

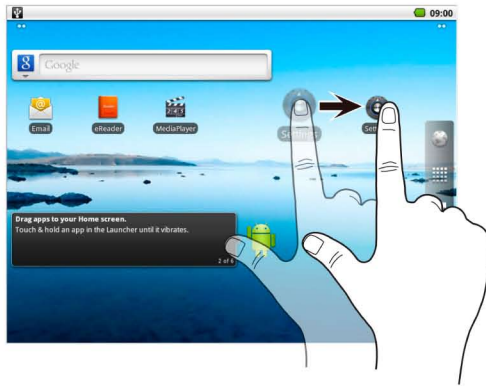



Flick

Touch and move your finger quickly from one place to another without pause to navigate through the screens, menus, lists, pages, and so on.



Pinch

  Place two of your fingers on the screen at once, and spread them apart or move them closer to zoom in or out a picture, a map, or a webpage.

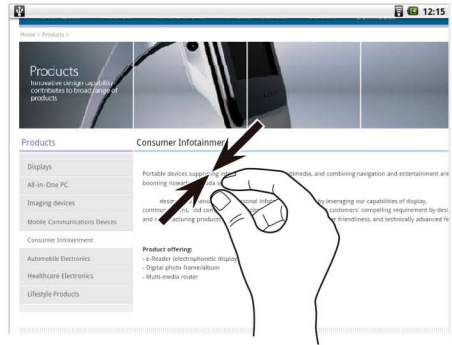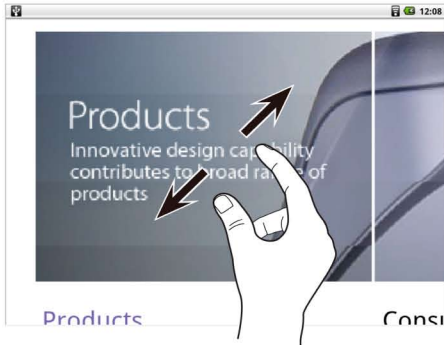

Note:


- You can also double-tap the screen (to touch the screen twice quickly) to zoom in or out a picture, or a webpage.


Adjusting the Screen Orientation

The screen orientation changes automatically to portrait or landscape view depending on how you hold the device. To fix the screen orientation to current view, switch the sensor lock to the left.

Knowing the Home Screen

You will enter the Home screen after powering on the device. The Home screen is the main platform where you can access all the functions and applications installed on your device. You can monitor the status of the device, access webpages, and use widgets to obtain information, or shortcuts to launch applications on the Home screen.

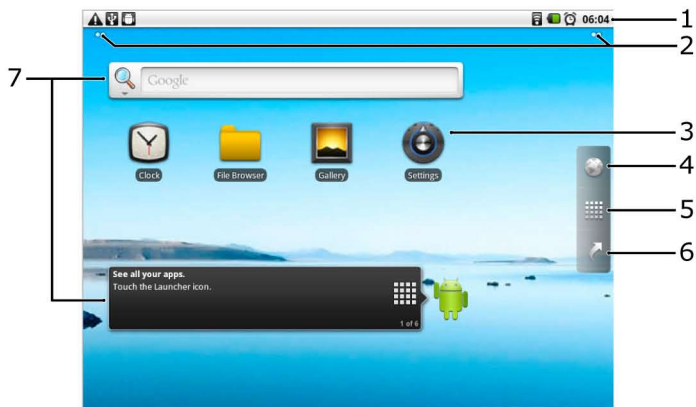

1	Status bar	Displays the following information in icons: <ul style="list-style-type: none"> ● notifications received during operation ● status of the device, such as battery power level and Wi-Fi signal strength ● the current time
2	Screen dots	Touch the small dots on the top left or right of the screen to navigate through the Home screen and the extension screens.
3	Shortcuts	You can customize to add items to any part of the Home screen for quick access, such as application icons, shortcuts, widgets, folders, and so on.
4	Browser icon	Opens the Browser  application.
5	Launcher icon	Opens the Launcher screen and views all your applications.
6	Add icon	Opens the Add to Home screen menu.
7	Widgets	Small applications located on the Home screen to provide quick access to useful information, such as the current weather.

Icons in the status bar

The status bar located at the top of the screen provides information about device status, notifications received and the current time.










To view the complete information and perform a task, touch and drag down the status bar to display the ongoing events and notifications listed in the order of the arrival time. Touch each event to obtain further information. To delete the history, touch **Clear**.



1 Notification icons






Notification icons appear when you receive upcoming information, such as new emails, or to inform you about ongoing events or operations, such as when downloading data is in process.







Icons	Indications
	USB cable is connected.
	It is safe to remove the microSD card.

Icons	Indications
	The microSD card is removed.
	New email
	Certain notifications are not displayed.
	Upcoming Calendar event
	Download in progress

2 Status icons

Status icons display the status of the device, such as the battery power level, connectivity and alarm set.

Icons	Indications
	Battery is charging.
	Battery is full.
	Battery is low and needs to be charged.
	Battery is depleted. Charge it immediately.
	Silent mode is enabled.

Icons	Indications
	Airplane mode is enabled.
	The alarm is set.
	Connected to Wi-Fi and displays its signal strength.
	An open Wi-Fi network is available.
	<i>Bluetooth</i> is enabled.
	Connected to certain types of <i>Bluetooth</i> devices.


3 Current time

Displays the current time. To manually set up the date and time, touch

 > **Settings**  > **Date & time** and uncheck **Automatic**  .

Knowing the Extension Screens

The Home screen also provides 4 more extension screens where you can fill with application icons, shortcuts, widgets, or other items as you like. To navigate across the Home and extension screens, flick your finger to the left or right on the screen.

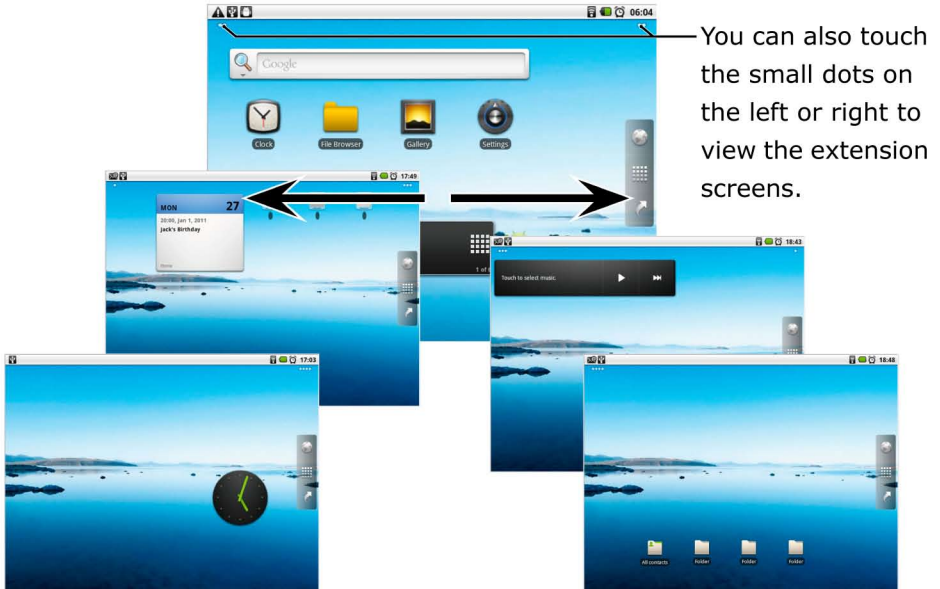


Customizing Your Screens

You can rearrange, add or remove the widgets or shortcuts on the Home and extension screens. Flick to the screen where you want to customize first.


Moving an item on the screen

1. Touch and hold an item until it magnifies.
2. Drag the item to the location where you want to reposition it.
3. Drop the item.

Adding an item to the screen

1. On the Home screen, touch  , or touch and hold an empty area on the screen until the **Add to Home screen** menu appears.
2. Touch to select the type of items:
 - Shortcuts/Widgets/Folders: allows you to access a frequently-used item directly from the screen. Flick through the list and touch the desired item to add it to the screen.
 - Wallpapers: allows you to change the wallpaper of your screen. Select a file source and the desired picture, and touch **Save** or **Set wallpaper** to set it as your wallpaper.


Removing an item from the screen

1. Touch and hold an item until it magnifies.
2. Drag the item to the  icon on the screen.
3. Drop the item.




Using the Applications

All of the applications installed on your device are placed on the Launcher screen.

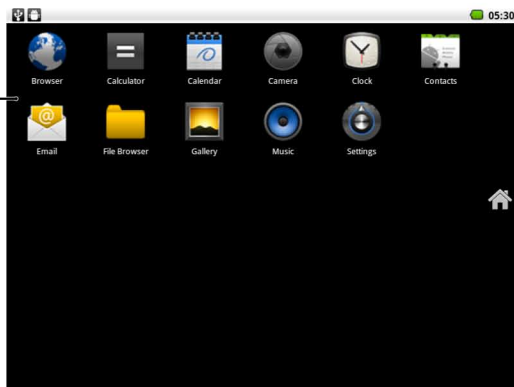
The
Launcher
screen



Touch to
close the
Launcher
screen.



1. Touch  on the Home or extension screens to open the Launcher screen.
2. Touch an application icon to start running the application.
3. To close the Launcher screen, touch . To return to the Home screen, press the Home button .

Adding an application shortcut to the screen

1. Flick to an extension screen where you want to add an application shortcut.
2. Touch  to open the Launcher screen.
3. Touch and hold a desired application icon until it appears on the screen, and drag it to your desired location on the screen.

Selecting Your OSD Language


To set the OSD language of the texts displayed on the device, touch




 > **Settings**  > **Language & keyboard** > **Select language** and select a desired language from the Locale list.

Using the Android Keyboard



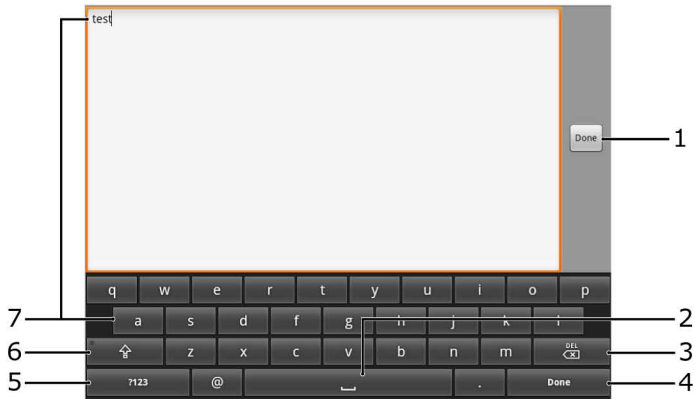

You can use the on-screen keyboard to type texts. Depending on the application you are using, the keyboard layout and the input method may be different.

Touch a text input box to open the Android keyboard.



1	Performs the next operation after the text input is done.
2	Inserts a space.
3	Deletes a character left of the cursor or the marked text.
4	Performs the next operation after the text input is done.
5	<ul style="list-style-type: none"> ● Touch to switch to the numeric/symbolic keyboard. Touch again to switch back to the alphabetic keyboard. ● Touch and hold to open the options menu: - Android keyboard settings: to configure the keyboard settings.
6	<ul style="list-style-type: none"> ● : Touch once to type a sentence with its first letter capitalized (Capitalization). ● : Touch twice to type texts with capital letters (Caps Lock mode). ● : Touch the third time to switch back to the lowercase keyboard.
7	Touch the letter keys to type the texts.



Managing the input method settings

1. On the Home screen, touch  > **Settings**  > **Language & keyboard** > **Android keyboard**.
2. To enable a setting, touch to select the check box  . To disable a setting, touch again to deselect the check box  .

Sound on keypress	Enables a sound on each keypress.
Auto-capitalization	Types a new sentence with its first letter capitalized.
Input languages	Selects a desired input language.
Quick fixes	Marks and corrects the wrong spellings.
Show suggestions	Displays possible combination of words as you type.
Auto-complete	Touch the spacebar or punctuation keys to insert a highlighted word automatically.


Securing Your Device

You can protect your device data with a screen unlock pattern, or a password.

On the Home screen, touch  > **Settings**  > **Location & security** > **Set up screen lock**.

Protecting your device data with a pattern

1. Touch **Pattern**. Read the instructions on the screen and touch **Next** to continue.
2. Study the on-screen animation on how to draw the example pattern, and touch **Next** to open the pattern drawing screen.

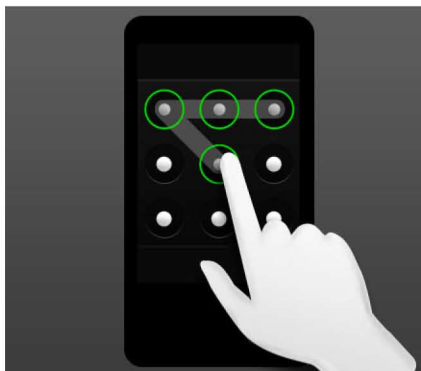



3. Drag your finger to draw your personal unlock pattern by connecting at least 4 dots in a vertical, horizontal and/or diagonal direction. Touch **Continue**.
4. Draw the pattern again as requested, and then touch **Confirm**. Your personal unlock pattern is remembered by your device.



Note:

- To change or disable the screen unlock pattern, you will need to draw the old pattern for safety confirmation first.

Changing or disabling the screen unlock pattern

1. On the Home screen, touch  > **Settings**  > **Location & security** > **Change screen lock**.
2. Draw the current pattern you created.
3. • To change the pattern, touch **Pattern** and follow the steps in "**Protecting your device data with a pattern**" to reset the pattern.
 - To disable the pattern, touch **None**.

Protecting your device data with a password



1. Touch **Password**.
2. Enter your own password, which should consist of at least 4 characters and contain at least one letter, and then touch **OK**.
3. Enter the password again for confirmation, and touch **OK**.



Note:

- To change or disable the screen unlock password, you will need to enter the old password for safety confirmation first.

Changing or disabling the password



1. On the Home screen, touch  > **Settings**  > **Location & security** > **Change screen lock**.
2. Enter the password you enabled, and then touch **Continue**.
3.
 - To change the password, touch **Password**, and follow the steps in "**Protecting your device data with a password**" to reset the password.
 - To disable the password, touch **None**.

Connectivity

Wi-Fi

To browse the webpages, send emails or use other Web applications, connect the device to the Web first via a wireless network.

Connecting to a Wi-Fi network

1. On the Home screen, touch  > **Settings**  > **Wireless &**

networks and check **Wi-Fi**  to turn the Wi-Fi on.


2. Touch **Wi-Fi settings**. The device then scans for available Wi-Fi networks. The network names (SSID) and security settings of discovered Wi-Fi networks display in a list.


3. Flick through the list.

- If your desired network is in the list, continue to step 4.
- If it is not discoverable, touch **Add Wi-Fi network**. Type the network name, select its security type and enter the password, if needed. Touch **Save**.



Note:

- To start a new search for the available Wi-Fi networks, on the Wi-Fi settings screen, press the Menu button  and touch **Scan**.
4. Touch a desired network from the list. Enter its password, if needed, and touch **Connect** to start connection.

5. After the device connects successfully to the Internet, the  icon appears in the status bar indicating the current Wi-Fi signal strength.



Note:

- To disconnect from the current Wi-Fi network, touch its name from the list, and then touch **Forget**.

Identifying network notifications

The device notifies you automatically whenever a new open network is available, and will display the  icon in the status bar. To stop

receiving notifications, touch  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**, and uncheck **Network notification** .

Bluetooth®

To exchange data with other devices, use the *Bluetooth* technology to connect your device to other *Bluetooth* devices within a distance of approximately 10 meters (30 feet). Before the connection starts, you need to turn on your device's *Bluetooth* radio. To be connected by other *Bluetooth* device, you may also need to make your device "discoverable". When you are not using the *Bluetooth* function, be sure to turn it off to extend your battery's life.

Connecting to a *Bluetooth* device

1. On the Home screen, touch  > **Settings**  > **Wireless & networks** and check **Bluetooth**  to turn the *Bluetooth* on. The

 icon then appears in the status bar.

2. Touch **Bluetooth settings**. The device automatically scans for the available *Bluetooth* devices. The discovered devices appear in a list.

3. Flick through the list. Touch to select a desired device. You will now need to pair your device with it to build the connection.

Note:

- To start a new search for the available *Bluetooth* devices, touch **Scan for devices**.
- If your desired device is not available, its "Discoverable" function may have been disabled. Turn on this function of the device to pair first.

4. You may be prompted to enter or confirm the same password on both devices to authenticate. The password may be set manually or provided by the manufacturer. Touch **Pair** and follow the on-screen instructions to complete the pairing process.



Note:


- Refer to the documentation of the paired device for the detailed operations and the default password, if needed.

5. After the pairing is successful, the **Paired but not connected** message appears under the paired device. You can now transfer data from and to the paired device.




Note:

- Once a device is paired successfully, next time you can simply connect to the paired device for data exchange.
- Depending on the type of the paired devices, the messages of successful pairing may be different. For example, if you are connecting to a headset, the pairing message shows: **Connected to Phone Audio** or **Connected to phone and media audio**, and




the  icon appears in the status bar.

Sending files to a paired *Bluetooth* device

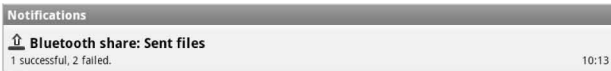

1. Locate the files you want to share with the paired device. Touch and hold the file to open the options menu.
2. Touch **Share** > **Bluetooth** and then touch the name of the paired device from the *Bluetooth* device picker to start data transmission.
3. Flick down the status bar to monitor and confirm the transmission result in the Notifications list.



Editing the device name and making it discoverable

1. On the Home screen, touch  > **Settings**  > **Wireless & networks** > **Bluetooth settings** > **Device name** to edit the device name. Touch **OK** to confirm.
2. On the *Bluetooth* settings screen, check **Discoverable** . When within range, other *Bluetooth*-enabled devices can find your device from the *Bluetooth* devices list.


Unpairing a paired device

1. On the Home screen, touch  > **Settings**  > **Wireless & networks** > **Bluetooth settings**. From the *Bluetooth* devices list, touch and hold the name of a paired device to open the pop-up menu.
2. Touch **Unpair** or **Disconnect & unpair** to end the pairing partnership. The next time you want to restore connection with this device, you will need to pair with it first.

USB Connections

You can copy personal or downloaded files from your computer to the device's internal memory, or to the microSD card inserted in the device, or vice versa.

1. Insert a microSD card into your device's microSD card slot.
2. Insert the supplied cable's mini USB connector into the device's mini USB port (a). Insert the cable's Type A USB connector into your computer's Type A USB port (b).

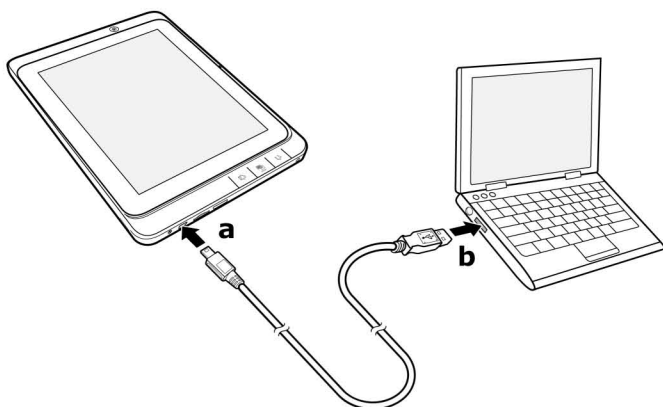

3. The USB connected page appears on the screen.
4. Touch **Turn on USB storage**. Your computer will recognize the device memory and the microSD card as two removable drives (Windows systems) in the following sequence: the device's internal memory, the microSD card storage.



Note:

- After you turn on the USB storage function, your device can not recognize the files stored in the microSD card.
5. On the computer, copy desired personal files from another drive/ folder to your desired removable drive.



Warning:


Do not remove the microSD card from the device or break the USB connection while copying files.

6. When done, touch **Turn off USB storage**.



Note:

- You can also enter the USB connected page by dragging down the status bar, and touch **Turn off USB storage** from the list of the ongoing events.

7. From your computer, click  on the desktop toolbar. Click the pop-up message that reads "Safely remove USB Mass Storage Device", and select the removable drive of your device.
8. When the following message appears on the screen of your computer, remove the cable safely from both the device and the computer.





Note:

- To browse the files stored on the microSD card, keep the microSD card inserted in the device.

Communication

Contacts

In this application, you can store contacts with a variety of business and personal contact information in your device to provide quick and easy access to reach them.


On the Home screen, touch  > **Contacts** .

Adding new contacts

1. Press the Menu button  and touch **New contact**.







Note:

- If you have already set up more than one valid accounts, a pop-up menu appears, prompting you to select an account for this new contact. Touch a desired account to add the new contact under this account.
2. Touch  > **Select photo from Gallery** to open the **Gallery** application. Select a desired picture, crop it and touch **Save** to add the cropped picture to this contact. **(View "Cropping a picture")**
3. Touch the **First name** (given name) text box to type the name using the on-screen keyboard, and then touch **Next** to continue filling in the contact's Last name (family name), phone number, email address and other basic information. When finished, touch **Done**.
4. Touch **Done** to save this contact. To leave without saving this contact, touch **Revert**.




Note:

- To add more information to this contact, scroll down and touch the text input boxes of the desired items to enter details.
-  : displays more details in this item.


-  : adds more fields in this category.
-  : removes the selected field from this category.
-  : displays more categories.

Adding contacts to your favorite


1. From the **Contacts** tab, touch a desired contact to open its contact information.
2. Touch  to the right of the contact name to add it to your favorite in the **Favorites** tab.



Note:

- To remove contacts from your favorite list, touch the unwanted contact from the **Favorites** tab and touch  to the right of the contact name.

Editing, sharing, or deleting contacts


1. From the Contacts list, touch a desired contact to open its contact information.
2. Press the Menu button  to display the options menu.
 - **Edit contact:** edits the contact details.
 - **Share:** shares this contact information with your friends via Email or *Bluetooth*.
 - **Delete contact:** deletes this contact. Touch **OK** to confirm deletion.

Sorting the contact list

From the **Contacts** tab, press the Menu button  and touch **Display options**.

Only contacts with phones	Displays only contacts who have phone numbers.
Sort list by	Displays the contact list in alphabetical order by the contact's first name or its last name.
View contact names as	Views the contact names by first displaying the first name or the last name.


Searching contacts

1. From the Contacts list, press the Menu button  and touch **Search**.
2. Touch the text input box to enter the initial letters or full name of the desired contact. The matching contacts appear on the screen.
3. Touch the desired contact to view its details.

Sending an email to the contacts



Note:


- To use this function, you will be required to set up an email account on the device first. (**View "Adding your email account"**)
1. From the Contacts list, touch a desired contact to open its contact information.
 2. Flick down to select and touch the desired email address of the contact you have set up previously to start writing an email to this contact (**View "Composing and sending an email"**). To add more contacts to this email, touch .

Importing or exporting contacts

You can import contacts in vCard format (.vcf) from your microSD card to the device, or export contacts in vCard format from your device to your microSD card, and share visible contacts with your friends via *Bluetooth* or Email.



Note:

- To use this function, ensure your microSD card is inserted in your device.
1. From the Contacts list, press the Menu button  and touch **Import/Export**.
 2.
 - To import contacts from your microSD card, touch **Import from SD card**. The device starts searching for vCard files in your microSD card. Select your desired vCard file and confirm with **OK** to start importing them to your Contact list.
 - To export contacts from your device to your microSD card, touch **Export to SD card**. Touch **OK** when prompted to confirm the action. All of the contacts in your device will be exported to your microSD card as a group vCard file.
 - To share contacts with your friends, touch **Share visible contacts** and select whether to send the contact list as a group vCard file via *Bluetooth* or *Email*.

Email

In this application, you can receive, view, compose and send emails using your existing email accounts.


On the Home screen, touch  > **Email** .

Adding your email account

1. After opening the **Email**  application for the first time, an **Add account** setup wizard appears on the screen. Follow the on-screen instructions to set up your email account.



Note:

- If you have set up an account from other applications, for example, from **Settings**  > **Accounts & sync**, the account will be synchronized to this application.
2. Touch the text input boxes to enter your email address and password using the on-screen keyboard. Touch **Next** to continue.



Note:

- If the incoming and outgoing server settings of the email account cannot be configured, you will be prompted to enter the settings manually, such as the email server name, protocol and security type. You can also touch **Manual setup** to enter the Incoming server settings page directly.
3. Type the account name (optional) and the name you want to display on the outgoing emails, and then touch **Done**. The contents of the Inbox will be displayed on the screen, indicating that the account is added successfully.






Note:

- If you want to add another email account, touch **Add account**. Repeat the steps above to create a new account.

Selecting an email account as the default account

If you have more than one email accounts, you can assign an email account to send emails by default.

1. When you are in the **Inbox** folder, touch the icon of the account type from the top left corner, for example, , to select an email account from the drop-down menu.
2. Touch  to open its **General settings** page.
3. Check **Default account**.
4. To return to the **Inbox** folder, press the Return button .

Receiving and viewing an email

1. Each time you open your email account, it automatically enters the **Inbox** folder and checks on the server for new email. You can touch



to manually check for new email. All of the incoming emails are listed on the left in the order of the date received by default. To

 
rearrange the email list, touch  and select a desired sorting method.




2. Touch an email title to view its contents.





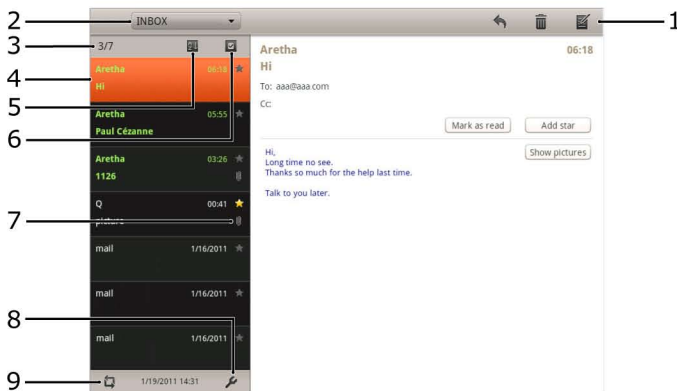







Note:

- Scroll down if the email list or the email contents are too long to be displayed in one page.




1	 : replies to the sender or all people in the email loop, or forwards this email.  : deletes this email.  : composes a new email.
2	To view the emails stored in other folders, touch ▼ and select a desired folder from the drop-down menu.
3	Number of read/unread emails


4	Currently viewed email
5	 : selects a sorting method of the email list.
6	<p>To edit the email list, touch  to open the Select mode. Touch the check box(es) to select one or more emails, and then touch the following icons:</p> <ul style="list-style-type: none">● : marks the email as read/unread. If marked as read, the email title will be displayed in green.● : labels the email with a golden star.● : deletes the email. <p>When done, touch  to close the Select mode.</p>
7	 : This email contains an attachment.
8	 : enters the General settings page. To return to the email contents, press the Return button  .
9	 : synchronizes your emails with the email account on the Web.

Composing and sending an email

1. To compose a new email, touch  to enter the Email editing page.

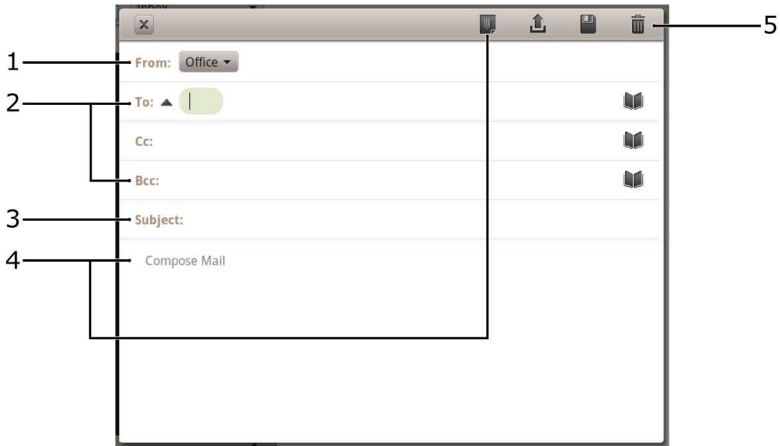


Note:

- Your default email address or account name automatically displays in the **From:** field. If you want to send the email from another account, touch ▼ to select one.
2. Type the recipient's email address in the **To:** field. If the recipient already exists in your **Contacts** list, touch  to select one or more desired contacts.



Note:

- To enter more than one recipient's email address, separate their email addresses with a comma.
 - To send a carbon copy (Cc) or a blind carbon copy (Bcc), touch ▼ to display the **Cc:** and **Bcc:** fields.
3. Type the email title in the **Subject:** field.
4. Touch inside the **Compose Mail** field to start writing the email. To add an attachment, touch .


5. If the email is complete, touch  to send the email, or touch  to save this email as a draft in the **Drafts** folder. To delete the email, touch .






Note:

- If you are browsing a file and want to send it to your friends, directly touch and hold the file until an options menu appears. Touch **Share** > **Email** to attach it to an email.

Editing or deleting your account

You can customize the account settings according to your needs. When you are in any email folder, touch  to open the **General settings** page.



- To edit the account, enter or change the account settings, such as selecting the email checkup frequency. Touch  to save the settings.
- To remove the account, touch .
- To return to the email contents, press the Return button .


Web

Browser

In this application, you can browse the Web and download desired files for playback in your device. Before using this application, connect your device to a Wi-Fi network first. **(View "Connecting to a Wi-Fi network")**

Opening the Browser

On the Home screen, directly touch , or touch  >

Browser . The last visited webpage or the homepage with its web address (URL) appears on the screen.


Going to a webpage


1. Touch the URL box to type the URL for your desired webpage, and then touch **Go**.







2. If you do not know the exact URL, type the keyword. The suggested webpages or terms display on the screen. Touch a suggestion to enter a suggested webpage, or display the search result of a suggested term using the Browser search engine. Touch a link to enter its webpage.

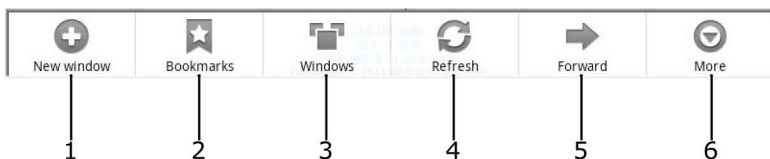Navigating within and among webpages

1. Go to a webpage.
2. Flick down to browse the complete contents of a webpage.
3. To zoom in or out the webpage, touch a desired area with two fingers at once, and pinch them in or out. **(View "Pinch")**
4. Press the Menu button  to open the options menu.



1 New window	You can use multiple browser windows. Touch New window to open a new browser window and display the homepage on the screen.
2 Bookmarks	Displays the bookmarked webpages in a list in the Bookmarks tab. Touch Add to add a bookmark to the current webpage. (View "Adding bookmarks to a webpage")
3 Windows	To switch between multiple browser windows, touch Windows . To close a window, touch  to the right of the unwanted webpage.
4 Refresh	Reloads the current page.
5 Forward	Goes forward to the next webpage. To go back to the previous webpage, press the Return button  .
6 More	<ul style="list-style-type: none"> ● Add bookmark: adds a bookmark to the current page. Edit its name and URL in the pop-up window, and then touch OK. ● Find on page: types the text to search on the webpage and touch Done. The first matching word is highlighted on the screen while the subsequent matches are boxed. Touch  /  to highlight the previous or the next matching word. ● Select text: Touch the desired texts on the webpage to copy them to the clipboard. ● Page info: provides the name and URL of the webpage. ● Share page: sends the webpage URL via <i>Bluetooth</i> or Email. ● Downloads: views your download history from the Web. ● Settings: manages the browser settings.

To view your frequently visited webpages or your browser history


1. Touch the Bookmarks icon  to the right of the URL box.
2. To view your frequently visited webpages, touch the **Most visited** tab. The webpages appear in a list. Flick down to go through the list.
3. To view your browser history, touch the **History** tab. To find a visited webpage, touch the day when you last visited the webpage, and then flick through the list to locate it.

To use web links

Move to a link you want on a webpage. The links may be displayed in the form of an URL address, an underlined text, a picture, or an email address. Touch and hold the link to display the options menu. you can open the link in new window, bookmark, save or copy the link, or share the link via *Bluetooth* or Email.

Setting up your homepage

To manually enter a homepage or use the current page as the homepage

1. On a browser window, press the Menu button  and touch **More > Settings > Set home page**.
2. • To use the current page as the homepage, touch **Use current page**.
 - To manually set up a webpage, touch the URL box to type its web address, and then touch **Done**.
3. Touch **OK**.

To select a homepage from the bookmarked pages

1. On a browser window, touch .
2. Touch and hold on a desired webpage to open the options menu. Touch **Set as homepage**.

Adding bookmarks to a webpage

Touch  to the right of the URL box to display the webpages that are bookmarked in the **Bookmarks** tab. Bookmarked webpages have a gold star . Press the Menu button  and touch  /  to switch between **List view** or **Thumbnail view**.

- To add a bookmark to the last-viewed webpage, touch **Add** or **Add bookmark...**, or press the Menu button  and touch **Bookmark last-viewed page**.
- To add a bookmark to the webpage you have visited, locate the webpage from the **Most visited** tab or the **History** tab. Touch  to the right of the webpage.



Note:

- To create a shortcut for a webpage to the Home screen, touch and hold a desired webpage in the **Bookmarks** tab and touch **Add shortcut to Home**.

Downloads from a webpage




You can download files and applications from a webpage.

To download a file or an application

On a browser window, touch the "Save", "Download" or similar buttons or links to download a file or an application from the current webpage. The downloaded files or applications will be stored in the default download folder in your microSD card.

To install a downloaded application

In order to protect your device and personal data, installing applications downloaded from the Web or received with an email message is prohibited by default. To enable it, allow your device's download feature of web applications.

1. On the Home screen, touch  > **Settings**  > **Applications**.
2. Check **Unknown sources** , and confirm with **OK**.



Warning:

To avoid damage to your device or loss of data, always download applications from trusted sources.

Entertainment

Your device provides the optimal experiences of browsing and playing back various multimedia files whether stored on your microSD card, received from Email or other *Bluetooth* devices, or downloaded from the Web. Furthermore, you can use the device to take pictures or record videos, and share these files with your friends. Before using the following applications, ensure the files you want have been copied to the microSD card inserted in the device.




Note:


- To learn how to insert a microSD card into your device, refer to "**Inserting a microSD Card (Optional)**".
- To check the device's supported file formats, refer to "**Specifications**".
- To learn how to download files from the Web, refer to "**Downloads from a webpage**".


Camera

In this application, you can take pictures or record videos using the device's built-in camera.

On the Home screen, touch  > **Camera** .


Taking a picture


1. Touch  to enter Camera mode.
2. Focus the object you want to capture in the viewfinder screen.
3. Touch the on-screen Shutter button. The picture just taken will be displayed on the top right corner in a thumbnail.

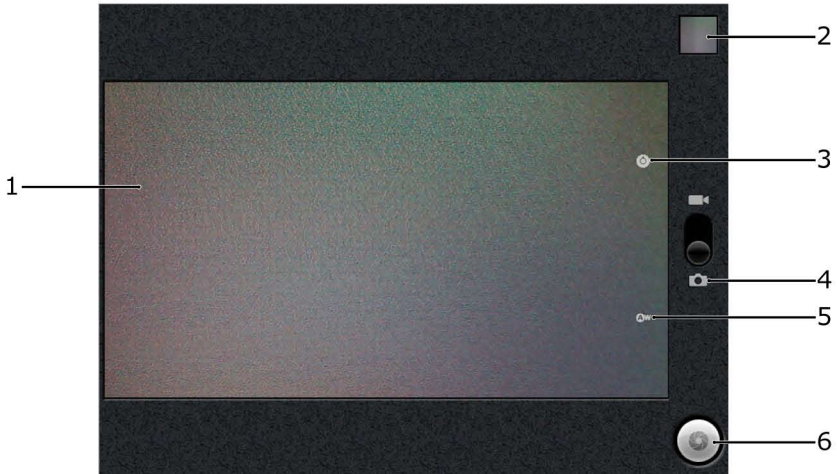

1	Viewfinder screen
2	Displays the thumbnail of the picture last taken. Touch the thumbnail to view and manage the picture.
3	Sets the picture quality and the color effect for the picture. To restore these settings to defaults, touch Restore to defaults .
4	Enters Camera mode.
5	Adjusts the white balance.
6	On-screen Shutter button




Recording a video

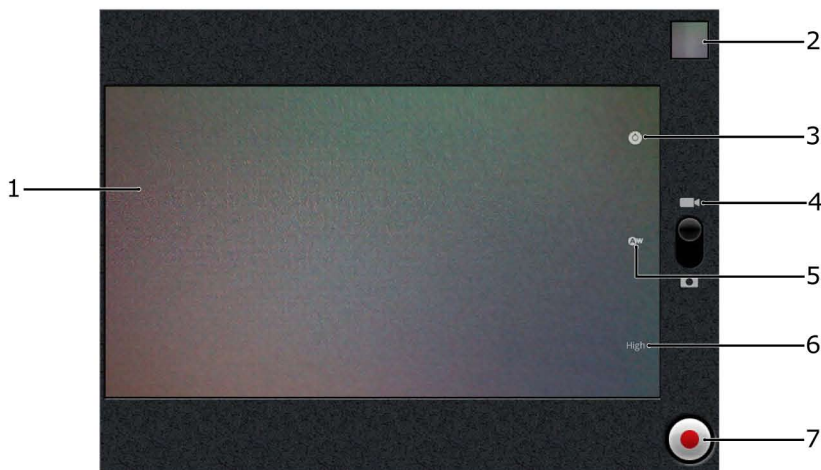1. Touch  to enter Camcorder mode.
2. Focus the object you want to capture in the viewfinder screen.
3. Touch the on-screen Record button to start recording. During recording, the current recording time will be displayed on the lower left corner of the viewfinder screen.
4. To stop recording, touch the on-screen Stop button. The first image of this video just taken will be displayed on the top right corner in a thumbnail.



1	Viewfinder screen
2	Displays the thumbnail of the video last taken. Touch the thumbnail to browse and manage the video.
3	Sets the color effect for the video. To restore the settings to defaults, touch Restore to defaults .
4	Enters Camcorder mode.
5	Adjusts the white balance.
6	Sets the video quality.
7	On-screen Record/Stop button

Managing the picture/video


1. To manage the pictures/videos you have taken/recorded using the device, you can:
 - After taking a picture or a recording a video, directly touch its thumbnail on the top right corner to display the picture/video in full screen.
 - On the Home screen, touch  > **Gallery**  and touch to open the **Camera** folder. Select a picture/video you want to edit and touch to open the file in full screen.
2. Press the Menu button and follow the on-screen menu to perform basic picture-editing functions, delete the picture/video, or share it with your friends via *Bluetooth* or email. For detailed instructions, refer to "**Gallery**".
3. To return to Camera/Camcorder mode, touch  on the top right corner.

Gallery



In this application, you can browse pictures and videos, perform basic editing operations on the pictures and set them as your wallpaper or contact picture. You can also send these files to your friends via *Bluetooth* or Email.


On the Home screen, touch  > **Gallery**  .

Opening a file


1. By default, **Gallery** recognizes and displays the pictures stored on your microSD card, captured using your device, sent from other *Bluetooth* devices, and downloaded from the Web in separate folders.
2. Flick through the folders and touch to open a desired folder.
3. Flick through to take a quick glance at the picture and video files in thumbnails. To view a picture in full screen or play back a video, touch the desired picture or video.
4. To return to the last screen or end the application, press the Return button .


Viewing a picture

1. When viewing a picture in full screen, use the following methods to zoom in or zoom out the picture.
 - Touch anywhere on the picture to display the Zoom tool. Touch  or  to zoom in or out, and flick or drag across the screen to view your desired area of this picture.
 - Touch a desired area of the picture with two fingers at once, and pinch them in or out.
 - Double-tap a desired area to zoom in or out this area of the picture.

When the picture is enlarged, press the Return button  to quickly return this picture into its normal size.
2. Touch anywhere on the picture to display the options menu. Touch **Slideshow** to start play back the pictures stored within this folder. To stop playback, touch the screen.


Cropping a picture

1. When viewing a picture in full screen, press the Menu button  and touch **More > Crop**.
2. The crop frame appears on the screen.

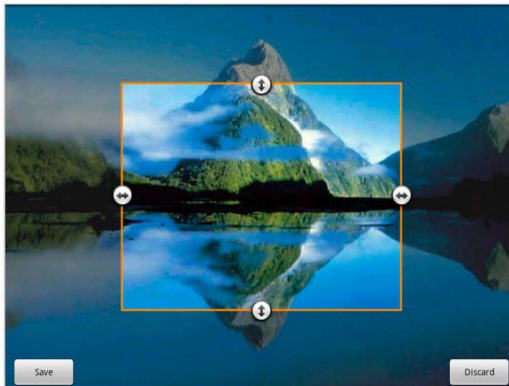


- To move the frame to the desired area, drag it across the screen.
 - To resize the frame, touch and drag the edge of the frame to your desired portion.
3. Touch **Save**. The cropped picture will be saved as a new picture in the same folder with the original one.


Rotating a picture

1. When viewing a picture in full screen, press the Menu button  and touch **More**.
2. • To rotate the picture clockwise, touch **Rotate right**.
 - To rotate the picture counterclockwise, touch **Rotate left**.



 




Sharing or deleting a picture

1. When viewing a picture in full screen, press the menu button .
2. To share the picture with your friends, touch **Share > Email** or **Bluetooth**.
3. To delete the picture, touch **Delete > Confirm Delete**.

Setting a picture as Wallpaper or contact picture



1. When viewing a picture in full screen, press the Menu button  and touch **More > Set as**.
2. • To set the picture as the contact picture, touch **Contact icon**. Flick through the contact list and touch to select a desired contact. Edit the picture and then touch **Save**.
 - To set the picture as Wallpaper, touch **Wallpaper**. Edit the picture and then touch **Save**.

Playing back video files

1. Touch a video file to start playback of the video.
2. Touch the screen to display the playback control.
 - To pause or resume playback, touch  or .
 - To skip backward or forward, touch  or .
 - To change the display ratio, touch  / .
 - Touch the slider to jump to any part of the video; touch and drag  to fast-forward or rewind the video.

Using batch functions to edit files or folders

To perform the same operation to more than one file, for example, deleting files, use the batch function.

1. • To work with folders, enter the first level of Gallery.
 - To work with files within a folder, touch a desired folder.
2. Press the Menu button  twice to open the options menu.
3. Check the desired files or folders .



Note:

- To quickly select or deselect all files or folders, touch **Select All** or **Deselect All**.
4. Share, delete, or rotate the selected files in batches.


Music

In this application, you can play back audio files and customize your personal playlist.

On the Home screen, touch  > **Music** .

Selecting a song

1. **Music** recognizes and displays all the audio files stored on your microSD card and downloaded from the Web into various categories.

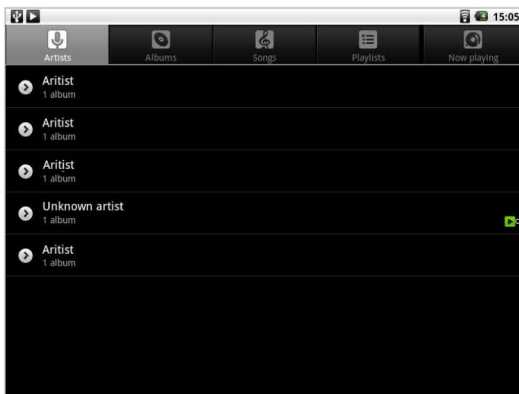




 
indicates the current album or song being played back.





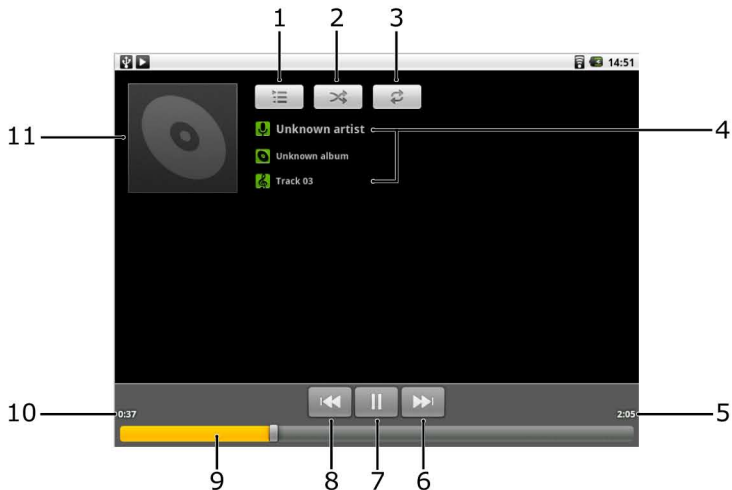

2. Touch the **Artists/Albums/Songs/Playlists** tabs to view the list sorted by artist, album, song, or playlist that you have created (**View "Creating a playlist"**).
3. Flick through the list and touch to select the song you want to play. For example, to select a song by album:
 - Touch the **Albums** tab.
 - Flick through the list, and touch an album to open a list of songs.
 - Touch a desired song.
4. The music playback screen appears and playback of the selected song starts.

Playing a song

Use the music playback screen to control music playback.



1	 : Rearranges the playlist. (View "Editing the Playlist")
2	Turns the Shuffle mode on and off. Touch  to enable playback of the current album in random order.
3	Cycles through the Repeat modes. Touch  repeatedly to repeat playback of all songs in the current album, repeat playback of the current song, or to return to Normal mode (to play back current album once only).

4	Displays the artist, the album name and the track name being played.
5	Total playback time
6	 : skips to the next song.
7	 /  : pauses or resumes playback.
8	<ul style="list-style-type: none"> • If playback starts for more than 2 seconds, touch  to jump to the beginning of the song. • If playback starts within 2 seconds, touch  to skip to the previous song.
9	<ul style="list-style-type: none"> • Touch the slider to jump to any part of the song. • Touch and drag  on the slider to fast-forward or rewind the song.
10	The elapsed time
11	The cover picture of this album

Creating a playlist

1. On the music screen, touch the **Artists/Albums/Songs/Playlists** tabs and flick through the lists to locate a desired song.
2. Touch and hold the song to open an options menu.
3. Touch **Add to playlist > New**. Type the playlist name, and then touch **Save**.
4. To add more songs to this new playlist, repeat step 1 to 2. Touch **Add to playlist** and select the playlist you just named.



Note:

- To add a song to the current playlist, touch **Add to playlist > Current playlist**.



Editing the Playlist






On the music playback screen, touch  to display the **Now playing** list. Touch and drag  to rearrange the songs in the order you want.

Tools


Clock

In this application, you can view the current date and time or weather information, if available, and set an alarm, start a picture slideshow, or play back audio files.



To open the clock, on the Home screen, touch  > **Clock** . On the Clock main screen, you can perform the functions below.

	Opens the Alarms menu where you can set multiple alarms.
	Starts a slideshow of the pictures stored on your microSD card automatically.
	Opens the Music application where you can play back audio files. (View "Music")
	Returns to the Home screen.
	Enters the power saving mode.

Setting an alarm

1. Touch .
2. On the **Alarms** page, touch **Add alarm**.
3. Set the alarm time from the menu that appears, and then touch **Set**.


4. The **Set alarm** menu opens with the settings below.

Turn alarm on	Turns on/off the alarm that you have set on the device.
Time	Sets the alarm time. Adjust the time by touching  or  , or touch the Hour and Minute fields to enter a time. Touch Set when finished.
Repeat	Selects the days you want the alarm to ring.
Ringtone	Sets the alarm ringtone.
Label	Enters a name for the alarm.

5. Touch **Done** when finished.





Note:

- To add more new alarms, on the Clock main screen or the **Alarms** screen, press the Menu button  and then touch **Add alarm**.
- The first active alarm time will be displayed on the top left corner of the Clock main screen.

Turning off an alarm

On the **Alarms** screen, touch the Alarm icon next to the alarm time you want to turn off to clear the green bar.

- : The alarm is turned on.
- : The alarm is turned off.

Deleting an alarm

1. On the **Alarms** page, touch the alarm time you want to delete.
2. On the **Set alarm** page, touch **Delete** > **OK**.

Calendar

In this application, you can schedule and manage your appointments and meetings, which are called "events".

To open the calendar, on the Home screen, touch  >


Calendar  .



Note:

- To use **Calendar**, you will be required to set up an Exchange account on the device first. If you have not set up any Exchange account, refer to "**Adding your email account**" for more information.
- Make sure you have checked **Sync Calendar** from the **General settings** page in the **Email** application.
- If you have set up more than one email account, you can view and synchronize multiple calendars.

Creating an event

1. Press the Menu button , and touch **More** > **New event** to open the **Event details** page.
2. Fill in the fields using the on-screen keyboard as described below. Touch **Done** when finished.

What	Type the event name.
From	If there is a time period for the event, touch to set the date and time, and then touch Set when finished. If the event is a special occasion, such as a birthday, or a festival that spans the whole day, set the From
To	
Where	Type the event location.
Description	Type the description for the event.
Calendar	If you have more than one calendar, you can choose the calendar to which to add the event.

Guests	Send invitations to attendees of the event by entering their email addresses.
Repetition	Decide whether the event is a recurring event or a one-time event.
Reminders	Set the event reminder time.




Note:

- To quickly create an event in day, week, or month view, touch and hold an empty time slot to open the pop-up menu, and then touch **New event**. A new **Event details** page appears with the selected time slot and date in the **From** and **To** fields.

Viewing the calendar

The calendar can be displayed in daily, weekly, monthly, or agenda view.

Press the Menu button  to change the calendar view using the options below: **Day**, **Week**, **Month**, and **Agenda**. Flick the screen to view the previous or next day, week or month. To return to the current month, touch **Today**.




Note:

- While viewing the calendar, you can:
 - In any calendar view, touch an event to view details about the event.
 - Touch and hold an event to open a pop-up menu, and select to view, edit or delete the event, add a new event, or switch to **Day** or **Agenda** view.

Viewing and synchronizing multiple calendars




If you have set up more than one email account on your device, you can view multiple calendars from these accounts. You can configure which calendars to synchronize, and which of those to show or hide in the **Calendar** application.

To set whether calendars are synchronized or visible, follow the steps below.

1. In **Calendar**, press the Menu button  > **More** > **Calendars**.


The **Calendars** page displays all the calendars you have added or subscribed to for each account on your device, organized by account. Touch the name of an account to show or hide its calendars. An icon to the right of each calendar indicates whether its events are synchronized and whether they are visible in **Calendar**.

2. Touch the icon next to a calendar repeatedly to change the settings.

	Calendar events are synchronized to the device and visible in Calendar .
	Calendar events are synchronized to the device but not visible in Calendar .
	Calendar events are not synchronized to the device and the calendar is invisible.

3. Touch **OK**.


Event reminders

If you set a reminder for an event, the upcoming event icon  appears in the notifications area of the status bar when the reminder time arrives.

To view, dismiss, or snooze a reminder, drag down the status bar, and touch the upcoming event name to show the event. Touch **Snooze all** to put off all event reminders for five minutes, or touch **Dismiss all** to turn off all event reminders.



Note:

- If you have other pending event reminders, these events will also appear on the screen.
- To keep the reminders pending in the notifications area of the status bar, press the Return button .

File Browser

In this application, you can quickly locate the files stored in the device's internal memory (**Internal**), or on the microSD card inserted in the device (**External**).

On the Home screen, touch  > **File Browser**  .

Touch **External** or **Internal** to select the file source. Flick through the folder/file list and touch repeatedly to select a desired file for playback.



Note:

- To return to the previous level of the folder/file list, touch **Up**.
- To browse the files stored on the microSD card (**Internal**), insert a microSD card with the desired files for playback first. Refer to "**Inserting a microSD Card (Optional)**" and "**USB Connections**" for more information.



Calculator

In this application, use the on-screen calculator to perform standard arithmetic calculations.

Customizing Your Device

Settings

In this application, you can customize your device by configuring various settings, such as the display or sound effects.

On the Home screen, touch  > **Settings** .

Sound settings

Touch **Sound**.

To turn on the Silent mode

Check **Silent mode** .

To adjust the volume

Touch **Volume** to open the Volume setup window. Touch and drag the scroll bar to adjust the volumes of notification, media (audio and video) playback and alarm sounds. Touch **OK** to confirm.

To enable various sound effects

- To enable sounds upon receiving notifications, touch **Notification ringtone** > **Default ringtone** > **OK**.
- To enable feedback sounds when making a screen selection, or when locking and unlocking the screen, check **Audible selection** or **Screen lock sounds**.

Display settings

Touch **Display** to configure the following settings.

Brightness	Touch and drag the slider to adjust the brightness. Touch OK to confirm.
Auto-rotate screen	Check this function to enable automatic screen orientation.
Animation	Displays animation when open and closes windows

Screen timeout	Sets the time duration before the screen is off.
TV Mode	Sets a desired TV out mode.
TV Resolution	Sets a desired TV resolution.

Restoring your device

To restore your device to factory default settings, touch **Privacy** > **Factory data reset** > **Reset device** > **Erase everything**.



Warning:

This operation will erase all the data stored in your device, including your email account and downloaded applications. Perform necessary backup actions before restoring your device.

Date and time settings

Touch **Date & time**.

To manually set up the date and time

1. Uncheck **Automatic**.
2. Touch **Set date**. Touch / to adjust the date, and then touch **Set**.
3. Touch / to adjust the time, and then touch **Set**.
4. To set the time and date display format:
 - Check or uncheck **Use 24-hour format**.
 - Touch **Select date format** to select a desired option.

Troubleshooting

Problem: The device does not respond to any operations.

- Solution:
- An internal error may have occurred. Use a pointed object, such as a pin, to push against the Reset button to reset your device.
 - The battery is depleted. Charge the device first.

Problem: Your computer does not detect your device when connected.

- Solution:
- Check if the USB cable is connected firmly and correctly onto both the device and your computer.
 - Remove the USB cable, and then reconnect the device onto your computer using the USB cable.

Problem: The screen orientation of the device does not change as I rotate the device.

- Solution:
- The automatic screen orientation function may be disabled. Slide the sensor lock to the right to enable this function.

Specifications



Note:

- Specifications are subject to change without notice.

Items	Descriptions
Display	7 inch SVGA (800*600) TFT
Touch Technology	Capacity Multi-Touch
CPU	Cortex A8 1GHz
2D/3D Graphic Engine	SGX540
Camera	Front Camera 2 MP
Memory	4GB
RAM	512MB
Card Reader	microSD / microSDHC (up to 32GB)
USB Device	USB Device 2.0
HDMI output	HDMI1.3 HDCP v1.1
Earphone jack	3.5mm
Speakers	0.5w * 2
Microphone	Yes
Battery	4400mAh
Adapter	5V 2A USB Power Adapter
Wi-Fi	802.11 b/g/n
<i>Bluetooth</i>	<i>Bluetooth 2.1 + EDR</i>
OS	Android 2.2 Froyo
Dimension	203.2 * 139.5 * 11.7 (mm)
Weight	Approx. 420g

Items	Descriptions
Photo Format	BMP, JPEG, PNG support .bmp, .jpg, .png file formats
Audio Format	MP3, AAC, OGG, AMR-NB/WB, MIDI, WAV support .mp3, .m4a file format
Video Format	H.263, MPEG-4, H.264 support .mp4, .m4v, .3gp file formats