

C❄OLREADERS



❄INTEREAD

User Manual

C❄OLERBOOKS

ebooks for instant download

Registering your COOL-ER	4	Battery management	19
Pack contents	4	Firmware updates	20
COOL-ER control placement	6	Preparation	20
Using the controls.....	7	SD Firmware update	20
A. Power switch	7	E reading menu	21
B. Memory card slot	7	Bookmark.....	21
C. Multi-media button.....	7	Back	22
D. Portrait/Landscape button	7	Go to page.....	22
E. Library button.....	7	Start reading.....	23
F. Library setting menu button	7	Table of contents	23
G. Control wheel	7	Properties	23
H. Volume control	7	About.....	23
I. LED	7	Library	23
J. USB port	7	Font options.....	24
K. Headphone socket.....	7	COOL-ER font size indicator	25
L. Battery cover	7	Status options	26
M. Restart button	7	Status bar	26
Getting started.....	8	Remaining battery charge	26
For ease of navigating	9	Title of ebook and visual position	26
Free Ebooks.....	10	Current page number.....	26
Downloading files	11	Font details	26
Page format	12	Rotate screen	27
Reading books.....	12	Left alignment.....	27
Selecting a book	12	Multi-media menu	28
Starting to read.....	13	Music	28
Selecting the start page	13	Sudoku	28
By page number.....	13	Using CoolerBOOKS.....	29
By chapter	13	ADE - Adobe Digital Editions.....	31
By bookmark.....	13	ADE Installation.....	31
Listening to music.....	14	Authorizing your COOL-ER with ADE	31
Selecting a track.....	14	Frequently Asked Questions	32
Switching off	15	I need to know about compatibility.....	32
COOL-ER menu options	16	I'm not so sure.....	32
Library menus	16	Tell me how to use my COOL-ER.....	33
Sort	16	Tell me about formats.....	35
View	17	Why should I choose COOL-ER?.....	36
Language	18	Help me with CoolerBOOKS.....	38
Menu Language.....	18	Troubleshooting	40
Reading Language	18	Glossary.....	41
Auto power off.....	19	CE Mark Warning.....	43
About	19	COOL-ER Safety Instructions.....	43
		Notice	45



COOL-ER™

A contemporary ereader designed for users who value straightforward functionality with an eye-catching finish.

Your COOL-ER is a light and stylish electronic book reader with over 750,000 titles available to download from the CoolerBOOKS website.

With a display capable of mimicking paper thanks to E-Ink[®] from Vizplex, each COOL-ER replicates the experience of reading a paper book.

No screen glare, a long battery life and storage for a whole library makes COOL-ER suitable for casual reading and as a companion when traveling too.

Using power only for "button clicks" means that a single charge can last for 8000 pages and charging is easily completed by attaching your COOL-ER to your computer. The electronic display also allows you to change the text size to suit you!





Your COOL-ER will also play audio files - MP3 tracks or audio books - that you can download and listen to through headphones.

COOL-ER is a step forward for ereaders: Congratulations on your choice!

For help with your COOL-ER please contact support@coolreaders.com

For assistance using CoolerBOOKS please email support@coolerbooks.com

Pack Contents

-  COOL-ER (in your chosen colour)
-  USB cable for charging and connecting your COOL-ER to your computer
-  Headphone socket adapter from 2.5mm to 3.5mm
-  Quick start guide



Registering your COOL-ER

In order to activate your warranty and to have access to the full range of services available you should register your COOL-ER.

Go to the CoolReaders website and select **Register**


Complete the registration details as requested. The serial number, which is printed under the battery cover, is also shown on your COOL-ER packaging. It is the bottom-most number on the label and looks like this:

RCC6VIOLET0906000078

Note: the color referenced in the number will vary according to the color of your COOL-ER.



COOL-ER control placement

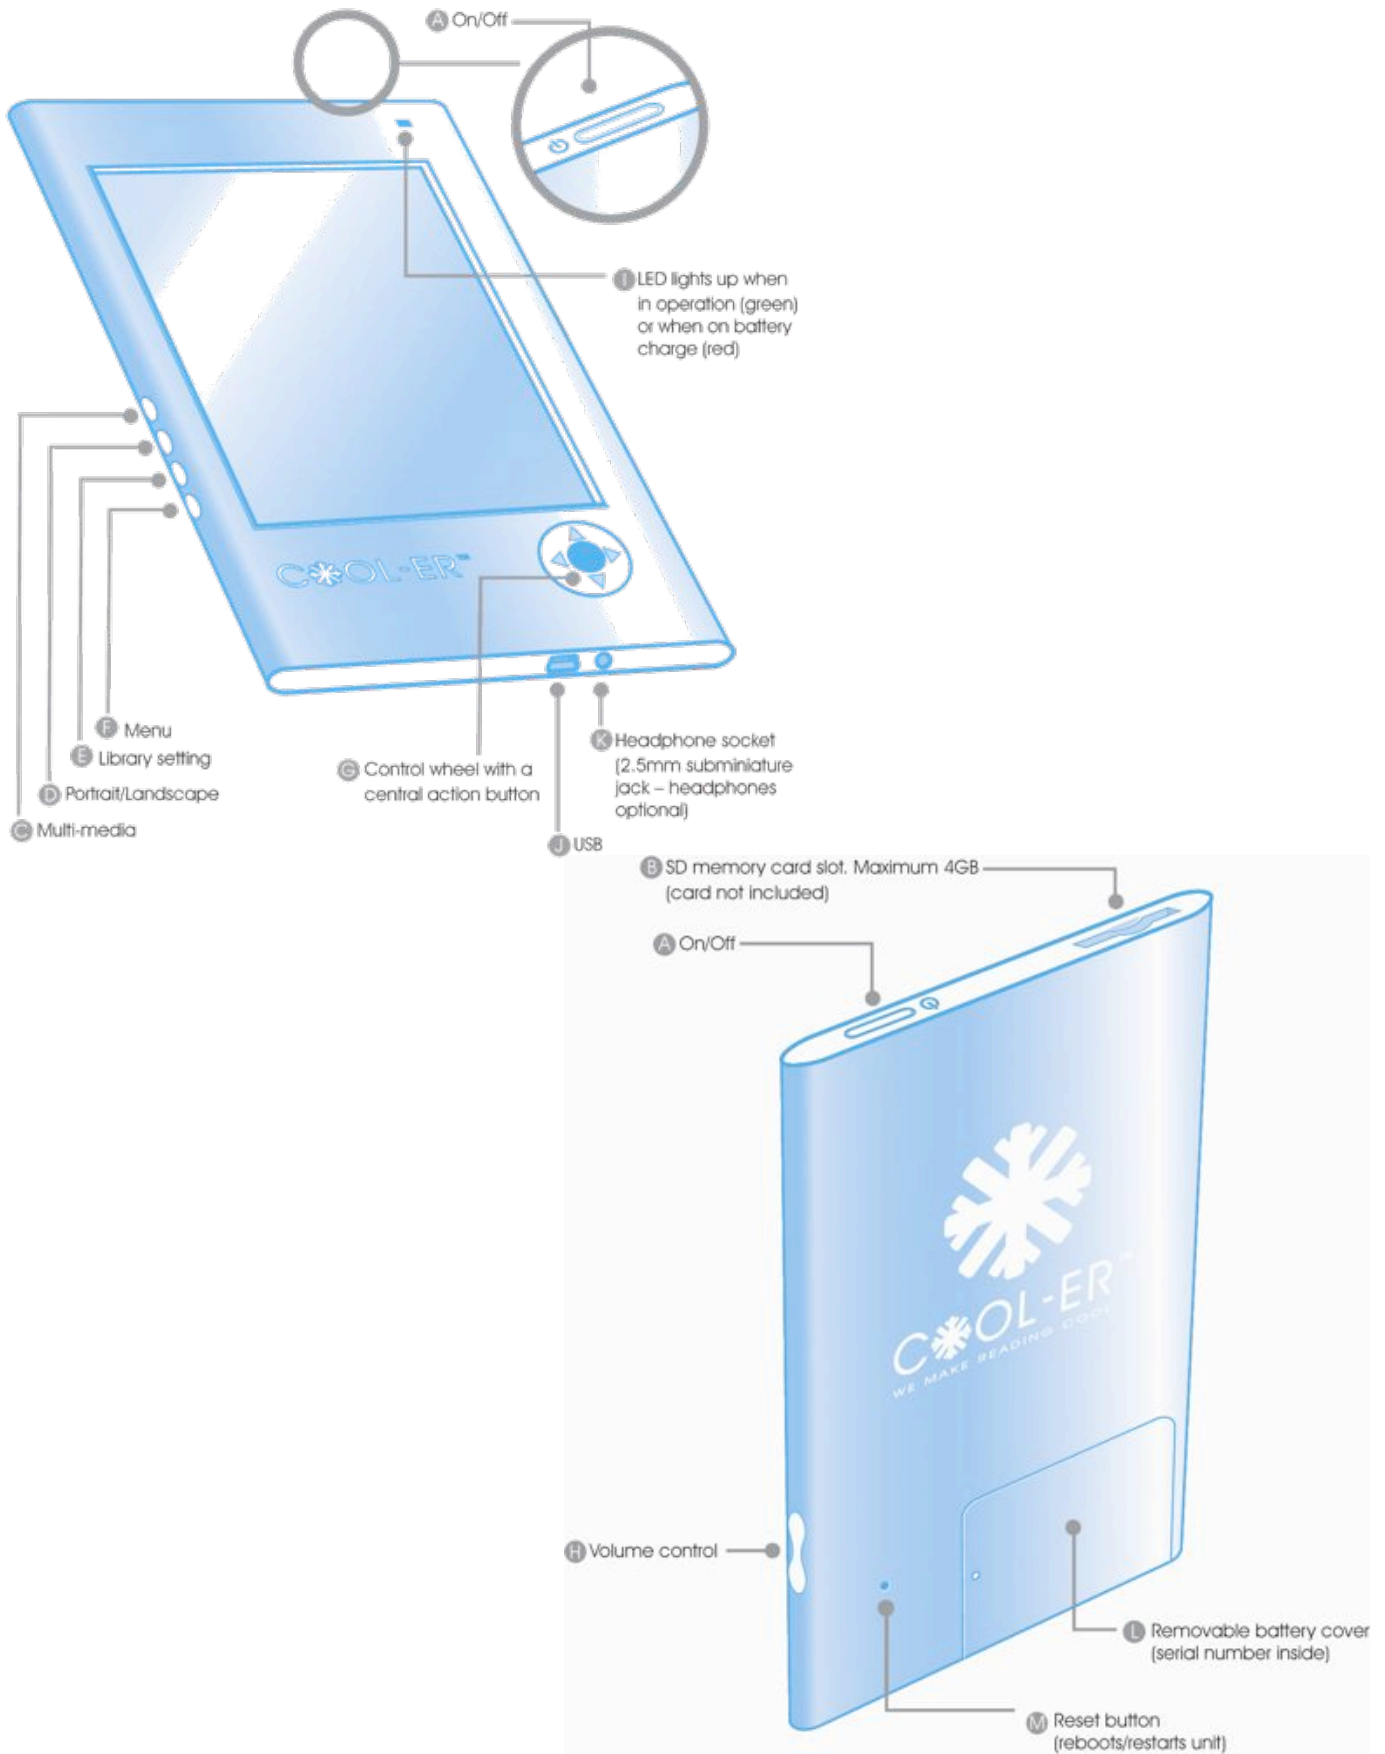

A. Power switch

This switch is used to switch your COOL-ER on and off. This is disabled when your COOL-ER is connected to your computer via the USB cable.

B. Memory card slot

You can load an SD memory card here, to hold additional edocuments and audio files.

C. Multi-media button

This button gives access to your COOL-ER's audio player and puzzles. You can download MP3 tracks or audio books onto your COOL-ER or memory card and listen to them by attaching headphones through the headphone socket (K).

D. Portrait/Landscape button

Use this button to change the orientation of the file you are looking at. This can be useful if you are reading a technical manual and looking at a diagram. It will not work when a menu is displayed.

E. Library button

This button will return you to the library menu screen where you can see your folders and files.

F. Menu button

Change your COOL-ER settings by accessing menus with this button.

G. Control wheel

Enables you to select options from a menu, turn pages of your ebook and return to previous screens. Pressing the central button takes you to the relevant menu for the screen you are on.

H. Volume control

Can be used to change the volume (-) and (+).

I. LED

Glows red when COOL-ER is charging and green when it's available as a reader. The LED flashes green while your COOL-ER is processing. Please wait for it to stop flashing before pressing any buttons.

J. USB port

Connection port for your USB cable. The other end of the cable connects to a USB port on your computer.

K. Headphone socket

Attach headphones here and listen to music or talking books.

L. Battery cover

There should be no need to replace the battery, which will recharge whenever your COOL-ER is attached to a computer. A copy of each COOL-ER's serial number is behind the battery.

M. Restart button

Pressing this button will master reset your COOL-ER. You should not normally need to use this control.

Getting Started

Before you start to use your COOL-ER it is recommended that you charge the battery by connecting it to your computer using the USB cable provided for at least 3 hours.

Whenever your COOL-ER is connected to your computer the LED light will glow red to indicate your COOL-ER is charging. While it's charging you will be unable to use it to read your edocuments.

When the battery is completely charged the full battery icon will show in the bottom left hand corner of the screen. You can now unplug your USB cable and start to read edocuments on your COOL-ER.

Switch on your COOL-ER by holding the power switch down for 2 seconds. The LED light will glow green and a grey-scale screen will be displayed for 10 seconds, then the thought-bubble icon will show at the bottom of the screen while your COOL-ER loads its software.

The library screen will appear as shown on the right with the folders that are initially held on your COOL-ER.



📖 Digital Editions

Shows Digitally Rights Managed (DRM) files that have been uploaded.

📖 Free Ebooks

A folder containing preloaded ebooks that are provided free of charge to start you off.

📖 My Audio

To hold your audio files.

📖 My Docs





To hold any personal edocuments. These must be in one of the supported formats: PDF, EPUB, FB2, RTF, TXT, HTML, PRC, JPG, BMP, GIF or MP3



For ease of navigating...

You might prefer to change the display to 'List' view.

To do this;

-  Press the menu key (F) and the library setting menu will be shown.
-  Select 'View' by using the navigation arrows and press the central button to bring up the 'View' menu.
-  Use the up and down arrows to move the black square until it is beside 'List'.
-  Press the central button to select your option.

The display will return to the library screen in List view.

You can now read the ebooks already loaded onto your COOL-ER.

Free Ebooks

To get you started, we have pre-loaded your COOL-ER with some classic literature.

To find the free ebooks, turn your COOL-ER on and scroll through the 4 folders displayed in the Library to 'Free Ebooks'. Click the central button of the control wheel to select this folder.

The folder will open to reveal a small library for you to enjoy. You can start reading by scrolling to any book and clicking the central button of the control wheel.




As you book opens, you'll notice that all the Publisher and copyright information is contained in the first few pages just like a paper book. You can click through this information using the right control wheel arrow.



Downloading files

Your COOL-ER can read files that are in a supported format either directly from its own memory or from a memory card.

To load files into your COOL-ER's memory;

-  Connect your COOL-ER to your computer using your USB cable supplied.
-  The file structure on your COOL-ER will show in a new window called COOLER on your computer.
-  Move any files as required into the folders on the COOLER window.

You can purchase books to read on your COOL-ER from our CoolerBOOKS website.

If you wish to set up new folders on your COOL-ER then create a new folder in the COOLER window on your computer by selecting File->New -> Folder and typing the name of your new folder in the box where it says 'New Folder'.

For more details on this please go to the Frequently Asked Questions section.

COOL-ER supports a wide range of formats:

- ✓ .bmp
- ✓ .epub
- ✓ .fb2
- ✓ .gif
- ✓ .html
- ✓ .jpg
- ✓ .mp3
- ✓ .pdf
- ✓ .prc
- ✓ .rtf
- ✓ .txt

Selecting a book

From your COOL-ER library screen, highlight the folder your book is held in by pressing the up and down arrows on the control wheel then open the folder by pressing the central button.

This will show a list of books within the folder.

Books shown can be sorted by various criteria.

Page format

Orientation

Pages can be seen in landscape or portrait mode. It is easy to change from one to the other by pressing the Portrait/Landscape button (D).

Alternatively, when the book is open, press the menu key (F) and the ereading menu will be shown.

Use the arrows to select 'Status Options' -> 'Rotate screen'.


Font size

Font details are shown in the icon at the bottom right of the screen. The number identifies the selected font size.

To change the font, when the book is open, press the menu key (F) or the central button and the ereading menu will be shown.

Use the arrows to select 'Font Options'

From the 'Font Options' menu, scroll through the font and type size options and select using the central control wheel button.

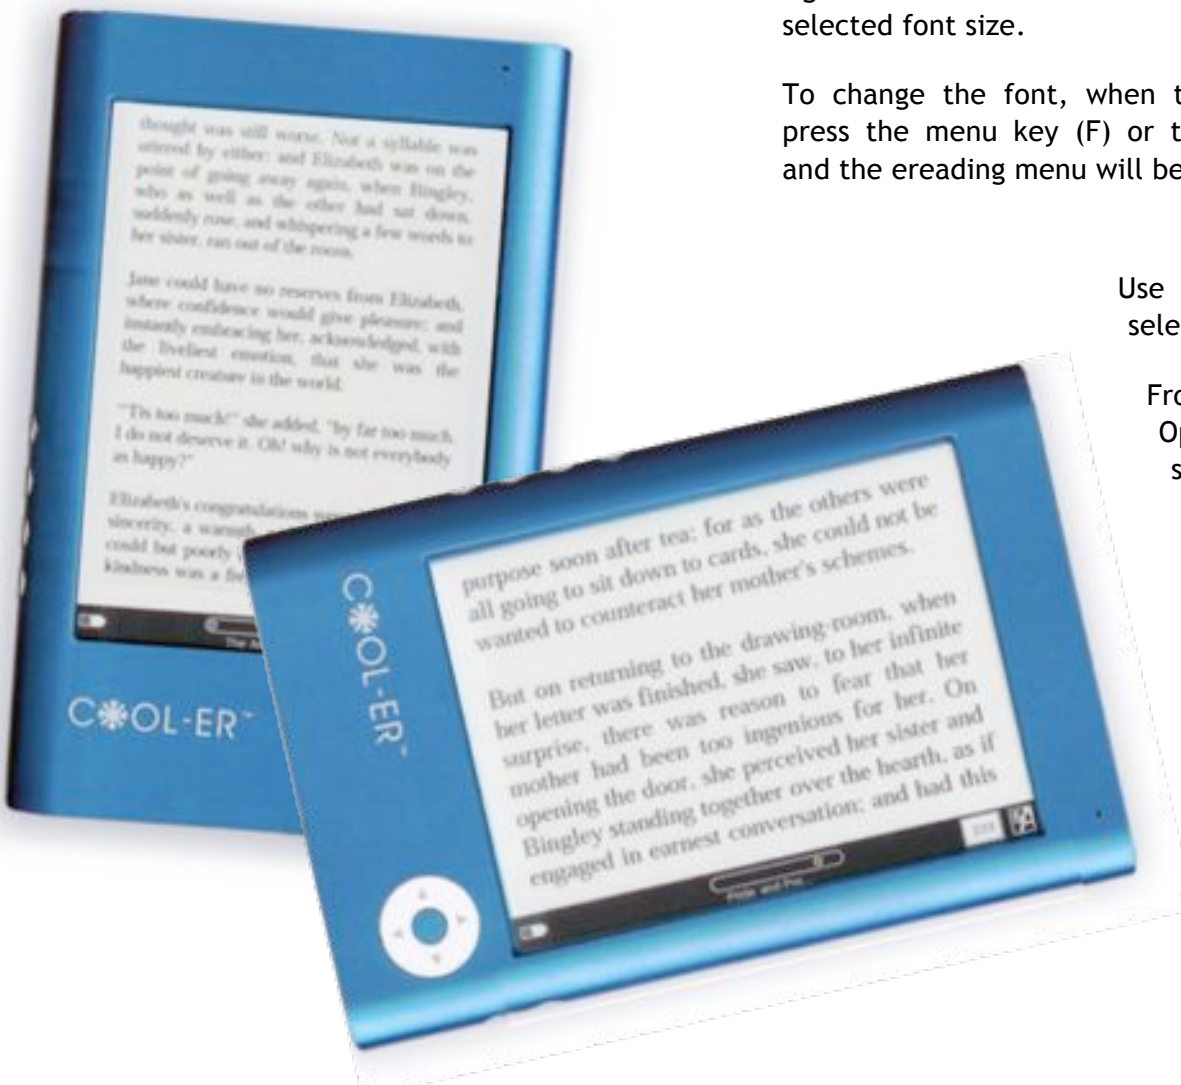




Selecting the start page

By default your ebook will open at the last page you had open. You can select a different page to start from as follows:

By page number


After opening the book file, bring up the ereading menu by pressing the menu button (F) or the central scroll wheel button.

Use the arrows to select 'Go to page'

-  To start reading from the beginning select 'First Page'
-  To go to the end of the book select 'Last Page'
-  To specify the page to start at, select 'Page'
 - 'Go to page' menu will be displayed.
 - Select the page number by highlighting the digits of the number
 - For example, to select page 260, use the arrows to move the pointer under the '2' and press the control wheel centre button. The number 2 will show in the bottom line of the menu after PAGE.
 - Move the pointer to under the '6' and press the centre button. The number 26 will show on the bottom line of the menu.
 - Move the pointer to under the '0' and press the centre button. The number 260 will show on the bottom line of the display.
 - Move the pointer to under the 'OK' and press the centre button. Your COOL-ER will display page 260 of the ebook.

By chapter

After opening the book file, bring up the ereading menu by pressing the menu button (F).

 Use the arrows to select 'Table of Contents'

- The 'Table of Contents' menu will be displayed.
- Click on the book title - a list of chapters will be shown, 10 chapters per page.
- Navigate to the required chapter. To move quickly to the next/previous page use the right/left arrows. To move up and down the page use the up/down arrows.
- Click on the required chapter number and your COOL-ER will display the start of the required chapter.

By bookmark

After opening the book file, bring up the ereading menu by pressing the menu button (F).

 Use the arrows to select 'Bookmark'

- The 'Bookmark' menu will be displayed.
- If a bookmark has been set, select 'Bookmark List' from the menu.
- A list of available bookmarks will be shown.
- Select the required bookmark. Your COOL-ER will open the ebook at the required bookmarked page.

Selecting a track

From the library screen, highlight the folder your music is held in by pressing the up and down arrows on the control wheel then open the folder by pressing the central button.

This will show a list of music tracks within the folder.


Tracks shown can be sorted by various criteria.

Highlight the music you wish to listen to using the selection arrows. Left and right arrows will move backwards and forwards one page at a time; up and down arrows move the highlight up and down the page. Pressing the central button when the title is highlighted will start to play the highlighted track.

When audio is in use, the volume setting is shown in the status bar at the bottom of the screen. Volume can be changed using the volume (+) and (-) button on the right side of your COOL-ER.

You can add music or audio books to your COOL-ER in the same way as text files.

1. Connect your COOL-ER to a computer via the USB cable.
2. Open the folder containing your COOL-ER's documents from 'My Computer'.
3. Add your new MP3s by dragging and dropping or copying and pasting. The time taken to transfer is dependent on the computer and file size. Larger files will take longer to transfer.

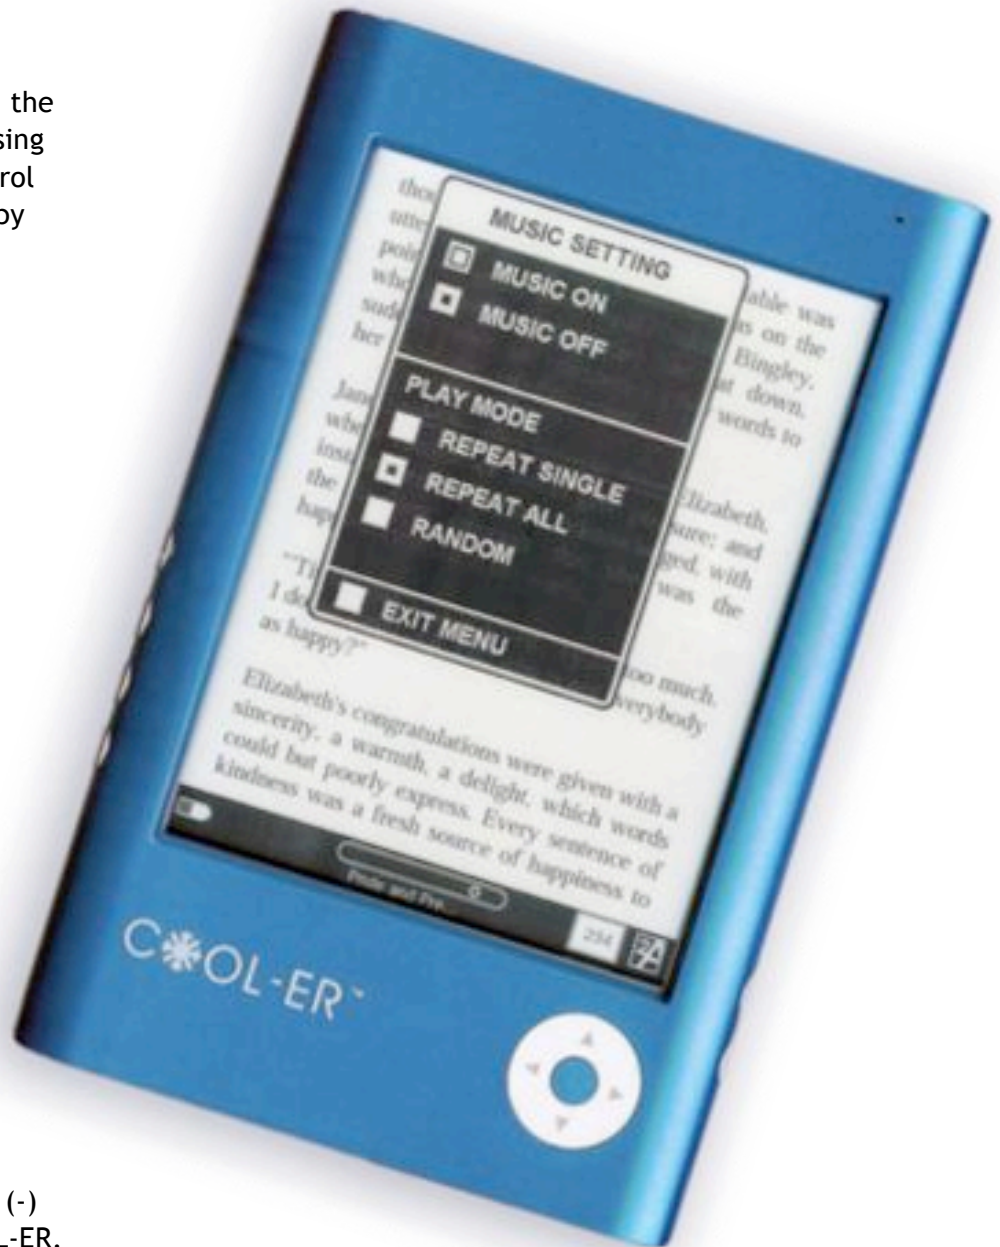

Switching off

Your COOL-ER will automatically power off after 10 minutes of no activity. You can change this to 15 or 20 minutes or disable the automatic power off if you wish to keep the current page open for longer by using the Library Setting menu.

From the Library screen, bring up the menu by pressing the menu button (F).

The 'Library Setting' menu will be displayed.

Select 'Auto power off'

From the 'Auto power off' menu select disable or the length of time you require from the options available.

Please note: leaving your COOL-ER powered on will not drain the battery quickly unless you leave an audio file playing.

You may find it useful to disable the auto power off function if you use your COOL-ER frequently and wish to keep your current page on display. To avoid running the battery down please charge for at least an hour every few days.



Library menus

The Library setting menu, which is accessible from the Library page (button F), has options as shown.



Sort

The Sort menu has options to sort the files in your COOL-ER in either ascending or descending order by the following criteria

- By date
- By filename
Both books and folders are shown in filename order if this option is selected. Upper case is considered to be secondary to lower case.
- By category
- By file size
Sorts by file size.

This is particularly useful if some of your books have 2 files with the same name for example one of 4KB which is sometimes produced automatically by the download process and a second file which contains the book and is normally considerably larger. Such small files can be ignored or deleted.



View

The View menu specifies the format in which the details of your ebooks are displayed. The following options are available.

List

Shows the files in a list with a highlight column on the left hand side that makes it easy to select a specific file.

Book cover options

If this option is selected it supersedes the List option, and the left hand selection column is not displayed.

○ Details

Shows each book's details:

- Title
- Title + Author
- File size
- Date

○ Title & Author

This is a display in 2 columns per page. Only the first 12 characters of the title and the author are shown to enable you to identify a book by

- Title
- Author
- File size

○ Title

Shows 15 books per page with the first 9 characters of the title and a thumbnail of the book's cover if this is available.



Language

Menu Language

The Language menu allows you to choose a language for your COOL-ER menus. Please select the menu button or click the central control wheel button whilst in the library view and scroll down to Language.

If you find you have accidentally selected a language you can return to English by selecting the 3rd option down on the 'Library Setting' menu and then selecting the top option.



Available menu languages are English, German, French, Spanish, Russian, Traditional Chinese, Simplified Chinese and Portuguese

Reading Language

You can use your COOL-ER to display most languages even if they are not menu options. Depending on the format, COOL-ER is able to support Cyrillic, Latin and Kanji based languages.

As pdfs display text as images, we recommend this format for languages that incorporate accents or non-Latin characters.

The books you load will display in their original language. COOL-ER does not offer a translate facility.

Auto power off

The auto power off menu allows you to select the length of time your COOL-ER will remain on with no button clicks before automatically switching off. Available options are 10, 15 or 20 minutes. This menu also gives you the option of disabling auto power off so that your COOL-ER will never switch off automatically.

Please note that, because only button clicks use power, leaving your COOL-ER switched on when not in use uses only a minute amount of power. As your COOL-ER requires almost no power to display a page, you may wish to keep your COOL-ER on indefinitely. The advantage of this is that your current page of text remains instantly available. Additionally, the design of the buttons means that they require a tiny but perceptible click so that your page will be safe in your handbag or briefcase.

About

This shows you the version of software currently loaded on your COOL-ER.

Battery management

Your COOL-ER is delivered with some charge on the battery but before you start to use your COOL-ER it is recommended that you charge the battery by connecting it to your computer using the USB cable provided for at least 3 hours.

During normal use, if the audio function is not being used, the battery charge will last for 8000 button clicks and the battery will not lose its charge if the COOL-ER is left switched on.

If you are using your COOL-ER to listen to an audio file a fully charged battery will last for about 3½ hours before needing to be recharged.

If you are listening to music while reading a book and the battery icon is indicating that there is very little charge remaining, selecting the Music Off option from the multi-media menu will ensure that you can continue to read because battery use is very low when the audio function is not in use.

To charge your COOL-ER connect it to your computer using the USB cable provided. Your COOL-ER will charge automatically whenever it is connected to your computer.

A completely discharged battery will take about 5 hours to charge fully but you will be able to use your COOL-ER after as little as half an hour if you are not intending to listen to audio files (either music or talking books).

Firmware updates

Occasionally we will offer you the option to upgrade your COOL-ER software if you wish. This is called a firmware upgrade.

Preparation

Download COOL-ER firmware upgrade from the CoolReaders site

Load unzipped firmware files onto an empty SD Card.

SD Firmware update

1. Connect your COOL-ER to a computer via your USB cable for uninterrupted power during upgrade.
2. Insert firmware loaded SD card into slot on top edge of device. The SD card should be inserted with the cut-off corner at the bottom and the writing on the front. Ensure you press the card home until it is flush with the edge of your COOL-ER.
3. Press and hold the control wheel central button and Library button (E) simultaneously. *Do not release the buttons until after step 5.*
4. Press reset, whilst still holding the control wheel central button and Library button.
5. Wait for LED on front face to flash, then release the control wheel central button and Library button.
6. Upgrade screen will appear after several seconds.
7. 'Upgrade file system' text will show Chinese character text and then progress to 'upgrade OK' in English when upgrade is complete. (Time taken is dependent on upgrade).
8. Finally, remove memory card (to release it press it in), press 'reset' and disconnect from computer to use COOL-ER.

If you encounter any issues, repeat instructions from point 1.


For Adobe Digital Editions (ADE) users only

(Please go straight to Preparation if you do not use ADE. If you don't know if you use ADE then you probably don't.)

To retain your Digital Rights Managed (DRM) documents during the upgrade:

- a) Open ADE on your computer
- b) Connect your COOL-ER to computer via USB cable.
- c) Control/Shift/D to deactivate ADE during upgrade.


To re-activate ADE following upgrade, connect COOL-ER via USB and re-open ADE.

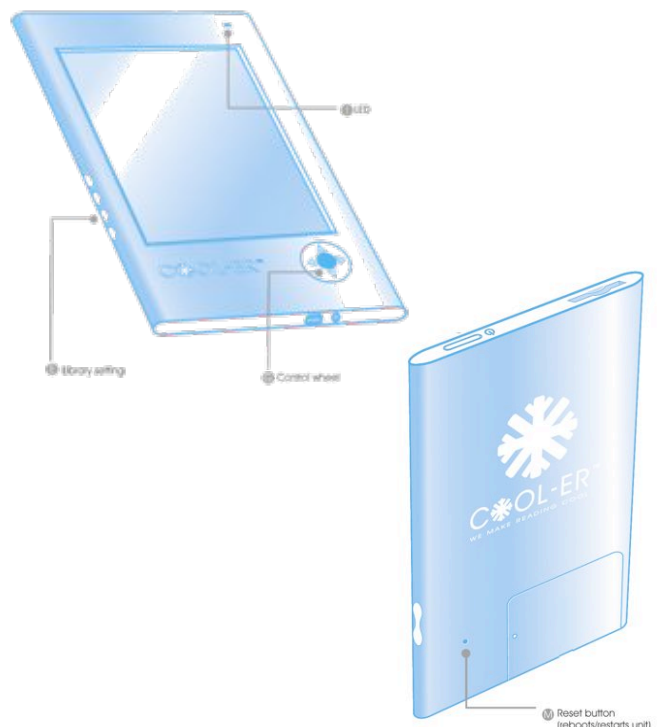

To access this menu please open a book and press the central control wheel button or button F.

This menu enables you to change the appearance of the page to suit your preferences, to set up and move bookmarks and to navigate through your ebook.

Options can be seen on the right.

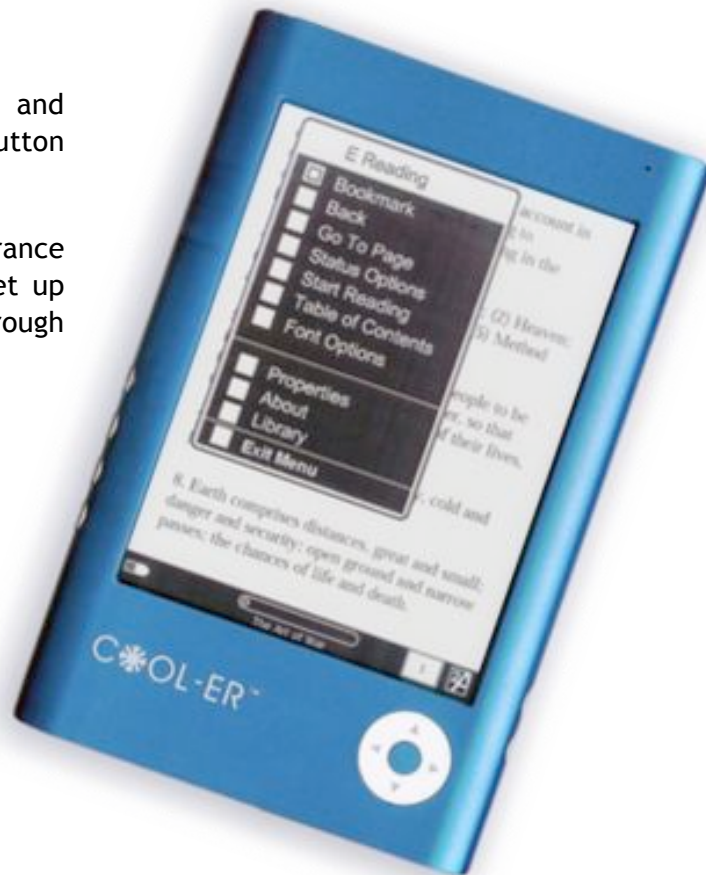

Bookmark

The Bookmark menu enables you to manage your bookmarks with the following options.

Add bookmark

Selecting this option sets a bookmark on the page currently open. The bookmarked page is indicated by the top left hand corner being turned down.

Remove bookmark

This option shows all the bookmarks that are set in the current book. Navigate to the selected bookmark with the arrow keys and click to delete it.

Remove all

This option removes all the bookmarks that are set in the ebook that is open.

Bookmark list

This option shows all the bookmarks that are set in the current book. Navigate to the selected bookmark with the arrow keys and click to go to that page in the ebook

Back

The back button returns you to your edocument.

Go To Page

The Go To Page menu enables you to navigate to any selected page within the ebook. While your COOL-ER is finding the selected page the green light in the top right hand corner will flash.

First Page

To start reading from the beginning select 'First Page'

Last Page

To go to the end of the book select 'Last Page'

Page

To specify the page to start at, select 'Page'

'Go to page' submenu will be displayed.

Select the page number by highlighting the digits of the number

For example, to select page 260, use the arrows to move the pointer under the '2' and press the centre button. The number 2 will show in the bottom line of the menu after PAGE.

Move the pointer to under the '6' and press the centre button. The number 26 will show on the bottom line of the menu.

Move the pointer to under the '0' and press the centre button. The number 260 will show on the bottom line of the display.

Move the pointer to under the 'OK' and press the centre button. Your COOL-ER will display page 260 of the ebook.



Start Reading

This option will return you to the last selected page of your ebook.

Table of contents

If the ebook has a Table of Contents, the 'Table of Contents' menu enables you to select the chapter to navigate to. As with a paper book, some ebooks have no Table of Contents and in this case your COOL-ER will return you to the ebook.

Click on the book title - a list of chapters will be shown, 10 chapters per page.

Navigate to the required chapter. To move quickly to the next/previous page use the right/left arrows. To move up and down the page use the up/down arrows.

Click on the required chapter number and your COOL-ER will display the start of the required chapter.

Properties

When properties is selected from the menu, details of the current ebook are shown. Not all ebooks hold properties so some of the details may be blank for some edocuments.

About

This option shows the version of software currently loaded on your COOL-ER.

Non-compulsory updates will be made available from time to time and can be loaded onto your COOL-ER by following Firmware Update instructions.

Library

This option returns you to the Library List.




An ebook is an electronic representation of a real book. If your COOL-ER is displaying a blank page it is likely that you are looking at a blank part of the original book. Moving forward through the ebook will bring you to a page that is not blank

Font Size

8 sizes of font are available for you to select. Please choose a size to suit you.

Edocuments produced by different publishers may display differently and you may need to change your settings to display some files at your favorite size.

Please note that not all books are formatted to wrap lines correctly in all sizes of font.

-  If your ebook appears to be missing the ends of lines, please select a smaller font.
-  If your ebook appears to be displaying lines on top of other lines, please select a smaller font.
-  If you are unable to resolve these difficulties by changing the font size it may be necessary to load a different version of the book onto your COOL-ER.

COOL-ER font size indicator:

(For illustrative purposes only)

Font Size 1:

The quick brown fox
jumps over the lazy dog

Font Size 2:

The quick brown fox
jumps over the lazy dog

Font Size 3:

The quick brown fox
jumps over the lazy dog

Font Size 4:

The quick brown fox
jumps over the lazy dog

Font Size 5:

The quick brown fox
jumps over the lazy dog

Font Size 6:

The quick brown fox
jumps over the lazy dog

Font Size 7:

The quick brown fox
jumps over the lazy dog

Font Size 8:

The quick brown fox
jumps over the lazy dog
jumps over the lazy dog
The quick brown fox


Font Size 9:

Status Options

The Status Options menu enables you to change the presentation of the ebook you are reading.

Status Bar

The status bar is shown at the bottom of every page of the ebook giving status information as follows from left to right:

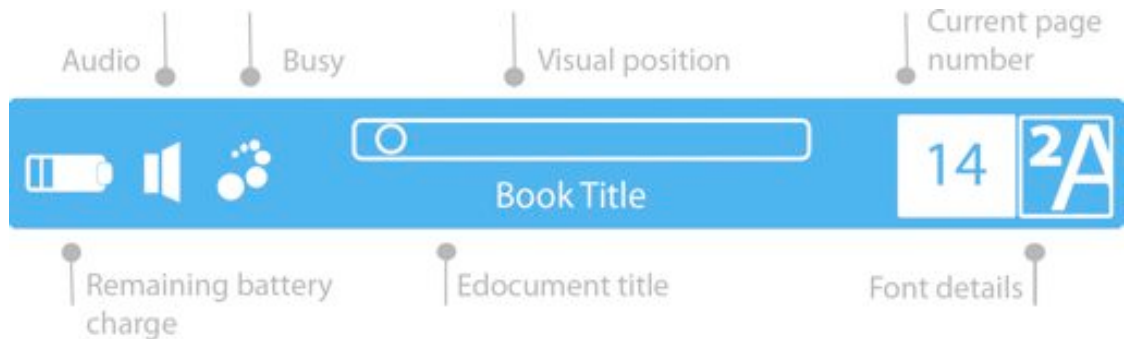

Remaining battery charge

Shows the amount of charge in the battery. A fully charged battery will show filled with vertical black stripes. As the battery becomes discharged the number of stripes will reduce. Connecting your COOL-ER to a computer will recharge the battery.

Audio Indicator

Icon appears when music or audio files are turned on

Busy

This thought bubble icon appears when the COOL-ER is processing. Please do not press any buttons while this icon is present.

Title of ebook and visual position

The title of the book is shown centrally at the bottom of the screen and above the title is a graphic indicating your position within the book. The circle is initially at the left of the graphic. As you turn pages in the book the circle will move to the right until, on the final page of the book the circle will be at the right end of the graphic.

Current page number

This shows the current page number.

Please note. One ebook page is not always equal to one page within the document dependent on the selected font size. You may notice that the page number does not move up at a rate of one page per click when you have larger font sizes selected.

Font details

This icon indicates the current font size.

If you do not wish to see the status bar it can be hidden by selecting Status Bar from the Status Options menu

Rotate Screen

When this option is selected the screen is rotated anticlockwise through 90°. If this option is selected a second time the screen will be rotated back to its original position.

This can also be achieved by pressing the portrait/landscape button (D) on the side of your COOL-ER.



Left Alignment

This option allows you to align the pages to the left. It is not available with all ebooks, depending on the layout of the original book.

Music

Music on

This option switches audio files on.

You can listen to music while you are reading a book. As long as Music On is selected the music will continue to play while you select and read ebooks or solve a Sudoku puzzle.

Music off

This option switches audio files off. If you will be leaving your COOL-ER unused for a time it is a good idea to switch music off so as not to drain the battery

Play mode

Repeat single
This option will repeat a single selected track

Repeat all

This option will play all tracks in the folder and then return to the start.

Random
This option selects tracks to play at random.

Sudoku

Sudoku Rules

Complete the grid with the digits 1 to 9. Each digit can appear only once in each row, each column and each 3 X 3 square.

The 'New Game' menu gives you various options about the game.

Select the level of difficulty you require: **Easy**, **Normal** or **Hard**


A new Sudoku grid will be displayed.

To enter a number, use the arrow keys to highlight the selected square and press the central Button. The number popup will appear.

You can choose to enter a single number with "PEN" or a few potential numbers with "PENCIL". The "ERASE" function will clear the selected square.

Use the number grid to select your number and press the central Button. The number will then be entered into the grid.

To exit Sudoku and return to your Library open the New Game popup menu by pressing the Menu button (F) on your COOL-ER and selecting 'Exit Menu'.

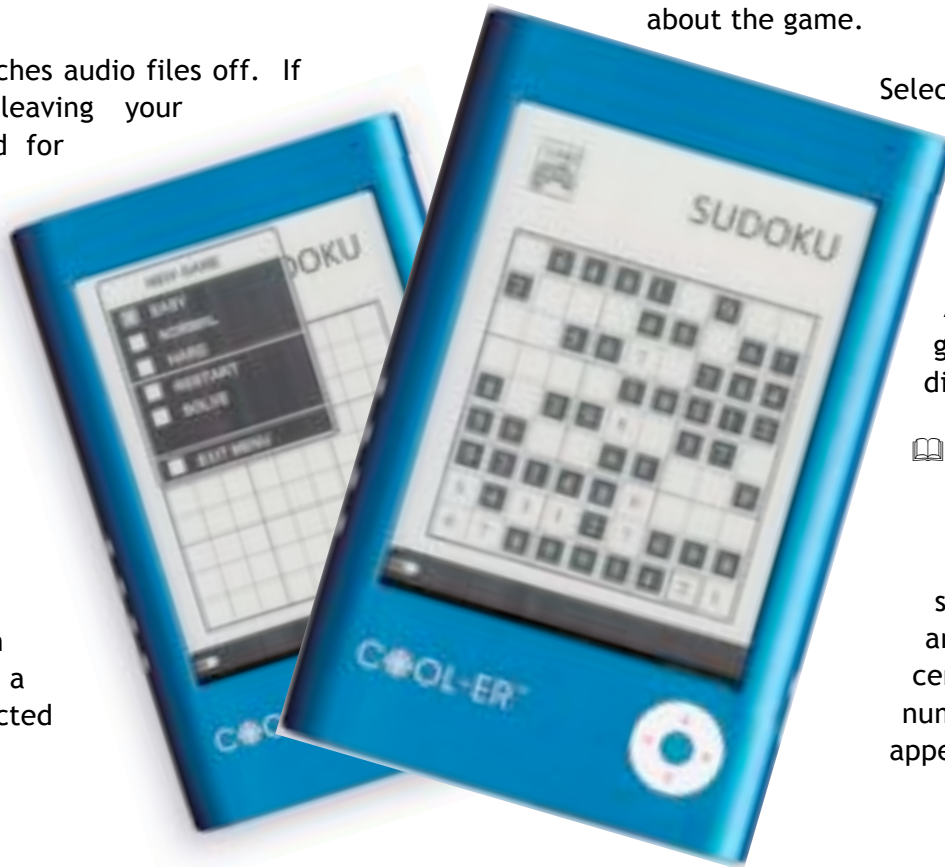

Using CoolerBOOKS

From the CoolerBOOKS website, select a book you wish to purchase and click on View Details. A preview of the book will be shown.

Click on 'Add to Basket'.

If you wish to buy another book click on 'Continue shopping'.

You can buy several books at once by repeating the previous 2 steps until you have finished selecting books to buy.

Once you have selected all the books you want to buy, click on 'Checkout now'.

The checkout screen will appear.

If you are not already signed in to CoolerBOOKS you can either sign in now or register as a new user.

If you are signed in your details will be shown.


If you have a promotional code to enter, click 'Continue'.

If you have no promotional code, click 'Buy Now'.

You will be sent to the payment type selection screen where you must select the type of card you wish to use to pay for your purchases.

Please complete your card details and select 'Make Payment'.

Note: some credit card companies may add charges for international orders, please check with your bank directly.

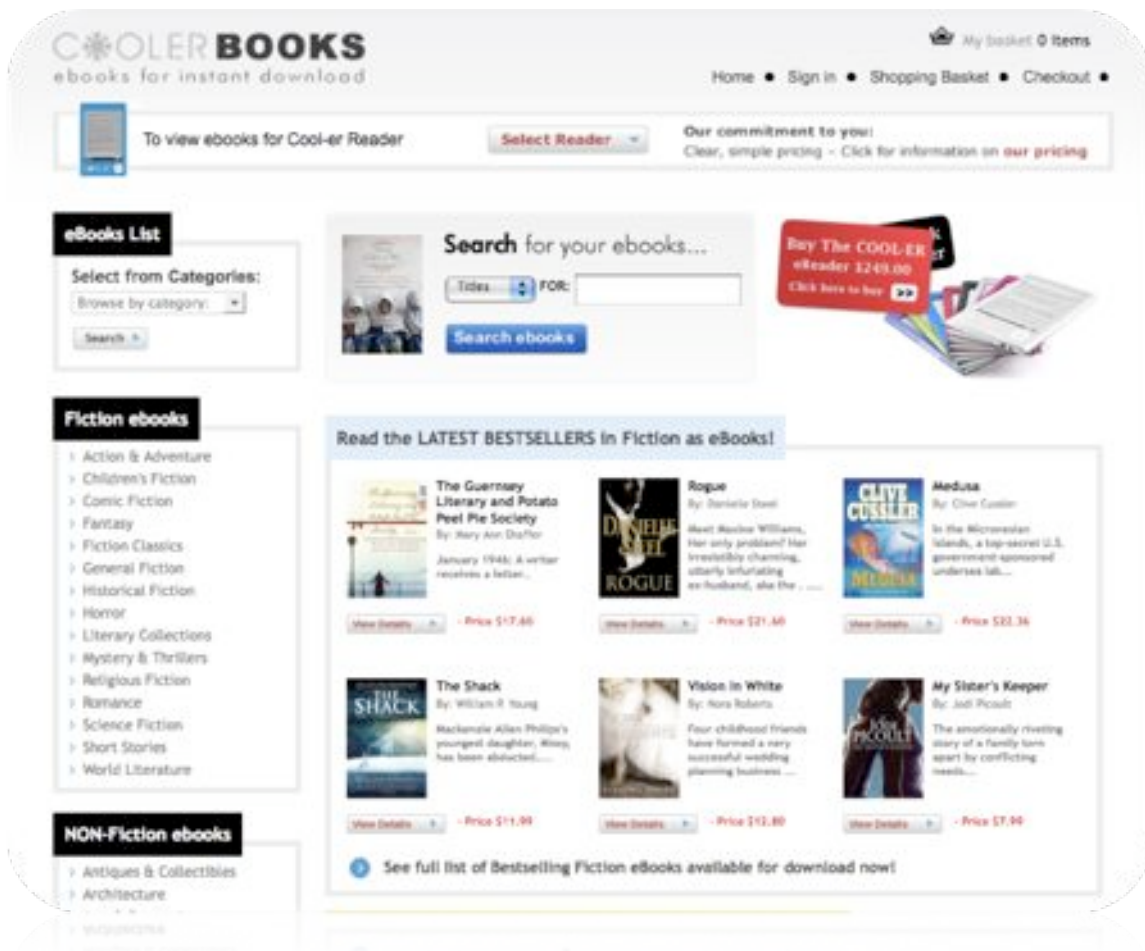

For help contact
support@
coolerbooks.com

When payment is complete you will be returned to your CoolerBOOKS account screen, showing your details and the books you have purchased under My Ebook Orders.

These details include an ACSM (Adobe Content Server Message) file for your book. To complete the download of your book and load it onto your COOL-ER as an ebook, you must use the ACSM file for this book to activate the download of the DRM file from CoolerBOOKS.

Click on the Download number.

Each book you have ordered will show with the order number in the Download window.

Double click on the book's title and this ACSM file will automatically initiate the download of the DRM file using Adobe Digital Editions (ADE).

The ADE window will be seen on your computer and you can drag the book to your COOL-ER, which will be shown as a bookshelf on the ADE screen once you have authorized it.

If you disconnect the USB cable from your COOL-ER you will be able to read your newly downloaded ebook.

COOLERBOOKS

My eBook Orders

Order ID	Title	Price	Download	Date
2061	As You Like It	£0.98	1412132568	27/07/2009 09:34:33
1972	Around the World in Eighty Days	£1.47	5551065642	22/07/2009 09:29:46
1914	The Assignment	£0.98	5551065189	21/07/2009 09:21:35
1884	The Princess and the Goblin	£1.47	5551063631	20/07/2009 09:15:23
1780	Far from the Madding Crowd	£1.47	555106395X	17/07/2009 09:17:04
1749	Short Stories of the Tragedy and Comedy of Life	£1.47	5551064379	16/07/2009 09:19:56
1725	Trailer Trash	£2.45	5551074102	15/07/2009 09:01:48
1710	The Navigator	£4.90	1429535512	14/07/2009 09:02:23
1676	Jackdaws	£3.92	0786538074	13/07/2009 12:22:28
1420	Road Rage	£3.31	1843450763	02/07/2009 18:26:35

1 to 10 of 10 | Page 1

ADE - Adobe Digital Editions



Most of the ebooks on CoolerBOOKS are supplied in the Adobe Digital Editions [ADE] format. We believe ADE to be one of the better ebook formats allowing you to manage, retain, share and easily download your ebooks.

ADE Installation

Rather like iTunes you will need to download the ADE software onto your computer, this software is available for Windows and Mac computers.

📖 If you do not have one already, you will need an Adobe ID, which is obtained by registering with Adobe
www.adobe.com/cfusion/membership

📖 Once you have your Adobe ID, head to www.adobe.com/products/digitaleditions and begin the process for downloading the ADE software. Follow the steps to conclusion.


When you have downloaded ADE to your computer, it's a good idea to authorize your COOL-ER straight away.

Authorizing your COOL-ER with ADE

Connect your COOL-ER to your computer using your USB cable.

The ADE Authorize Device window will pop up.

COOL-ER →

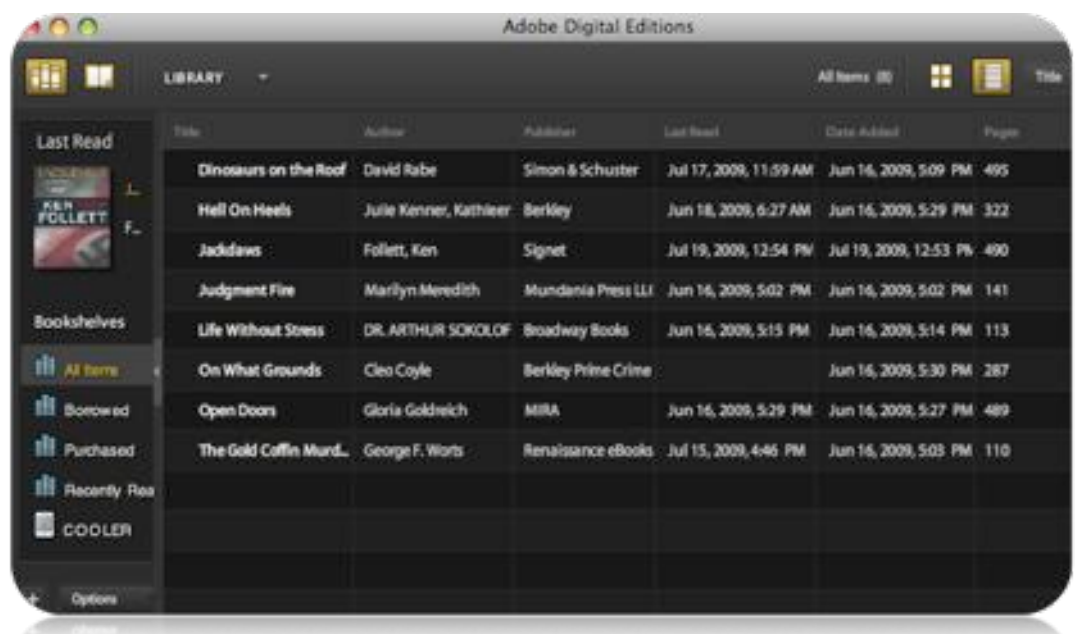

On rare occasions where the pop up does not happen automatically, please try pressing Ctrl - Shift - E to force the pop up.

Click on Authorize Device.

ADE will now recognize your COOL-ER, and will list it within the “Bookshelves” area of the ADE window. Look out for the ‘COOLER’ name and icon.

To move books on to the COOL-ER simply drag and drop them to the COOL-ER icon. You can now proceed with downloading DRM documents from CoolerBOOKS.

Each time you subsequently connect your COOL-ER to your computer, you'll see ‘COOLER’ appear on the bottom of your bookshelf view.

Further help with ADE

Adobe have an excellent FAQ page which should point you in the right direction;
www.adobe.com/products/digitaleditions/faq

If this does not solve your problem, contact our customer service team via:
support@coolerbooks.com

I need to know about compatibility...

Which Operating Systems are compatible with my COOL-ER?

COOL-ER supports both Apple Macintosh and Microsoft Windows Operating Systems. At present COOL-ER does not support file transfer from Linux based computers.

How easy is it to use COOL-ER with my desktop or laptop?

COOL-ER is plug and play compatible. No CD-Rom, no formatting, just use the USB cable provided to download your ebook and you will be reading in a matter of minutes!

If I don't have a COOL-ER, can I still use CoolerBOOKS?

Yes, CoolerBOOKS works with most ereaders. When selecting your book make sure you choose a compatible format for your ereader.

I'm not so sure...

I don't think my COOL-ER is working correctly - what should I do?

Contact our technical help team support@coolreaders.com for straightforward advice. If your unit is faulty, please let us know within 28 days of delivery and we'll collect and replace your COOL-ER.

What if I don't like my COOL-ER?

With a 14 day return policy; why not give it a go? Once you receive your COOL-ER take a moment to familiarise yourself with the controls and dive into a book. If you find that COOL-ER isn't for you simply return it.

What if I want to return my COOL-ER?

Contact our Customer Service team to let them know you intend to return within 14 days of receipt. You'll be given a returns number and asked to send back your order undamaged in the original packing.

Tell me how to use my COOL-ER...

Is navigation simple?

The straightforward navigation system is designed for intuitive use with clear-cut click through menus to make the COOL-ER suitable for even the most technophobic!

How do I transfer files to my COOL-ER?

Plug your COOL-ER into your computer's USB slot with the cable provided and drag and drop documents from your computer to your COOL-ER for immediate rapid transfer.

How can I transfer my own documents to my COOL-ER?

Once you've saved your work in a compatible format, you can transfer your own documents to your COOL-ER in the same way any purchased text would be transferred. Simply plug your COOL-ER into your computer via the USB cable and drag and drop, or copy and paste the file.

How can I load an ebook onto my COOL-ER?

1. Connect your COOL-ER to a computer via the USB cable.
2. Open the folder containing your COOL-ER's documents from 'My Computer'.
3. Add your new documents by dragging and dropping or copying and pasting. The time taken to transfer is dependent on the computer and file size. Longer documents will take longer to transfer.

How easy is it to turn a page?

For page turns, COOL-ER has a simple control wheel in the bottom right corner (portrait mode), which allows you to progress through your document either forward or back with a single click. This wheel is ergonomically placed which, along with the even weight distribution, helps readers enjoy sustained use. To complement this, COOL-ER is even lighter than most traditional books so you'll find hand strain is not an issue either.

Can I change the page orientation?








The easy-switch page orientation helps you select the best view for you. Choose between portrait and landscape or even switch back and forth with a single click.

Can I easily jump to a key page?

Yes, if you've previously bookmarked the page. Otherwise simply select 'first', 'last' or a specific page number from the 'Go To Page' menu available on every page with a single click. You can also jump to a particular chapter via the table of contents.

What do the icons on the screen indicate?

If you look at the black bar on the bottom edge of the COOL-ER screen you'll see (from left to right):

-  Battery indicator
-  Audio (if music is turned on)
-  Thought bubble indicates COOL-ER is busy
-  Visual indication of place within document
-  Document title
-  Page number
-  Font size

For more details on this, please see Status Options

How can I charge my COOL-ER?

Connect your COOL-ER to a computer via the USB cable and your COOL-ER will immediately begin to charge while the computer is powered on. Your COOL-ER will charge each time it is connected for file transfers and even charge while transferring documents. Your COOL-ER will be shipped with a slight charge but to charge it completely from fully empty takes a couple of hours. A full charge should last for about 8000 button clicks.

How long will my COOL-ER's battery last between charges?

COOL-ER only requires battery power when responding to button clicks or running the audio function, so users can run it for weeks without charging the battery. A single charge can last for 8,000 button clicks, which is equivalent to reading an average novel fifteen times over!

How do I change the text size on my COOL-ER?

Open a book on your COOL-ER and click the centre button of the control wheel. This brings up your main menu, scroll down to the 'Font Options' option and click the centre button again. You can then scroll through the font sizes. Select your favourite font size using the up/down buttons on the scroll wheel, and then click the central button. Your chosen text size will be applied throughout the document and you'll be returned to the ebook to continue reading.

How do I select a book to read from the library?

In the library scroll up and down using the control wheel and, once you've chosen a document to read, click the central button in the control wheel. Your ebook will then load. (The time taken to load is dependent on the file size. Larger texts will take longer to load as your chosen formatting is applied to the full document at this time.)

How do I attach the USB cable?

While your COOL-ER is turned on connect the smaller end of the USB cable to your COOL-ER via the port on the bottom edge (next to the headphone jack). Then connect the larger end to your computer's USB port. Your COOL-ER should then be automatically recognised and you can begin transferring files.

How do I turn on my COOL-ER?

Press and hold down the oval button positioned next to the memory card slot on the top edge of your COOL-ER for a moment. The green LED will show on the upper right face of the COOL-ER and you'll see a display of your COOL-ER's greyscale on the screen. When the COOL-ER has finished loading the greyscale image will disappear and your COOL-ER take you directly to the library page.

How can I turn my COOL-ER off?

You can switch off your COOL-ER by holding down the on/off button on the top edge next to the memory card slot.

Tell me about formats...

What types of documents can I read on my COOL-ER?

We're keen to make COOL-ER as user friendly as possible, which is why users can load their own documents, as well as any purchased files that they have the right to view. COOL-ER is suitable for use with many file formats and with ebooks purchased from most ebookstores as well as Project Gutenberg files saved in a compatible format.

Which files formats can I use with my COOL-ER?

You can read formatted documents in PDF and EPUB as well as FB2, RTF, TXT, PRC and HTML. Additionally, you can listen to your favourite MP3 audio files and view JPG and GIF images. With such a wide choice of formats, you'll find you can use your COOL-ER for almost all documents!

Can I organize documents on my COOL-ER?

COOL-ER has a very straightforward folder system: save your files into your individually named folders on your computer and the folder system is transferred to your COOL-ER. You choose how to sort your library; for example by genre, date or favourite author. With COOL-ER you have full control of your filing.

Can I read my own documents on my COOL-ER?

Yes, you can upload files from any source to your COOL-ER provided they are in the correct format and you have the right to view them.

Will my COOL-ER re-flow formatted text?

COOL-ER is able to automatically re-flow most documents to improve page layout and readability but remember, your ebook is an electronic representation of a normal book and sometimes the format of the original book precludes re-flow.

I need to view complicated documents; can my COOL-ER handle it?

COOL-ER is suitable for viewing complex texts; the integral zoom feature and automatic reflow make it ideal for text and images.

Can I use my COOL-ER to view academic texts?

Yes, COOL-ER has 8 text sizes which allow easy zoom. Perfect for viewing complicated diagrams, your COOL-ER will be a real asset when you're studying on the move.

How well will my COOL-ER display images?

Images viewed on your COOL-ER match the resolution of the original image. COOL-ER only supports greyscale text and imagery, and this has traditionally been sufficient. If your original book contains colour pictures these will be displayed in monochrome on your COOL-ER. Designed to fully support text and image documents, COOL-ER boasts 8 greyscales levels with a dpi of 170 to ensure clarity and detail while minimising risk of eyestrain.

Why should I choose COOL-ER?

Is COOL-ER right for me?

Anybody who reads will love their COOL-ER. The weight, size, shape and E Ink Vizplex™ screen accurately recreates the feel of reading from a page, without the need to carry heavy books. You can use your COOL-ER as you would a paper book, with the added bonus of audio features and easy zoom to change the text size if necessary. Plus, the storage facility means you can access all your favourites with the touch of a button.

How is COOL-ER different?

Unlike other ereaders, COOL-ER supports 9 file formats making it convenient for you to view text and images as well as listen to your music. You can personalise the display settings to suit your needs and the screen uses E Ink Vizplex™ technology that mimics a book so you can read your documents at any angle and even in direct sunlight.

I don't like the idea of staring at a screen rather than a book: what makes COOL-ER different?

The anti-glare screen and range of font sizes make reading the COOL-ER a breeze. No more headaches from staring at a screen!

Where can I use my COOL-ER?

Anywhere you would read a book. On a plane, boat, train, at home, or even on the beach!

Can I listen to audio files with COOL-ER?

COOL-ER has a built-in MP3 media player so when you plug in headphones (not supplied) you can listen to thousands of MP3 audio books or learn a new language with one of more than 40 language courses available from coolerBOOKS.com. You can also add your favourite music tracks for those times when you want to take a few minutes out to reflect on the last chapter!

What color COOL-ERs are available?

COOL-ERs come in eight lustrous colours: Ruby, Blue Sky, Hot Pink, Vivid Violet, Cool Pink, Racing Green, Black Jack and Silver Shine.

Can I personalize my COOL-ER?

COOL-ERs choice of 8 text size options, along with serif or sans-serif fonts, and portrait or landscape settings, help to simulate a paper based book while allowing for individual personal preferences. Once you've set your favourites, your COOL-ER will remember your settings.

What languages does COOL-ER ereader support?

With 8 menu languages, everybody can navigate through COOL-ER's simple menu structure. You can upload files in almost any language to your COOL-ER whether Latin, Cyrillic or Kanji based, including; English, Italian, Portuguese, German, French, Spanish, Russian, Greek, traditional and basic Chinese. Simply download and transfer your chosen text in your choice of language.

Can I read several books at once?

Yes and your COOL-ER will cleverly bookmark each document you view so you can easily switch from file to file. No matter how many ebooks you currently have on the go COOL-ER remembers your last accessed page within every document so you can jump straight back into the text. You can also set specific bookmarks to return to key pages.

How many books can my COOL-ER hold?

COOL-ER provides 1 gigabyte of storage and it includes a Secure-Digital (SD) card slot for expandable, removable storage. As with music, the number of books you can hold will depend on the type and size of book you download, but to give you an example, an average fiction bestseller is around 3MB. This means you can hold over 300 books on your COOL-ER and thousands more using an additional memory card and COOL-ER's Secure Digital (SD) card slot.

I have documents purchased from other bookstores; can I view them on my COOL-ER?

So long as you're in compliance with the rights of each document, you can view them on the COOL-ER regardless of where the file was purchased. However, please check file formats before purchase to ensure they are suitable for your COOL-ER.

What happens if I forget to switch off my COOL-ER?

Whether you put your COOL-ER down for a minute or for the night, you don't need to power the device off. The easy-read E Ink technology means COOL-ER only requires its battery for each button click. Leaving your current page on screen is a convenient way to pick up again where you left off... just like a paper book. However you will need to charge your COOL-ER regularly to ensure you do not find yourself powerless.

We've also made sure you won't accidentally flick through the pages if you put your COOL-ER in your pocket or handbag. Each button requires a tiny but perceptible click, which helps ensure you'll always find your COOL-ER displays the page you left it on.

Will updates be available for COOL-ER in future?

Using your COOL-ER's memory card slot, you can update your COOL-ER with the latest software to ensure it's always in first-class shape. Check the CoolReaders site for news on updates every now and then.

Help me with CoolerBOOKS

Where can I buy ebooks?

The largest selection of titles is at CoolerBOOKS.com, where over 750,000 ebooks are available in a variety of common formats such as EPUB, and can be downloaded directly to the user's device of choice and shared with other readers.

What is CoolerBOOKS.com?

CoolerBOOKS.com is an online bookstore with more than 750,000 ebooks available to purchase or download for free.

I don't have a COOL-ER - can I still use CoolerBOOKS?

Yes, CoolerBOOKS' ebooks and edocuments are suitable for use with most ereaders, computers and mobile devices. We've even added a feature at CoolerBOOKS to help our customers' select the right format for their ereader prior to purchase.

Do I have to pay delivery charges for my ebooks?

No, you can download your ebook from CoolerBOOKS directly.

How can I buy a book from CoolerBOOKS?

After browsing the site for a book you wish to read, click 'buy now' and the book will be added to your basket. At this point you can either continue shopping or checkout to complete your purchase.

When you are ready click 'checkout now' and you will be asked to complete your details. This creates an account for you.

Once you have confirmed your details please scroll to basket summary and select 'buy now'. At this point you will be asked for your payment details.

I've had a territory error message, what does it mean?

Authors and book publishers have traditionally sold and issued selling rights for their books by territories, this is known as Territory Rights. Territories in this case are usually designated by your country of residence and where your credit / debit card is registered.

This means that dependent on country of residence you will be able to purchase only designated books.

At CoolerBOOKs we try our hardest to take away the frustration of this system by

- a) sourcing as many books as possible for all territories and
- b) only presenting you with books that are authorized for your territory.

Occasionally a book will get through our territory controls, you will be notified of this during the payment process. If this does happen please remove the book from your shopping basket




Please note - don't worry, if you have bought a book in one territory, you can still read it on your ereader if you go abroad.

Why are you asking which country I live in?

We need to know your country of residence to comply with Territory Rights.

How do you know which territory I am in?

We identify your country of residence by a number of methods:

-  We ask you when you first use the site
-  When you register and supply residence details
-  Geo location identification: your individual IP address tells us the region where you are based. Please do not worry about this; the information is simply used to allow us to provide you with relevant book listings and for no other reason.

I've seen an ebook for sale on a different website – why don't you have it?

The most likely answer to this is that we are not allowed to sell it to you due to Territorial Rights. The website you saw it on might be based in another country and has not identified your country of residence correctly. We pride ourselves on providing you with the best selection of books no matter your country of residence, if you believe that the book you have seen is available in your country please let us know so that we can improve our service to you.

I've downloaded an ebook but I can't read it on my COOL-ER or my computer. Why?

It sounds as if you may be trying to use the acsm file to read your book. The acsm file is a small file usually less than 4kb which acts as a key for the full book.

Each time you download a Digitally Rights Managed book you'll actually be downloading the acsm key which will activate the full book download within Adobe Digital Editions.

Try opening and signing into Adobe Digital Editions before downloading the key. The full download should then start as a matter of course. If you are still having problems, please see the section covering Adobe Digital Editions in more detail or for further assistance please contact Adobe at:

www.adobe.com/support/digitaleditions.

Where are my ebooks stored?

You can save your ebooks to your COOL-ER and keep a copy on your computer. For additional peace of mind all your downloads from CoolerBOOKS are also saved in your account so you can access them again and again.

I've accidentally deleted my ebook – what should I do?

You can download your ebook from your account within CoolerBOOKS if you need to. Log in to your account and select the ebook you wish to download. By clicking the ebook link you can download your book again.

I've downloaded a book and my COOL-ER says Download Complete but the book seems to be empty. Why?

Before you can read an ebook it must be downloaded from Adobe Digital Editions, using an .html or .acsm file to identify the ebook. It looks as if you've put the .html file on your COOL-ER instead of the .epub or .pdf file that holds the book's contents. If you right click on the file on your computer and choose 'Open with' Adobe Digital Editions then your book will be downloaded and ADE will add it to your library.

My screen has frozen what should I do?

Your battery has probably run down. Try connecting your COOL-ER to your computer to recharge the battery.

My page won't turn - what can I do?

Due to the E Ink screen technology, your COOL-ER will continue showing the last page you accessed even if the battery has run down. Simply recharge the battery by plugging your COOL-ER into your computer via the USB cable.

I've pressed the button to turn the page but the page number hasn't changed

Depending on the size of font you've chosen each page of your ebook may be spread over more than one page of your COOL-ER. You can select a smaller font if you need to see a whole page on a single screen, or turn the page on your COOL-ER to move to the next part of the page of your ebook.

I've changed my font and the writing in my ebook seems to be overwriting itself

With some ebooks a large font will not reflow correctly and the end of a line overwrites the beginning of the line if it is too long to fit on the screen. If you select a smaller font the lines should wrap correctly.

What is the delivery charge for my COOL-ER?

Delivery charges are dependent on your location. To view the relevant cost for your country please click 'Buy COOL-ER' on the Cool Readers website

I want to order several copies of an ebook for all my family - What should I do?

Generally that depends on the chosen ebook format. If the ebook is DRM protected than you'll need to comply with the specific rights of the book, which will probably restrict sharing to under 10 copies.

Can I use my COOL-ER if I'm not connected to the Internet?

Yes. You only require an Internet connection to download ebooks. You can transfer documents from your computer to your COOL-ER without being online.

Something's happened to the finish of my COOL-ER - What should I do?

Astringents and some other chemicals may damage the finish of your COOL-ER (e.g. chlorine, nail varnish remover). Please be careful if you have been in contact with such materials as they can be absorbed into the skin and may rub off onto the device for several hours after contact.

If this does happen to your COOL-ER then you should still be able to use it normally to continue to read edocuments.

Please note: this will not affect your warranty should your product become faulty or fail, however, any devices returned as a result of the contact described here will be deemed 'customer damaged' and will not be eligible for repair / replacement.

Help! I've changed the menu language - how can I return to my chosen language?

If you find you have accidentally selected a language, you can return to the correct language by pressing the Menu button (F) while in the Library view and scrolling down to the 3rd option. This will take you to the language menu.

The languages are in the following order:

- | | |
|------------|------------------------|
| 1. English | 5. Russian |
| 2. German | 6. Simplified Chinese |
| 3. French | 7. Traditional Chinese |
| 4. Spanish | 8. Portuguese |

ACSM - Adobe Content Server Message in Adobe Digital Editions (ADE). A small file used in the authorisation of DRM documents.

ADE - Adobe Digital Editions. Software for users to view and manage eBooks and other digital publications.

COOL-ER - Ereader from Interead.

CoolerBOOKS - Online book superstore from Interead with over 750,000 titles available for all types of ereader.

DPI - Dots Per Inch. Measure of dot density, in particular the number of individual dots that can be placed within the span of one linear inch. The COOL-ER screen is 170dpi. Standard computer monitors are 72dpi.

DRM - Digital Rights Management. Generic term that refers to access control technologies. COOL-ER supports DRM through Adobe Digital Editions. Electronic books read on a personal computer or an ereader sometimes use DRM restrictions to limit copying, printing, and sharing of ebooks.

Ebook - Electronic Book. A book designed for reading on screen. This could be on an ereader, computer or mobile device such as a PDA or phone.

Edocument - Electronic Document. A document created and transported in binary format.

EPUB - Electronic Publication. Ebook standard file created by the International Digital Publishing Forum consisting of reflowable content, meaning that the on screen text is optimized for the particular display device. COOL-ER compatible format.

Ereader - Electronic Reader. Device designed to show electronic documents in a book format. Usually similar in size to a standard paper novel.

FB2 - FictionBook ebook format, which originated and gained popularity in Russia. COOL-ER compatible format.

GIF - Graphics Interchange Format, a bitmap image format particularly used for vector images on the Internet due to a relatively low file size. COOL-ER compatible format.

HTML - HyperText Markup Language. Often used for web pages and available as a 'Save as' option within many programs. COOL-ER compatible format.

JPG - Joint Photographic Experts Group (the committee who created the standard). A graphic file suitable for photographs and highly detailed images. COOL-ER compatible format.

Linux - An independent operating system based on Open Source code. Types of Linux operating system include Ubuntu, Red Hat and SUSE. Although the COOL-ER runs on a Linux platform, it is not suitable for file transfer of documents from a Linux computer (for now).

Mobipocket - Amazon owned ebook file type. Compatible only with Amazon ereaders: Kindle 1, Kindle 2 and Kindle DX.

MP3 - Audio Layer 3. A common audio format for consumer audio storage as it provides good quality playback with small file size. COOL-ER compatible format.

O/S - Operating System. For example; Microsoft Windows XP, Apple Macintosh X, Linux Ubuntu.

PDA - Personal Digital Assistant. Mobile device sometimes used for viewing edocuments.

PDF - Portable Document Format created by Adobe containing images and text. COOL-ER compatible format.

PRC - Binary file format. COOL-ER compatible format.

Project Gutenberg - PG. Volunteer effort to digitize and archive cultural works, in order to "encourage the creation and distribution of ebooks". Many out-of-copyright books have been converted and are now available from the PG site.

Reflow - PDF and EPUB text is sometimes reformatted to make the best use of the screen size while still showing the content in a logical order. For example, a PDF with several columns may be shown in a single column format spanning the width of the COOL-ER screen. This automatic feature improves on-screen readability.

RTF - Rich Text Format document file type developed by Microsoft for cross-platform document interchange so suitable for use with most O/S and document processing programs. COOL-ER compatible format.

SD Card - Secure Digital Card. Additional memory device which can extend the COOL-ERs capacity by up to 4GB. (Taking the total to 5GB including COOL-ER's integral 1GB storage).

SDHC - Secure Digital High Capacity Memory Card also known as SD 2.0. An extension of the SD card family that increases each card's storage capacity up to 32GB. SDHC cards share the same physical and electrical form factor as original SD cards. COOL-ER devices are not compatible with SDHC.


TXT - Text file or textfile (sometimes also known as flatfile). A filename extension for files consisting of text that usually contain very little formatting. COOL-ER compatible format.



This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 Class B for ITE, the essential protection requirement of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Interead.com has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from Interead.com.

Important COOL-ER Safety Instructions

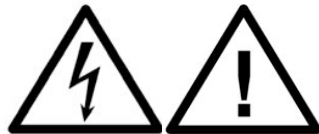

All the safety and operating instructions should be read before the device is operated. Failure to adhere to these Safety Instructions may invalidate your warranty.

Peripherals

Take care when using peripheral devices. Always check compatibility between COOL-ER and computer and follow the manufacturer's guidelines for installation and proper use.

Cleaning

Unplug this product from computer before cleaning. Do not use liquid cleaners, volatile chemicals or aerosol cleaners as these may cause damage to your COOL-ER's chassis or internal components. Use a damp cloth for cleaning.

Water and Moisture

Do not use this product near water for example, near a kitchen sink etc.

Any liquid entry into the internal workings of this unit may damage your COOL-ER.

Heat

The product should be situated away from heat sources such as radiators, heat stoves, or other products that produce heat.

Power Sources

This product should be operated only from the type of power source indicated on the marking label and only using an Interead.com authorized power adapter.

Grounding

This product should be used only with proper electrical grounding. Please only use power supplies supplied by Interead.com as to do otherwise may cause damage to the electronics or injury to you.

Cables

Please position your USB cable so that it is not likely to be walked on or pinched by adjacent items.

Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, please unplug the USB cable. This will prevent damage to the product due to lightning and power lines surges.

Object Entry

Never push objects of any kind into your COOL-ER through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service

If your COOL-ER is damaged or behaving abnormally, contact qualified service personnel. Please refer all warranty claims to Interead.com COOL-ER Warranty Department.

Replacement Parts

Only use replacement parts specified by Interead.com. Unauthorized substitutions may result in damage to your COOL-ER.

Avoid EM interference

The product should be situated away from all sources of electromagnetic radiation, i.e. microwaves, amplifiers, speakers etc. These can hinder proper performance and damage your data.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur.

Ergonomics

Position your COOL-ER so the top third of the screen is at eye-level or slightly below and hold at least 45 centimeters from eyes away to avoid strain.

Take a break from reading now and again to avoid eyestrain. Get up, stretch, flex your wrists, walk about, and look at something else for about 10 minutes every hour.

Avoid situations that could cause glare and angle the screen so that it doesn't reflect any light into your eyes. If possible use your COOL-ER in natural light or use a non-flickering light source.

Select a seat with good lower back support. The seat should allow your feet to rest flat on the floor or on a footrest directly, without twisting your back.

Servicing

Do not attempt to service the COOL-ER yourself. Doing so may violate your warranty and expose you and the COOL-ER to electric shock. Refer all servicing to authorized service personnel.

Cleaning

Before cleaning, please power off and disconnect cables. After, please make sure that the COOL-ER is completely dry before reconnecting the USB cable and/or switching on. Please do not use any liquid or spray cleaners directly on surface of screen or case.

Screen

Please use a soft, clean, lint-free cloth to remove dust and dirt from the screen. For smudges and grease marks please use a soft cloth with a minimal quantity of detergent. After applying detergent please remove thoroughly.

Case

Please clean the case with a soft cloth slightly moistened with a mild detergent solution. Please rinse the cloth with clear water, wring it dry, and wipe the case to remove any detergent residue.

Notice

Interead.com reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. The national law of the respective country defines details of this. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

Any activity that alters the COOL-ER software or firmware by changing the code automatically invalidates all warranties.

Copyright 2009 Interead.com Limited

Interead.com follows a principle of constant improvement and is not held responsible for any changes that are made to the COOL-ER nor accepts any liabilities for these changes.





Interread.com Limited

51 Blue Lagoon Drive
8th Floor
Miami
Florida, 33126
United States of America

Davidson House
Forbury Square
Reading
RG1 3EU
United Kingdom