


StreetPilot® c340

quick reference guide



Step 1: Mount Your c340

To ensure a tight grip, clean and dry your windshield before mounting the suction cup.

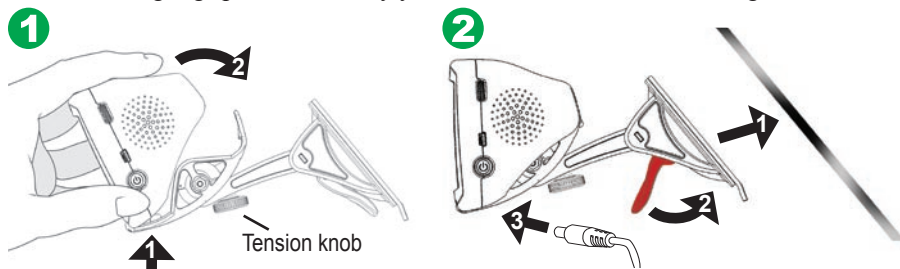

Fit the bottom of your c340 into the cradle of the suction cup mount. Tilt your c340 back until it snaps in place.

Place the suction cup on the windshield. Flip the lever back, toward the windshield. Plug the small end of the cable into the mount and the other end in a 12-Volt receptacle in your vehicle.

If necessary, use the tension knob to loosen or tighten the tension in the mount to improve your viewing angle.

Your unit will turn on automatically if you have started your vehicle. To manually turn on your c340, press and hold the Power button on the side of the unit.

WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the c340 installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.


NOTICE TO STATE OF CALIFORNIA DRIVERS: California Vehicle Code Section 26708 (a) (1) provides that drivers in California should not use suction mounts on their windshield or side or rear windows. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at www.garmin.com. Also, refer to the *Owner's Manual* for instructions on using the included mounting disk with the suction cup mount.

© Copyright 2005 Garmin Ltd. or its subsidiaries


Step 2: Configure Your c340

Press and hold the Power button on the side of the unit to turn it on. Follow the on-screen instructions to set up your c340; you only have to do this once.

Step 3: Find Your Destination

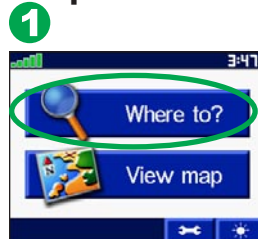

Touch **Where to?**

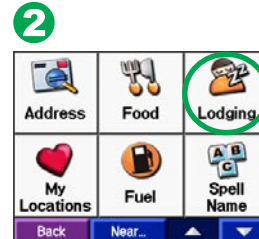

Select a category. Touch the arrows to see more categories.



Select a destination. Touch the arrows to see more places.



Touch **Go!**




Enjoy the route!

Step 4: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c340 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c340 recalculates the route and provides new route instructions.



Your route is marked with a magenta line.

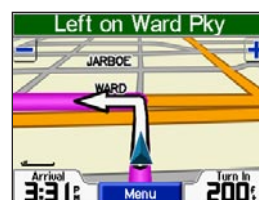


Follow the arrows as you take turns.



A checked flag marks your destination.


You can add a stop (via point) to your route. The c340 gives you directions to the via point and then to your final destination.

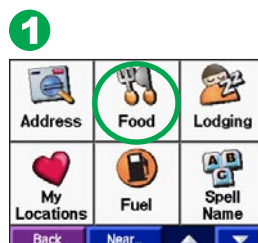

Search for the extra stop.



Touch **Go!**

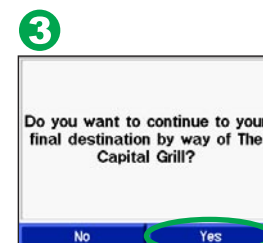


Touch an option.

Viewing the Map Page



From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch the buttons on the Map page to see additional information.

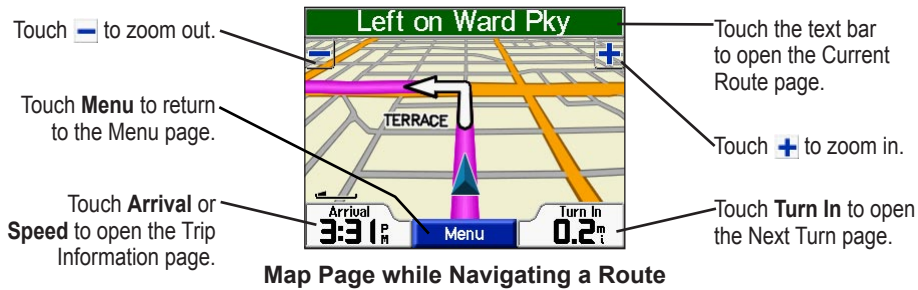

Map Page while Navigating a Route



Trip Information Page




Current Route Page



Next Turn Page

Saving Places You Find

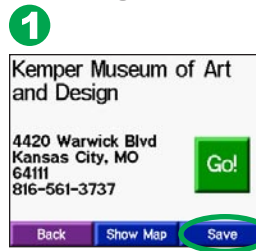

After you have found a place, touch **Save**.




Touch **OK** in the pop-up window. The place is saved in **My Locations > Favorites**.

Finding Saved Places



Touch **Where to? > My Locations > Favorites**.

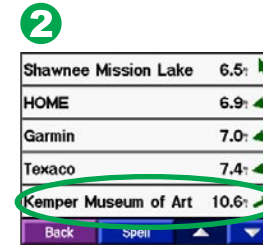


Select a place.




Touch .

Setting a Home Location

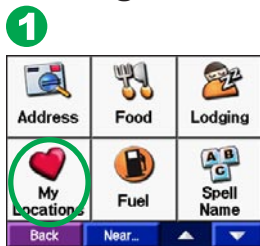

Touch **Where to? > My Locations**.

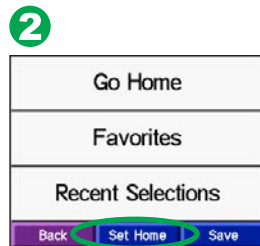


Touch **Set Home**.



Select an option.

Adjusting the Backlight Brightness

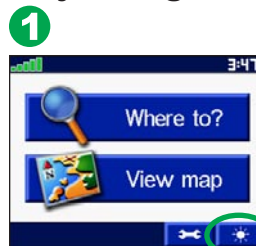

Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the Power button.

Turning the c340 On and Off

Press and hold the Power button on the side of the unit to turn it on and off.



Traffic Information with an FM TMC Traffic Receiver

Using a Garmin FM TMC Traffic Receiver, your c340 can receive and use traffic information broadcast over the FM Radio Data System. For more information about the GTM 10 FM TMC Traffic Receiver, visit <http://www.garmin.com/products/gtm10>. For subscription providers, visit <http://www.garmin.com/fmtraffic>.

Connecting the GTM 10 to Your c340

Place your c340 in the mount and plug it into the 12-volt adapter. Plug the USB cable from the GTM 10 into the USB cable connector on the side of the c340.

Viewing Traffic Events

From the Menu page, touch to display a list of traffic events. The traffic symbols appear on the Map as well.

	MN-77 Southbound	0.0	N
	MN-77 Southbound	0.5	N
	I-35w Southbound	7.8	S
	MN-36 Eastbound	10.0	NE
	I-80 Eastbound	296	SW

More Information

For more information about your c340, refer to the *Owner's Manual* located at <http://www.garmin.com/products/sp340/>. Click on the **Manuals** link and then select **Download**.