



MOTO **Z10**

User's Guide

 
 
HELLOMOTO

 
Your **MOTO** Z10 phone is easier to use, quicker, and smarter!

- Create **movies** on the go and instantly upload to the Web (see your Quick Start Guide).
- Capture key moments in high-definition **videos** and **photos**, and upload to the Web (see your Quick Start Guide).
- Watch **videos** on the high-definition display (see your Quick Start Guide).
- Edit your **videos** and **photos** (see your Quick Start Guide).
- Access any **Web** site just like you do on your computer, with your phone's full HTML browser (page 39).
- Listen to **music** with a stereo wired headset or high quality Bluetooth® stereo headset (see your Quick Start Guide).

 
For more information: To read instructions on your phone, press **Options > Help** within a feature, such as the Home screen. Use the in-device help to find information about main phone features. For manuals, web tutorials software support, and more, visit www.motorola.com/uk/support/z10.


Introducing your new **MOTO Z10 3G** wireless phone. Here's a quick anatomy lesson.

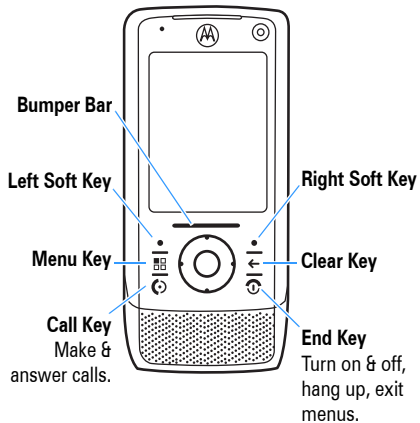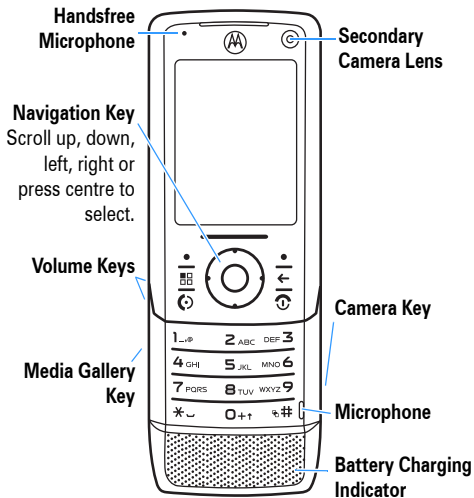

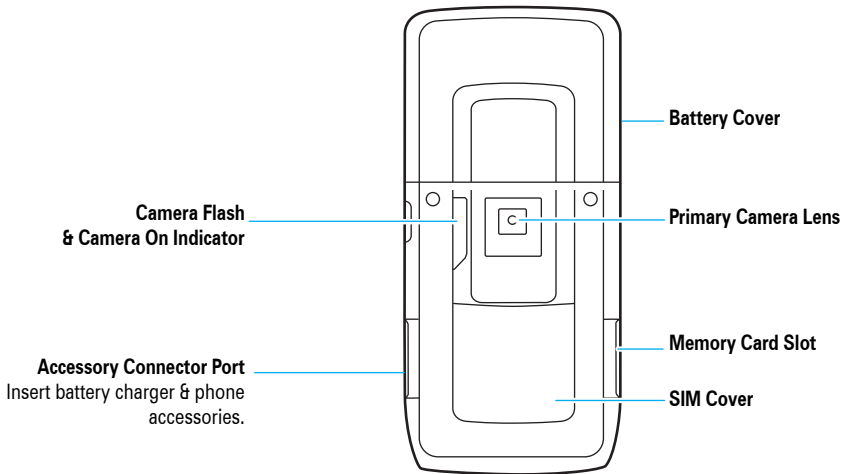


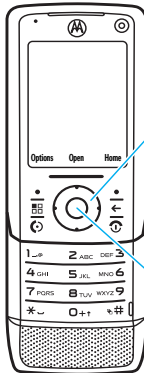 
Home Screen

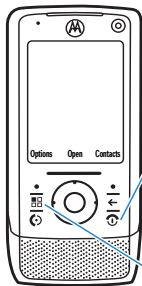



① Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

② Press the **Menu Key**  to open the **Main Menu**.

 Main Menu



③ Press the **Navigation Key** **up, down, left, or right** () to highlight a menu feature.

④ Press the **Centre Key** () to select it.

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation. UIQ Technology and all UIQ Technology-based marks and logos are trademarks of UIQ Technology AB. © Motorola, Inc. 2007.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

contents

Use and Care	8	customise	23
EU Conformance	9	profiles	23
essentials	10	themes	24
about this guide	10	time & date	25
battery	11	answer options	25
basics	14	calls	26
basic navigation	14	turn off a call alert	26
Home screen	14	recent calls	26
main menu	15	return a call	26
status indicators	15	redial	27
text entry	17	video calls	27
volume	19	caller ID	27
lock and unlock keypad	20	emergency calls	28
handsfree speaker	20	voicemail	28
contacts	20		
SIM and phone contacts	21		

entertainment	30	other features	52
media studio	30	advanced calling	52
camera	30	restrict calls and messages	53
camcorder	32	contacts	55
media gallery	34	advanced messaging	58
media player	35	device settings	60
media editor	37	call times & costs	61
voice recorder	38	data calls	62
play movie on memory card	38	network	62
ShoZu	39	agenda	63
Web browser	39	tools	63
messaging	42	security	64
messaging	42	pictures, videos & games	65
instant messaging	43	flight mode	67
connections	45	advanced Bluetooth features	67
Bluetooth® wireless	45	memory card	69
connect your phone to a computer	48	protected content	70
Companion CD	50	SAR Data	71
phone updates	51	index	73

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

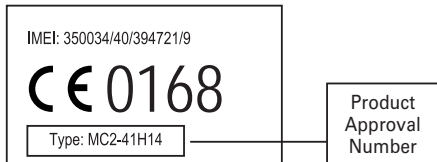

The above gives an example of a typical Product Approval Number.

essentials





Caution: Before using the phone for the first time, read the *Important Safety and Legal Information* guide included in the box.



about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messaging** > **Create new message**

This means that, from the Home screen:

- 1 Press the *menu key*  to open the main menu.
- 2 Press the *navigation key*  to scroll to  **Messaging**, and press the *centre key*  to select it.

- 3 Press the navigation key  to scroll to **Create new message**, and press the *centre key*  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

Battery Use & Safety

- **Motorola recommends you always use Motorola-branded batteries and chargers.**

The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.
- **Important:** Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your

display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it bears a Motorola “Original Equipment” hologram;
- If there is no hologram, the battery is not a qualified battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorised Service Centre.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle

- When storing your battery, keep it in a cool, dry place.
- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to battery and mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorised Service Centre before using.
- **Keep away from heat sources.**
- Never expose your battery to heat sources. Do not attempt to dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid direct exposure to summer sun for prolonged periods.
- Do not leave your battery or mobile phone in an unattended vehicle. Environments inside a vehicle can vary between extreme heat or cold, both of which can damage your battery.
- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g., jewellery, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre for proper battery disposal.



Warning: Never dispose of batteries in a fire because they may explode.

battery charging

New batteries are not fully charged.

Tip: Motorola batteries have circuitry that protects the battery from damage from overcharging.

For battery installation and more battery charging details see your *Quick Start Guide*.

basics

See page 2 for a basic phone diagram.

Tip: Want some help? Press **Options** > **Help** within a feature, such as the Home screen. Use the in-device help to find information about main phone features.



basic navigation


For menu key, navigation key, and tab scrolling basic navigation details see your Quick Start Guide.



Home screen


For basic Home screen details see your Quick Start Guide.



In your Home screen menu press **Options** > **Settings** to select the plug-ins you want to display. You can display up to five plug-ins.

Press  up and down in the Home screen to highlight plug-ins, then press the *centre key*  to open the plug-in.

To clear your plug-in status information, highlight the plug-in, then press and hold .

To dial a number from the Home screen, enter a phone number and press . To “hang up,” close the slider or press .

You can press  at any time to return to the Home screen.

You can press  at any time to go to the main menu. Press  again to switch between the main menu and the Home screen.

To customise your Home screen, see your *Quick Start Guide*.

main menu

Press \odot up, down, left, or right in the main menu to highlight an application.

 
Press the *centre key* \bullet to open the application.

You can press \square at any time to go to the main menu. Press \square again to switch between the main menu and the Home screen.

Soft Key Labels show the current soft key functions. For soft key locations, see page 2.

status indicators

Status indicators are displayed at the top of the phone's display:

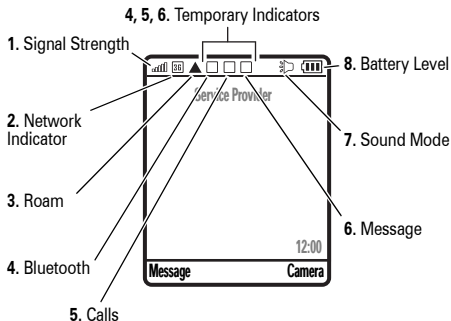

- 1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. Network services such as calls may not be available when Υ or Υ appears.

- 2 Network Indicator** – Shows when your phone is using a GSM connection (standard network access), GPRS connection (high speed network access), 3G connection (highest speed network and video calling) or *flight mode* (no network connection, see page 67).



 
GSM




GPRS



3G




Flight mode

 


HSDPA

- 3 Roam Indicator** – Shows when your phone is seeking or using a network outside your Home network.

 
- 4 Bluetooth Indicator** – Shows current Bluetooth status. Indicators may include:



 Bluetooth on and visible to other devices (green)




 Bluetooth active but not visible to other devices (blue)




sending

 - 5 Calls Indicator** – Shows various call states. Indicators may include:



active voice call

 

active video call

- 6 Message Indicator** – Shows when you receive an SMS, MMS, email or voicemail message. Indicators can include:



 
SMS



email



MMS




voicemail

- 7 **Sound Mode Indicator** – Shows the current sound mode.



 silent




speakerphone

- 8 **Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your display shows a low battery.

text entry

 Some features let you enter text.

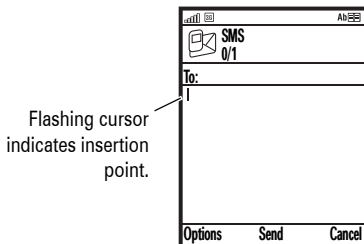

Press repeatedly in a text entry view to select an entry mode:

text input settings	
or	Your text entry mode can be set to iTAP™ () predictive text or Multi-tap () mode.
	Numeric mode enters numbers only.
	Symbol mode enters symbols only.

To set your preferred text entry mode, press

> **Control panel** > **Text Input Settings**.

iTAP™ and Multi-tap mode tips

- Press in a text entry view to change text case to all capital letters (**AB**), no capitals (**ab**), or next letter capital (**Ab**).
- Press to enter a space at the cursor and move on to the next word.

- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Enter a space to change back to iTAP or Multi-tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **·◊·** to move the cursor.
- Press **[←]** to delete the character to the left of the cursor.

iTAP™ mode

Press **[#]** repeatedly in a text entry view to switch to iTAP **Ab** (predictive text) mode.

iTAP mode lets you enter words using one key press per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, (with your text entry mode set to iTAP and **Word completion** selected) if you press **[7] [7] [6] [4]**, your display shows:

The screenshot shows a text entry interface for an SMS. At the top, it says 'SMS 0/1' and 'Ab'. Below that is a 'To:' field. The main text area contains 'Program ▶'. At the bottom, there are three buttons: 'Options', 'Send', and 'Cancel'. Annotations with arrows point to the screen: 'Press ·◊· up or down to scroll through word options.' points to the 'Program ▶' text; 'Press ·◊· right to accept Program.' points to the right side of the 'Program ▶' text; and 'Press [*] to enter a space at the cursor.' points to the right side of the 'Program ▶' text.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

 
If you want to select an alternative word press **·◊·** up or down to scroll through the options.

Multi-tap mode

Press **[#]** repeatedly in a text entry view to switch to Multi-tap **Ab** mode.

To enter text in Multi-tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, (with your text entry mode set to **Multi-tap** and **Word completion** selected) if you press **[7]** once, then **[4]** twice your display shows:

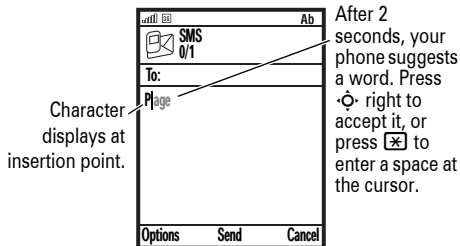

numeric mode

Press **[#]** repeatedly in a text entry view to switch to numeric **123** mode. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Multi-tap modes. Enter a space to change back to iTAP or Multi-tap mode.

 
symbol mode

Press **[#]** repeatedly in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *centre key* ·◊·.

volume

Press the volume keys to:


- turn off an incoming call alert
- change the earpiece volume during calls

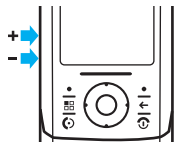


- change the music volume during music playback (if you are using a headset, the volume controls are on the headset).
- change the ringer volume from the Home screen.

Note: Changing the ringer volume will update your current profile.

lock and unlock keypad

To lock your keypad with the slider closed press and hold  until the power menu is displayed. Select **Lock keypad**.

To unlock your keypad open the slider or press any key and select **Yes**.

To lock your keypad with the slider open press and hold  then select **Yes**.

To unlock your keypad press any key and select **Yes**.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press the **Speaker** key (if available), or **Options > Audio > Speaker**.

contacts



To store and call contacts entries, see your Quick Start Guide.

For more advanced contacts features, see page 55.

create a contact


You can store phone numbers, email addresses, postage addresses and much more for each contact in your contacts list.


Find it:  >  **Contacts > Options > New contact**


- 1 Enter a name and other details for the contact. To select a highlighted item, press the *centre key* .
- 2 Use the  left and right keys to scroll between tabs, such as **Basic**, **Detail**, and **Notes**. Enter more details for the contact as required.
- 3 Press **Options** > **Save** to store the contact.


use a contact

With a contact highlighted you can:

- press the centre key  to display the contacts details.

Tip: Use the  left and right keys to scroll between tabs, such as **Basic**, **Detail**, and **Notes**. For SIM contacts you can only store **Basic** information. If you want to store additional information then the contact must be stored on your phone's memory.



- press the  left and right keys to view individual details, such as Mobile number, Phone number, and email address.

Tip: With a number displayed, just press  to call the contact.

- press **Options** to make a voice call, make a video call, create a message and more.

SIM and phone contacts

You can show contacts stored in your **phone's memory** or on your **SIM card**. Press

 >  **Contacts** then press **Options** > **View category** > **All phone contacts** or **SIM**.

To store a SIM contact, set your category to **SIM** and create a contact from the Contacts feature.

To store a phone contact, set your category to **All phone contacts** or another category you have created and create a contact from the Contacts feature or the Home screen.

To copy contacts between your phone and SIM, see page 57.

Note: The first time you turn on your phone with a new SIM you are given the option to copy contacts from your SIM to your phone.

customise

profiles

Profiles define the look and sound of your phone. Each profile uses a group of settings to define items such as ring tones, message alerts, screensavers and more. There are five standard profiles **General**, **Indoor**, **Meeting**, **Outdoor** and **Silent** that you can edit or define your own.

The current profile is displayed on your Home screen if you have chosen to display the profiles plug-in, see your Quick Start Guide.

Tip: To open your current profile from the Home screen press **Options > Open profile**.

Once you have defined your profiles, you can swap between profiles to change the look and sound of your phone.

To activate a profile:

Find it:  >  **Control panel > Profiles > profile name > Activate**

To edit a profile:


Find it:  >  **Control panel > Profiles > profile name > Options > Edit**

To create a new profile:

Find it:  >  **Control panel > Profiles > Options > New > enter profile name**



changing ring style, volume, and theme

You can change your ring style, volume, and theme from the Basic tab.

Find it:  >  Control panel > Profiles: *profile name*
> Options > Edit > Basic tab

changing voice call ring tones

You can change your voice call ring tones from the Calls tab.

Find it:  >  Control panel > Profiles: *profile name*
> Options > Edit > Calls tab


changing message alerts

You can change your message alerts from the Messages tab.

Find it:  >  Control panel > Profiles: *profile name*
> Options > Edit > Messages tab

changing other sounds

You can change other sounds from the Sounds tab.

Find it:  >  Control panel > Profiles: *profile name*
> Options > Edit > Sounds tab

changing screen saver and screen brightness

You can change your screen saver and screen brightness from the Screen tab.

Find it:  >  Control panel > Profiles: *profile name*
> Options > Edit > Screen tab

changing plug-ins



You can change your plug-ins from the Plug-ins tab, see your Quick Start Guide.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone.






Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme using your profiles, see page 23. Alternatively, press  >  **Control panel** > **Themes**, scroll to the theme, and press **Options** > **Select**.



Note: When you apply a theme, your current profile will be updated.

To **download** a theme, see page 66.

To **delete themes you downloaded**, press  >  **Control panel** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

To **view** a theme, press  >  **Control panel** > **Themes**, scroll to the theme, and press **Options** > **View**.

time & date

To **manually** set the time and date, press  >  **Control panel** > **Device** > **Time & date** > *date* or *time*.

answer options

You can use different ways to answer an incoming call:

Find it:  >  **Control panel** > **Call settings**

options
Active Answer Answer by opening the slider.
Auto Answer Answer automatically when a wired headset is connected after duration set in seconds.
Answer Any Key Answer by pressing any key.

calls







To make and answer calls, see your Quick Start Guide.



turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added. A record of **dialled numbers**, **missed calls**, and **answered calls** can be viewed in the Recent Calls feature, and your missed calls are also shown in the calls plug-in on the Home screen (see your Quick Start Guide).



Find it:  >  **Recent calls**, then press left or right to switch between tabs **All** () , **Dialled** () , **Missed** () , or **Answered** () .


Scroll to a call to see call details (like time and date). To call the number, press  or the *centre key* .

return a call

- 1 Press  from the Home screen to see a list of recently dialled calls.
- 2 Press left or right to scroll to the missed calls tab.
- 3 Scroll to the call you want to return, then press .

redial

- 1 Press  from the Home screen to see a list of recently dialed calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry** key to redial the number.




video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 15).



make a video call

- 1 Enter a phone number and press **Options** > **Video call** to dial the number.
- 2 To end the call, press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call on your display.



Your phone shows the caller's name and picture when they're stored in your contacts, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ring tone for an entry stored in your contacts (see page 55).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide my ID/Show my ID**.

emergency calls


Your service provider programs one or more emergency phone numbers, such as 999. Provided that the phone is switched on and in network coverage you can make emergency calls using the programmed numbers, even when your phone is locked or the SIM card is not inserted (where allowed by the network operator).

Note: Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.


Tip: If your keypad is locked press **Yes**.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, press and hold  from the Home screen.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **You have a new voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it: Press and hold  from the Home screen, or press  >  **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a contacts entry for it. Then you can use the entry to call your voicemail.

entertainment

You can do much more with your phone than make and receive calls!


media studio


Your phone's media studio contains:

- **Camera**
- **Camcorder**
- **Media Gallery**
- **Media Player**
- **Media Editor**
- **Voice Recorder**
- **Mobiclip Player**
- **ShoZu**

camera

Your primary camera lens is on the back of your phone, and your secondary camera lens is on the front of your phone (see page 2). **To get the clearest pictures, wipe the lens clean with a soft dry cloth before you take a picture.**

Note: Next to the camera lens on the back of your phone is a **camera on indicator**. This can  blink when your camera is on to let people around you know that they might be in your photo or video.

To take, edit, send as a message, or upload your photo to a Web site, see your Quick Start Guide. To launch the camera press the dedicated camera key .

Find it:  >  **Media Studio** > **Camera**

photo features

Before you capture your photo, you can press **Options** to open the camera menu:

options
Video mode Switches the viewfinder to Video mode .
Flash Mode Set your flash mode to Auto, On, Red Eye Reduction or Off .
Multishot You can take 3, 5, or 10 photos in sequence using multishot. Press 3 or 5 or 10 to set the number of photos you want to take.
Modes Change the mode of your camera (Normal, Indoor, Outdoor, Sports, Portrait, Night, and Backlight).

options
Effects Change the effect of your photo (None, Black & White, Negative, Sepia, and Solarise).
White Balance Set the white balance of your photo (Auto, Daylight, Tungsten, Fluorescent, and Horizon).
Sharpness Set the sharpness level.
Self timer Turn the self timer On or Off .
Picture size Adjust your picture size for the primary camera between XSmall (QQVGA), Small (VGA), Medium (0.8MP), Large (2MP) and XLarge (3MP) . Adjust your picture size for the secondary camera between Small (QCIF), Medium (QVGA), Large (VGA) .

options

Picture quality

Adjust your picture quality between **Low**, **Medium**, and **High**.

Settings

Set more camera features (opens **Camera Settings** menu).

After you capture your photo, you can use the navigation keys:

keys

up

Go to the **Media Gallery**.

down

Go to **Send as** menu.


keys

left

Return to viewfinder.

right

Discard and return to viewfinder.

Tip: You can also press  to return to the viewfinder.

auto focus

Auto focus is set to **On** as the default. Press

 >  **Control panel** > **Camera Settings** > **Auto Focus** > **Off** to turn autofocus off.



camcorder

Your primary camera lens is on the back of your phone, and your secondary camera lens is on the front of your phone (see page 2).

To get the clearest pictures, wipe the lens clean with a soft dry cloth before you take a picture.

Note: Next to the camera lens on the back of your phone is a **camera on indicator**. This can blink when your camera is on to let people around you know that they might be in your photo or video.



To take, edit, send as a message, or upload your video to a Web site, see your Quick Start Guide. To launch the camcorder, press the dedicated camera key  then press  right to switch to video mode.

Find it:  >  Media Studio > Camcorder

video features

Before you capture your video, you can press **Options** to open the camcorder menu:

options
Image mode
Switches the viewfinder to Camera mode .

options
Torch
Set your torch to On , or Off (primary camera only).
Modes
Change the mode of your video (Normal , Indoor , Outdoor , Sports , Portrait , Night , and Backlight).
Effects
Change the effect of your video (None , Black & White , Negative , Sepia , and Solarise).
White Balance
Set the white balance of your video (Auto , Daylight , Tungsten , Fluorescent and Horizon).
Sharpness
Set the sharpness level.

options
Video Size Adjust your video size between Small (SQCIF), Medium (QCIF), and Large (QVGA).
Video Quality Adjust your video quality between Low , Medium , and High .
Settings Set more video features.

After you record your video, you can use the navigation keys:

keys
centre Play/Pause (preview) the video.

keys
up Go to the Media Gallery .
down Go to Send as menu.
left Return to viewfinder.
right Discard and return to viewfinder.


media gallery

Use the Media Gallery to manage your multimedia content.

Tip: You can use a removable memory card with your phone to store more media files (see page 69).



Find it:  >  **Media Studio** > **Media Gallery**



Tip: You can also press the media gallery key . For the media gallery key location see page 2.

play music

To play music, see your *Quick Start Guide*.

For more music and media player details, see page 35.

view photos

In the Media Gallery, press  left or right to scroll to the photos tab. Select a photo to view it. You can now press  left or right to scroll through your photos.


To edit, or delete photos you've taken, see page 65.

play videos

To play videos, see your Quick Start Guide.

To delete, or manage videos you've recorded, see page 65.

play sounds and ring tones

In the Media Gallery, press  left or right to scroll to the sounds and ring tones tab. Select a sound or ring tone to start playing it.

download multimedia

To download music tracks, videos, pictures, sounds or ring tones from the Internet, see page 65.



media player

play music

To play music, see your Quick Start Guide.

manage playlists

Find it:  >  **Media Studio** > **Media Gallery** > Music tab > **Playlists**

Press  up or down to scroll to a Playlist, and press the *centre key*  to select it or press **Options** to open the menu:

options
Open Show your playlists.
Play Play your selected playlist.
New Playlist Create a new playlist (see next section).
Rename Rename a playlist.
Delete Delete a playlist.
Sort by Sort your playlists by Name or Date .

options

Find

Search for a playlist.

Details

View details of a playlist.

To **create a playlist**:

- 1 In the **Playlists** tab press **Options > New Playlist**.
- 2 Enter a name for your playlist and save the changes.
- 3 Open a song list, select each song you want to add and save your changes.

music router

To select which device you want to use to play your music or multimedia audio, such as handsfree headset or music system.

Find it:  >  **Control panel > Audio Routing**

play videos

To play videos, see your *Quick Start Guide*.

media editor

See the help feature provided with the software for details.

edit image

Find it:  >  **Media Studio** > **Media Editor** > **Edit image**

To edit a photo, see your *Quick Start Guide*.

When editing an image press **Options** to open more editing functions:

options
Rotate left
Rotates your photo 90 degrees to the left.

options
Open file
Show your photos.
Undo
Undo last action.
Flip
Horizontally or vertically flip your photo.
Clipboard
Use a clipboard to Copy and Paste selected areas of your photo.
More
Add text or Add clipart , change the Effect or Colour , or Resize your photo.
Send as
Go to Send as menu.

options
Save Save changes to your photo.
Save as Save to a different file name.
New photo movie Load up the photo movie editor with the image being edited.

edit video

Find it:  >  **Media Studio** > **Media Editor** > **Edit video**

To edit a video, see your *Quick Start Guide*.

make photo movie

Find it:  >  **Media Studio** > **Media Editor**
> **Make photo movie**

To make a photo movie, see your *Quick Start Guide*.


create a movie

Find it:  >  **Media Studio** > **Media Editor** > **Storyboard**



To create a movie, see your *Quick Start Guide*.

voice recorder

Find it:  >  **Media Studio** > **Voice**

Press the *centre key*  to start and stop recording. Your recorded sounds are saved in the **Media Gallery** sounds/ring tones folder.

play movie on memory card

Find it:  >  **Mobiclip Player**

In **Mobiclip Player**, select the movie you want to play. To pause the movie press either the left or right soft key.

Select Resume to continue to play the movie and Back to return to the Mobiclip Player list.

ShoZu

Find it:  >  Media Studio > ShoZu

Use ShoZu to upload your photos and videos from your phone to a Web site, such as Flickr or YouTube (other online storage sites are available). See your *Quick Start Guide* for details.




Web browser

Your phone is provided with a fully featured WEB and WAP browser so you can connect to the Internet.



To start your Internet connection press

 >  Web.

Use the navigation key  to scroll between items on the page.

Your browser provides shortcuts to common tasks from the **Options** menu:

key	shortcut
#1	Go to Web page.
#2	Go to Bookmarks.
#3	Close current window.
#4	Go to your home page.
#5	Show images.
#6	Display in full screen mode.
#7	Display the next browser window.
#8	Set your Internet preferences.
#9	Add the current Web page to your Bookmarks
#0	Stop (when page is loading) or refresh the current page.
##	Go to the top or bottom of the page.

key	shortcut
#*	Find text on the current page.

To download music, videos, pictures, and more from the Internet, see page 66.

open a Web page

- 1 Press **Options** > **Go to web page** and enter the Web address, such as www.motorola.com.
- 2 If necessary, select **Options** > **Open in new page**.
- 3 Press **Options** > **Open**.

manage bookmarks

To see your bookmarks press **Options** > **Bookmarks**. To manage your bookmarks press **Options** to open the bookmarks menu:

options
Open Opens your bookmarked Web page.
Add bookmark Add a bookmark.
Edit bookmark Edit a bookmark.
Delete Delete a bookmark.
Send bookmark as Send bookmark in an MMS message or via Bluetooth.
Open in new page Opens your bookmarked Web page in a new page.

screen format

You can choose the screen format used to display your Web pages, such as **Full screen** or **Landscape**.

Press **Options > Settings** and select one or more from **Fit to screen**, **Full screen**, and **Landscape**.

messaging

messaging

You can send and receive SMS, MMS, and email messages from the messaging feature. For more messaging features, see page 58.

send a message

Find it:  >  **Messaging** > **Create new message** > **SMS** or **MMS** or **Email**

- 1 Select **To** to add a recipient. Enter the recipient's number or address, or press **Contacts** and select a contact.
- 2 Scroll down to **Subject** to enter a subject (optional).

- 3 Scroll down to the text entry field and press keypad keys to enter text on the page (for details about text entry, see page 17).


To insert a **picture, sound, or other object** on the page, press **Options** and select the **Add** or **Insert** menu.

To insert **another page** in your MMS, press **Options** > **Page options** > **New page**. You can enter more text and objects on the new page.

Note: SMS, MMS and email messages allow different types of objects to be added to your message. All available options are displayed in the **Add** and **Insert** menus.

- 4 When you finish the message, press **Send** or **Options** > **Send** to **send** the message.

receive a message

When you receive a new message, your phone plays an alert. Also, the display shows **New message** with a message indicator, such as , and the Home screen messaging plug-in is updated. Press the **View** key to open the message.



To see all of your messages:

Find it:  >  **Messaging** > **Messages Inbox** or **Email Inbox**

Tip: You can use the **⬅** left and right keys to scroll between folders, such as **Inbox**, **Outbox**, **Draft**, **Sent**, **SIM**, and **Templates**.

instant messaging

Use instant messaging to share messages with your friends and see their online status - all in real time.

Find it:  >  **Instant Messaging** > **Log In**

If you don't have an IM account, see below.

Once you are logged in, a list of your IM contacts is displayed showing their online status.

To **add IM contacts** to your list, press **Options** > **Search for buddy**. Press **Add** to add a contact to your list.

To **start a conversation**, scroll to an online contact and press **Options** > **Chat**.

To **open an active conversation**, scroll to the contact in the list and press **Options** > **View conversation**.

To **switch between conversations**, press **Options** > **Go to conversation** while viewing a conversation.

To **end a conversation**, press **Options** > **End chat**.

You can leave the instant messaging application at any time and remain logged in. When you receive a new instant message, your phone plays an alert and shows **New instant message**. Press **View** to open the message.

To **log out** from your instant messaging session, press **Options > Log Out**.

create or edit an IM account

Note: If you need to create or edit an IM account, contact your network service provider for your account details such as username and password.

To **create** a new IM account:

Find it:  >  Instant Messaging > Options > Configure

To **edit** an existing IM account:

Find it:  >  Instant Messaging > Options > Settings
> General & account

connections

Bluetooth[®] wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth audio device, such as a handsfree headset or music system. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a handsfree or music device


Before you try to connect your phone with a handsfree or music device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it:  >  **Connectivity** > **Bluetooth**
> **Enabled audio devices** tab > **New device**

If Bluetooth is switched off, you will be prompted to turn it on. Your phone now lists the devices it finds within range:

- 1 Scroll to a device in the list and press the *centre key* .



- 2 If necessary, press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as 0000) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  is highlighted in the status bar.


Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on. During a call, you can press **Options** > **Audio** > **Earpiece** to connect to a handsfree device you have used before.


connect to another Bluetooth device

Before you try to connect your phone with another Bluetooth device, make sure the device is **on**.

Find it:  >  **Connectivity** > **Bluetooth** > **My devices** tab > **New device**

If Bluetooth is switched off, you will be prompted to turn it on. Your phone now lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *centre key* .
- 2 If necessary, press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as 0000) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  is highlighted in the status bar.

send files to another device


You can send a media file, contacts entry, agenda event and more from your phone to a computer or other device.







Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options > Send as > Bluetooth**.
- 3 Select a recognised device name, or **New device** to search for the device where you want to copy the file.



If your phone could not send the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the highlighted Bluetooth indicator  in the status bar when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your display, turn on your phone's Bluetooth feature by pressing  >  **Connectivity** > **Bluetooth** > **Bluetooth on**. 

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Connectivity** > **Bluetooth** > **Visible to other devices**.


- 2 Press the **Accept** key on your phone to accept the file from the other device.

 
Your phone notifies you when file transfer is complete. A Bluetooth message is received in your Messaging inbox.

connect your phone to a computer

You can use a USB cable or a Bluetooth connection to connect your phone to a computer.

cable connection

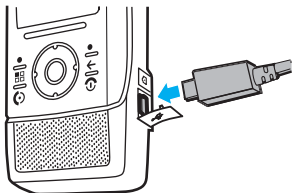

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.



Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need.



On your phone:

- 1 Disconnect the cable from your phone, if it is connected, then press  >  **Connectivity** > **USB Selector**.
- 2 Connect the cable to your phone and to an available USB port on your computer.
- 3 Select a USB personality from the list displayed:
 - **Modem** - Use your phone as a modem for your computer. To make **data calls** through a connected computer, see page 62.
 - **PC Connect** - Use your Motorola PcSync software to transfer data and synchronise contacts, agenda, tasks and email (see page 50).
 - **Mass Storage** - Access your memory card data using your computer's "My Computer" feature.

On your computer:

If you have selected **Mass Storage** as the USB personality:

- 1 Open your “My Computer” window, where your phone’s memory card appears as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows (you may need to create the folder structure on your memory card):

music:

> media files > audio > music

sounds and ringtones:

> media files > audio > ringtones

pictures:

> media files > image

videos:

> media files > video

Note: Do not use capital letters in folder names.

You can also use the Multimedia Services plug-ins supplied on the CD to work with Windows Media Player to transfer files.

- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”
- 5 Disconnect the cable from your phone and computer.

Bluetooth connection

You can use a Bluetooth connection to connect your phone to a computer. To do this see “connect to another Bluetooth device” on page 46. You can use your Motorola PcSync software to transfer data and synchronise contacts, agenda, tasks and email. See

the help feature provided with the software for details.

Companion CD

You are provided with a Companion CD, which includes PC and phone software (refer to the CD for details).

Note: Your MOTO Z10 is not compatible with Motorola's Phone Tools software.

Motorola PcSync

Motorola PcSync software is provided on the Companion CD and enables you to transfer files, synchronise contacts and email, backup your phone, and much more. You may need to temporarily turn off anti-virus and firewall software while installing PcSync software on your PC. Please refer to the PcSync troubleshooting guide on the CD for details.

For PcSync software updates and support, visit: www.motorola.com/uk/support/z10 and select **Software and Drivers**.

PC specification

The Companion CD and Motorola PcSync software are designed to work with the following minimum PC specification:

- Microsoft® Windows® 2000 Professional SP4, Windows XP™ Home SP1 & SP2, Windows XP™ Professional SP1 & SP2 or Windows Vista™.
- PC with 500 MHz or higher processor clock speed.
- 256 megabytes (MB) of RAM.
- 1.5 gigabytes (GB) of available free hard disk space.
- Super VGA (800 x 600) video adapter and monitor.

- CD Drive, keyboard and mouse or compatible pointing device.

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated and register for free update notifications at:



<http://www.hellomoto.com/support/update>

Note: Software updates do not affect your contacts entries or other personal entries. If you receive a software update but choose to install it later, see page 62.

Note: You may want to copy your data to your memory card (see page 69) or computer (see page 48) to ensure no data is lost.

other features

advanced calling

features

international calls

If your phone service includes international dialling, press and hold **0** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options > Mute** to put all active calls on mute.

features

call waiting

When you're on a call, you'll hear an alert if you receive a second call. Press **☎** to answer the new call. To switch between calls, press

Options > Switch.

- To connect the calls in a conference call, press **Options > Link calls.**
- To end the call on hold, press **Options > End Call On Hold.**

To turn the call waiting feature on or off, press


☰ > ⚙ Control panel > Call settings > Call waiting > Voice call waiting or Video call waiting > Mark or Unmark.

features

conference call



During a call:


Dial the next number, press , and press

Options > **Link calls**

transfer a call



During a call:

Options > **Transfer**, dial transfer number, press .

call divert



Set up or cancel call divert:

 >  **Control panel** > **Call settings** > **Call Divert**

Choose **Voice**, **Video**, **Fax**, or **Data** and then select which type of calls to forward and the phone number to forward the calls to.

restrict calls and messages



features

call barring



Restrict outgoing or incoming calls:

Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.

 >  **Control panel** > **Call settings** > **Call barring**

features

block calls and text messages

You can add phone numbers and email addresses to your block lists. The block list stops all calls, text messages and emails from a number or email address.

To activate your block list:

 >  **Control panel** > **Kill filter** > **Block list tab** > **Enable**

To add a number or email address to your block list:

 >  **Control panel** > **Kill filter** > **Block list tab** > **Add**

features

allow calls



You can add phone numbers from your contacts to your allow lists. An activated allow list only allows calls from the phone numbers in your contacts that you have added to that allow list. You can have a number of allow lists.

To activate your allow list:



 >  **Control panel** > **Kill filter** > **Allow list tab**

> select allow list > **Activate**

To add a new allow list:

 >  **Control panel** > **Kill filter** > **Allow list tab** > **New**



To add a number to your allow list:

 >  **Control panel** > **Kill filter** > **Allow list tab**

> select allow list > **Open** > **Add**

features

To associate your allow list with a profile:

 

 >  **Control panel** > **Profiles:** *profile name*
> **Options** > **Edit** > **Calls tab** > **Kill filter allow list**

contacts

For basic contacts features, see your Quick Start Guide.

features

assign a speed dial key to a contacts entry

You can assign the keys  through  to contacts entries. Then, when you press and hold a key from the Home screen, you can make a voice call, video call or send a message to the contact.

Press  >  **Control panel** > **Speed Dial** and assign a key.



features

use the speed dial key for a contacts entry

To **use a speed dial key** that you assigned to a contacts entry, just press and hold the key from the Home screen.

edit or delete a contacts entry



Edit a number stored in the contacts:

 >  **Contacts**, scroll to the contacts entry, and press **Options**. You can select **Edit contact**, **Delete**, or other options.

Shortcut: In the contacts, press keypad keys to enter the first letters of an entry you want.

set ring tone for a contacts entry



Assign a ring tone to an entry:

 >  **Contacts** > *entry*, then press **Options** > **Edit contact** > **Ring tone** > *ring tone name*

features



set video for a contacts entry

Assign a video to an entry:



 >  **Contacts** > *entry*, then press
Options > **Edit contact** > **Ring tone** > **Find media**
> *video name*

set image for a contacts entry

Assign a photo or picture to show when you receive a call from an entry:



 >  **Contacts** > *entry*, then press
Options > **Edit contact** > **Image** > *image name*

set category for a contacts entry

 >  **Contacts** > *entry*, then press
Options > **Edit contact** > **Category** > *category name*

features



set category view for contacts

 >  **Contacts**, then press **Options** > **View category**
> *category name*

You can show **All phone contacts** entries in a category you create.



create group mailing list

You can put several contacts entries in a group mailing list, then send a message to the list. To create a list:

 >  **Contacts**, then press **Options** > **New group**

sort contacts list



Set the order in which entries are listed:

 >  **Contacts**, then press **Options** > **Settings**
> **Sort by** > **Last name, First name** > **First name, Last name** or
Company, Last name or **Company, First name**

features



copy one contacts entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone contacts:

 >  **Contacts**, scroll to the entry, press **Options** > **Add to** > **SIM** or **Options** > **Copy to Contacts**

copy multiple contacts entries



Copy multiple contacts entries between the phone and SIM card:

 >  **Contacts**, then press **Options** > **Marking** > **Mark** or **Mark all** and then **Options** > **Add to** > **SIM** or **Options** > **Copy to Contacts**

features

send contacts entry to another device

Send a contacts entry to another phone, computer, or device:

 >  **Contacts**, scroll to the entry, press **Options** > **Send as**

For more information about sending files via Bluetooth, see page 45.

back up contacts

Back up your contact entries to your memory card:

 >  **Contacts** > **Options** > **Contact manager** > **Back up**

restore backed up contacts

Restore your backed up contact entries:

 >  **Contacts** > **Options** > **Contact manager** > **Restore**



advanced messaging


For basic messaging features, see page 42.

Your phone reads message settings from the SIM card. If you put another SIM card in your phone, your phone sends and receives messages for the phone number on the new card.

features

send voice message

 >  **Messaging** > **Create new message** > **MMS**
or **Email** > **Options** > **Add sound** > **Record sound**

Press the *centre key*  to start and stop recording.

Your phone inserts the voice recording into the message.

features


save a message as a template

 >  **Messaging** > **Create new message** > **SMS**
or **MMS** or **Email** > **Options** > **Save as template**

read and manage messages

 >  **Messaging** > **Messages Inbox**

To **Reply**, **Forward**, or **Delete message**, scroll to the message and press **Options**.

To open a message, press the *centre key* .

Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.


features

read and manage email



 >  **Messaging** > **Email Inbox**

To **Reply**, **Forward**, or **Delete** an email, scroll to it and press **Options**.

To open an email, press the *centre key* . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects





Go to a multimedia message, or scroll to an object in a message, then press **Options** > **Store**.

features

edit email settings



You can edit the settings for your email connections. To use email, you need to store your email **Account name** and details.

 >  **Messaging**, then press **Options** > **Settings** > **Email accounts**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **Account name** and details.

Note: To create a new account, select **Options** > **New** in the **Email accounts** list. Your display shows a folder for each email account under

 >  **Messaging** > **Email Inbox**.

device settings

features



location

Set time zone location:

 >  **Control panel > Device > Location**

language

Set menu language:

 >  **Control panel > Device > Select language**

features

master reset

Caution: Master reset can **erase all information you have entered** (including contacts and agenda entries) **and content you have downloaded** (including applications, photos, and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  **Control panel > Device > Master Reset**


Note: You may want to copy your data to your memory card (see page 69) or computer (see page 48) to ensure no data is lost.

storage wizard




View and free up memory storage.







 >  **Control panel > Device > Storage wizard**

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.





The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features	
call times	
Show call timers:	
 >  Control panel > Call settings > Call Timers	

features	
in-call timer	
Show time or cost information during a call:	
 >  Control panel > Call settings > In Call Timer	
call charges	
Show call charges trackers:	
 >  Control panel > Call settings > Call Charges	

data calls

To connect your phone with a USB cable, see page 48.

features	
send data	
Connect your phone to a computer, then place the call through the computer application.	
receive data	
Connect your phone to a computer, then answer the call through the computer application.	

network

features

network settings





See network information and adjust network settings:

 >  **Control panel** > **Network settings**

device update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:

 >  **Control panel** > **Device** > **Device management**




Note: You may want to copy your data to your memory card (see page 69) or computer (see page 48) to ensure no data is lost.

agenda

features




add new agenda event

Your agenda can store events (**Appointment**, **Reminder**, **All day event** and **Anniversary**).

 >  **Agenda**, scroll to the day, press , press **Options** > **New**

see agenda event

See or edit event details:

 >  **Agenda**, scroll to the day, press 




event reminder

When an event reminder happens: To see reminder details, press the **View** key. To close the reminder, press the **Back** key.

features

send agenda event to another device

Send an agenda event to another phone, computer, or device:

 >  **Agenda**, scroll to the day, press , scroll to the event, press **Options** > **Send this category**

tools

features


set alarm

 >  **Tools** > **Time & Alarm** > **Wake up!** or > **Lunchtime** or > **Early night** > **Options** > **Edit**

Note: The alarm sounds even if your phone is turned off.

features

turn off alarm

When an alarm happens: To turn off the alarm, press the **Done** key or .

To set a delay, press the **Snooze** key.

Note: The **Snooze** key is available only if the phone is already powered on when the alarm sounds.

to do

 >  **Tools** > **To Do**

calculator

 >  **Tools** > **Calculator**

jotter

 >  **Tools** > **Jotter**

file manager

 >  **File manager**

security

features

SIM PIN

Note: Some service providers may require you to enter a subsidy unlock code. To enter your subsidy unlock code, enter ****057***, then enter the code provided by your service provider.

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.



Lock or unlock the SIM card and/or change PIN1 and PIN2 codes:

 >  **Control panel** > **Security** > **SIM PIN**



features

manage certificates

Enable or disable Internet access or Java™ certificates stored on your phone:

 >  **Control panel** > **Security** > **Certificate manager**

or

 >  **Control panel** > **Security** > **Java certificates**

pictures, videos & games


For basic information on the camera, see your Quick Start Guide.

features

view, delete, or manage multimedia files

Manage photos, pictures, animations, videos, ring tones, sounds and music:

 >  **Media Studio** > **Media Gallery** > tab



To view a file, scroll to it in the list and press the *centre key* . To **delete** a file and for other options, press **Options**.

features

download objects from Web page



Download a picture, sound, or other object from a Web page:



 >  **Web**, go to the page that links to the file, scroll to the link, and select it.

Note: You can start playback of media immediately, you do not need to wait for the download to complete.

download game or application






You can download a Java™ game or application the same way you download pictures or other objects:

 >  **Web**, go to the page that links to the file, scroll to the link, and select it.

features



install or uninstall



To install or uninstall an application, simply scroll to the application in  >  **Control panel** > **Install** or **Uninstall** and press the *centre key* .

start game or application



To start a Java™ game or application, simply scroll to the game or application in the main menu or  **Games** and press the *centre key* .


flight mode

features

flight mode

You can switch your phone to flight mode to prevent it from communicating with the network. This lets you play music, games or other applications while you are on an airplane, without interfering with airplane communications.

Note: Your phone cannot make Bluetooth® connections when **Flight Mode** is on.



Press and hold  until the power menu is displayed and select **Flight Mode**.

advanced Bluetooth features

Note: A device is *recognised* after you have paired or bonded with it (see page 45).

features

change your phone's name

 >  **Connectivity** > **Bluetooth** > **My phone name**

make phone visible to other devices

Allow a Bluetooth device to discover your phone:

 >  **Connectivity** > **Bluetooth** > **Visible to other devices**



enable power saving

 >  **Connectivity** > **Bluetooth**
> **Enable power saving**

features

connect to recognised device

Connect your phone to a recognised device:

 >  **Connectivity** > **Bluetooth** > **My devices**
> *device name*

disconnect a headset or handsfree device

 >  **Connectivity** > **Bluetooth**
> **Enabled audio devices**

Scroll to the device name and press
Options > **Disconnect**.

switch to headset or handsfree device during call

During a call, press **Options** > **Audio** > device name,
to switch to a recognised headset or car kit.

features

copy multimedia object to device

Scroll to the object, press **Options** > **Send as**
> **Bluetooth**, select the device name. You cannot
copy some copyrighted files.



memory card

For basic information on the memory card, see your *Quick Start Guide*.

features

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as

 >  **File manager** press left or right key to select the phone or memory card tab and press up or down key to select a folder.

To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Edit > Copy to** or **Move to > Memory card tab > folder Options > Copy** or **Move**. You cannot copy or move some copyrighted files.

features

memory card name, available memory and other information

To see your **memory card name, available memory**, and other information about the card:

 >  **Control panel > Device > Storage wizard**

rename memory card

 >  **Control panel > Device > Format disk > Options > Rename**

protected content

features

store and use protected content

If you try to play a copyrighted file, it might ask you to download a license. Some licenses only let you play a file for a certain number of times or days.

For example, a license may allow you to play the content of your download five times or use the content for three days before it expires.

You cannot send, copy, or change copyrighted files.

To download a file, see page 66. To activate downloaded copyrighted files, simply open the file.

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.05 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.47 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 2. Please see the *Safety and General Information* section about body worn operation.

index

A

- accessories 10
 - advanced calling 52
 - agenda 63
 - alarm clock 63
 - alarm clock off 64
 - alert
 - turn off 19, 26
 - allow calls 54
 - animation 65
 - answer a call 25
 - application 66
- ## B
- back up 57
 - battery charging 13
 - battery charging indicator 2
 - battery level indicator 17

- block calls and text messages 54
- Bluetooth 46
 - change your phone's name 67
- bluetooth
 - disconnect a headset or handsfree device 68
 - enable power saving 67
 - make phone visible to other devices 67
- Bluetooth connection
 - calendar entry, sending 63
 - contacts entries 57
 - description 45
 - indicator 46
- Bluetooth indicator 16
- bumper bar 2

C

- cables 48
- calculator 64
- call
 - answering 25
 - barring 53
 - divert 53
 - ending 14
 - timers 61
 - waiting 52
- call key 2
- caller ID 27, 56
- calls indicator 16
- camcorder 32
- camera 30
- camera key 2
- categories 56
- centre key 2, 10

- certificates 65
- clear key 2
- Companion CD 50
- conference call 53
- connect to another device 46
- connect to computer 48
- contacts 55, 56, 57
 - phone's memory 21
 - SIM card 21
- contacts entries 57
- copy 57
- copy files 46
- copyrighted files 70
- costs, tracking 61

D

- data call 62
- date, setting 25
- device settings 60
- dialled calls 26
- display 4

- divert calls 53
- downloaded files
 - from Web pages 66
 - in messages 59
- DRM
 - store and use protected content 70

E

- earpiece volume 19
- email
 - reading and managing 59
 - settings 59
- emergency number 28
- end a call 14
- end a video call 27
- end key 2, 14
- event 63
- event reminder 63

F

- fax call 62
- file manager 64
- flight mode 67

G

- games 66
- group mailing list 56

H

- handsfree microphone 2
- handsfree speaker 20
- hold a call 52
- Home screen 4, 10, 14

I

- IM 43
- in-call
 - timers 61
- Incoming Call message 27
- install 66
- instant messaging. See IM

international access code 52
internet 39, 66
iTAP text entry mode 18

J

Java applications 66
jotter 64

K

keypad
 lock and unlock 20

L

language 60
licenses 70
linking. See Bluetooth connection
location 60
lock
 SIM card 64

M

main menu 4, 15
master reset 60
media editor 37
media gallery 34
media gallery key 2
media player 35
media studio 30
memory card
 information 69
 rename 69
memory card name
 available memory
 other information 69
menu 15
menu icons 15
menu key 2, 10
message 58
message alerts 24
message indicator 16, 43
message template 58

messaging 42
Motorola PcSync 50
multimedia message 58
multi-tap text entry mode 18
music router 36
music volume 20
mute a call 52

N

navigation key 2, 10
network indicator 16
network settings 62
numeric entry mode 19

O

object exchange 46
optional accessory 10
optional feature 10

P

- pairing. See Bluetooth connection
- phone updates 51
- photo 30, 65
- picture 65
- picture ID 27, 56
- PIN code 64
- play videos 37
- plug-ins 14, 24
- profiles 23

R

- receive 62
- received calls 26
- recent calls 26
- redial 27
- restore 57
- return a call 26
- ring style 23

- ringer ID 27, 55
- ringer volume 20
- roam indicator 16

S

- screen brightness 24
- screen saver 24
- secondary camera lens 2
- ShoZu 39
- signal strength indicator 15
- SIM card 64
- SIM locked message 64
- soft keys 2, 15
- software update 62
- sort 56
- sound mode indicator 17
- sounds 24
- speed dial 55
- status indicators 15
- storage wizard 60
- symbol entry mode 19

T

- text entry 17
- text message 58
- theme 23
- themes 24
- time, setting 25
- timers 61
- to do 64
- tools 63
- transfer a call 53

U

- uninstall 66
- unlock
 - SIM card 64
- USB cables 48

V

- video 32
- video call
 - ending 27
- video ID 56

voice call ring tones 24

voice message 58

voice recorder 38

voicemail 28

voicemail message

indicator 16, 28

volume 19, 23

volume keys 2

W

web 39, 66

U.S. patent Re. 34,976

www.motorola.com

