





Google™

Chrome OS USER GUIDE

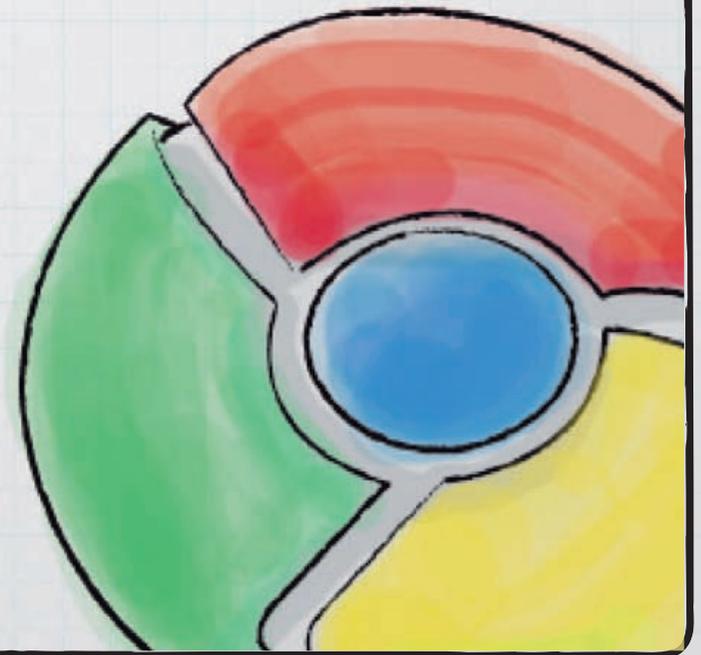



 o. Before Reading This Guide



This guide describes the general functions of Chrome OS. Some functions may differ depending on the Chrome OS version or the Chromebook model.

o. Copyright

© 2011 Samsung Electronics Co., Ltd.

Samsung Electronics Co., Ltd. owns the copyright of this manual.

No information contained herein may be distributed or copied in any form whatsoever without the prior written consent of Samsung Electronics Co., Ltd.

Information in this guide is subject to change due to functional enhancements of the product and other reasons without prior notice.

CONTENTS



1. Getting Started

- What is a Chromebook?
- Traditional notebook vs. Chromebook
- Connecting to the Internet
- Creating a Google Account
- Signing In
- Viewing Help

2. Using Chromebook

- Using Browsers
- Using shortcuts
- Printing
- Using Google Chrome web store

3. Changing Configurations

- Various setups
- Customizing the browser option
- Removing the browser history
- Setting up the bookmark

4. FAQ

- Login
- Network Setting
- Printing



1 Getting Started

- What is a Chromebook?
- Traditional Notebook vs. Chromebook
- Connecting to the Internet
- Creating a Google Account
- Signing In
- Viewing Help



What is a Chromebook?



A Chromebook is portable computer that is optimized for internet use. By removing complex functions, it allows you to perform Web-based tasks faster than a traditional notebook.

Complex features of the existing computer are removed, so you can surf the Web faster. Built-in security system does not bother users to upgrade the Chromebook to the latest version. The user's information is always protected safely. The web-based applications such as the documents, presentations, spreadsheets, and more are also available.

Traditional Notebook vs. Chromebook

Items	Traditional notebook	Chromebook
Installing software	Can install programs.	Cannot install traditional desktop software. Instead of installing them, users can use the web-based applications.
Storing files	Can store files.	Users can use the web-based storage service.
Printing	Can install a printer driver on the computer, and then it can print.	Registers a the printer driver on Cloud Print and then it can print.
System updateing	User updates the system manually.	Automatically updated.
Device connecting	Easy to connect the additional devices with USB port, wired network port, modem, DMB, etc.	Support a limited connectivity



Connecting to the Internet



To use Chromebook, connect to the internet first.

Using a wireless network

Chromebook provides two types of wireless networking.

- Normal : 802.11 a/b/g/n
- Secured : WEP, WPA/WPA2

- 1 Click the network icon  on the top right corner.
- 2 Select **Use Wi-Fi** to search and connect to a wireless network automatically.



When a wireless network is already connected, you will see the message : **Stop**

- 3 To connect to another network, select **Join other network**.
- 4 Enter SSID and password.
- 5 Click **Connect**.
- 6 When the connection is successfully finished, you can see this icon .



- When the network connection fails, you will see this icon .
- The number of activated bars in network icon indicates the strength of the network signal.




✓ Using a wired network



1 Connect the USB internet adapter.

 The USB internet adapter should support the Linux system.

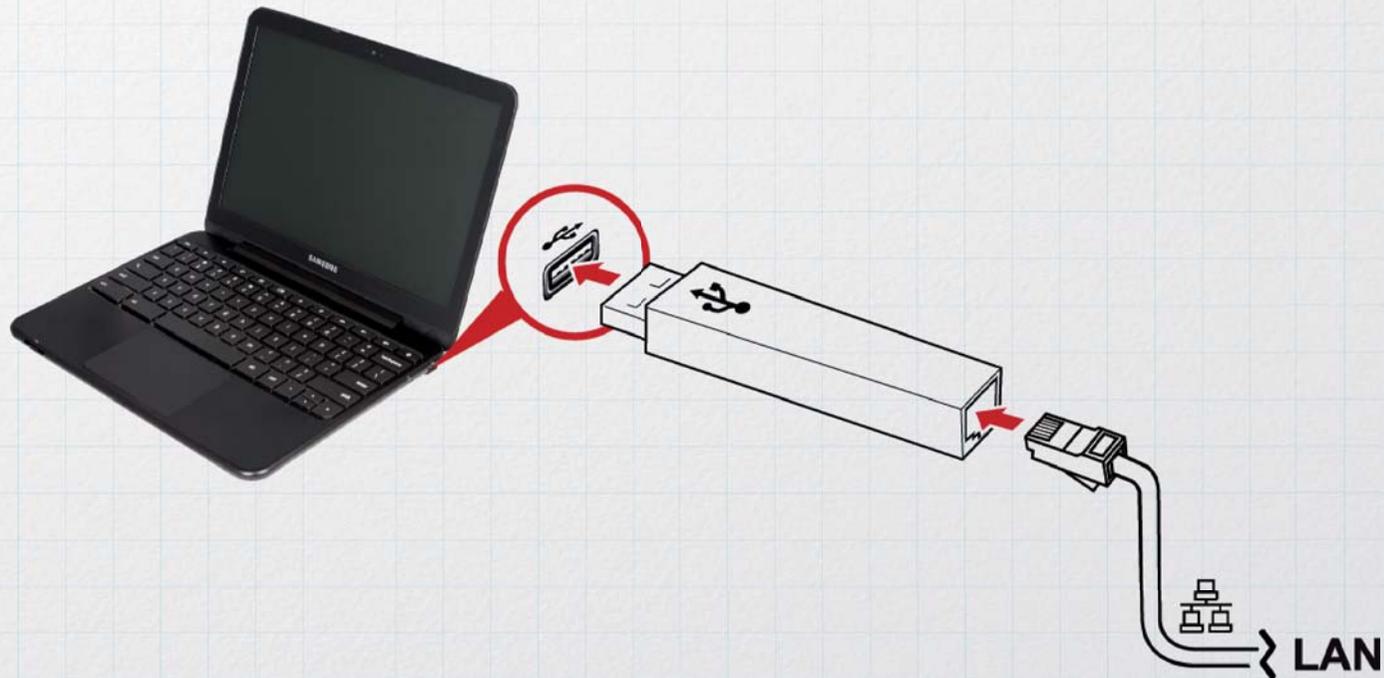

2 Click the network icon  on the top right corner.

3 Select Ethernet to search and connect to a wired network automatically.



Creating a Google Account



Chromebook recommends logging in by using your Google account. If you don't have a Google account, create one first.

- 1 Visit www.google.com/accounts/NewAccount.
- 2 Enter the information, and click **I accept. Create my account**.

Signing In

Signing in with Google account

If the notebook is already connected to the internet, log in to the Google account during start-up. If the internet is not connected, you can log on as a guest.

When you log in with your Google ID, you are automatically logged on to the Google site. You can use the various Google features such as Gmail, Google Calendar, Google Docs. Bookmarks, extensions, and other browser settings are also saved into your account. This makes it possible for you to load the settings automatically when you log on from another Chromebook.

- 1 Press the power button  on the keyboard.
- 2 Click add icon .
- 3 Enter email address and password for your Google account.
- 4 Click **Log in**.



Signing in as a guest



When the network is not connected, you do not have a Google account, or you are temporarily renting a notebook, you can sign in as a guest. Click the guest icon  when you boot up.

 The administrator can disable the guest sign-in feature.

Viewing Help

Visit www.google.com/support/chromeos. You can learn how to use Chromebook. When you need help using Chromebook, you also can search by using a keyword and find troubleshooting advice.



2 Using Chromebook

- Using browsers
- Using shortcuts
- Printing
- Using Google Chrome web store



Using browsers



✓ *Tab (Ctrl+T)*

To open a new tab, click on the Add icon  at the top of the browser.

✓ *Incognito window*

In incognito mode, the websites that you have visited and the files that you have downloaded are not recorded in the history. Bookmarks and settings can still be saved.

To open an Incognito window, perform the following:

- 1 Click the wrench icon  on the top right corner.
- 2 Select **New incognito window**.



- You can also log in as a guest to avoid leaving history.
- The website can still record your search keywords and download history in the website's account (not in the notebook).

2. Using Chromebook

12



Prediction service



Enter a keyword in the address bar, and then Google Chrome will predict possible websites or suggest extended keywords. For example, if you type **New York**, then the address bar can show **New York Times**, **New Yorker**, or **http://www.nytimes.com**.

■ Disable the prediction service

- 1 Click the wrench icon  on the top right corner, and select **Settings**.
- 2 Un-check **Use a prediction service to help complete searches and URLs typed in the address bar** From **Under the Hood > Privacy**.



Bookmarks

■ Adding a bookmark (keyboard shortcut: Ctrl+D)

Add your favorite websites to bookmarks, and then you can quickly visit the websites.

- 1 Press **Ctrl+D** or click on the star  icon.
- 2 A dialog appears to confirm the addition.
- 3 Enter the bookmark name.
- 4 Select a save **Folder**.
- 5 Click **Close** to finish.

■ Using bookmarks

The bookmarks are shown in the bookmark bar on the top of the browser. Click bookmark to navigate to a website quickly.

2. Using Chromebook

13



Search



Chromebook provides the following convenient searching features:

- The Search button  : Chromebook provides a search key  on the keyboard. When you press this key, a new tab opens. Type the keyword on the address bar, and then press The Enter key. Search results appears on the display.
- Clicking the right mouse button: Select the keyword to search, and then click on the right mouse button. Select **Search Google for 'keyword'** to start searching.
- Paste and search: Copy the keyword you want to use for your search, and then click on the right mouse button on the address bar. Select **Paste and search** to start your search.
- Select and drag: Select the keyword, and then drag it to the address bar. The result appears on the display after automatic searching.



File downloading and storing webpages

■ Downloading files

Click a file link to download. You can also click on the right mouse button and select **Save as**. The files are automatically stored in the **Downloads** folder.

■ Storing web pages (Ctrl+S)

Press **Ctrl+S** to save web page. The files are automatically stored in the **Downloads** folder.

■ Opening downloaded files (Ctrl+O)

After you download a file, the Downloads folder appears on the bottom right of the browser. When you click on a file, a proper web-based viewer automatically runs to open the file. The compatible file types are .doc, .pdf, .html, jpg and .gif, and vary from the Chrome OS version.

2. Using Chromebook

14



☑ Refreshing the browser



Chromebook provides a refresh button  on the keyboard. Click on this button when you want to refresh the browser view.


☑ Checking a webpage's security

When you connect to a webpage, Chrome browser can show you the status of internet connection, if the internet connection is not fully secured.

Subject	Icon	Meaning
Using certificates for a secure connection (SSL)		The website does not use SSL.
		The website has been securely connected with SSL.
		The website has been securely connected, but includes some unsecured contents.
Site identity		The identity of the website has been verified.
		The identity of the website has not been verified.  This is a normal status if the website uses a regular HTTP protocol.
		The identity of the website has been verified.

2. Using Chromebook

 15



Security on your connection to the site		The connection to the site is securely encrypted.
		The connection to the site is not encrypted.  This is a normal status if the website uses a regular HTTP protocol.
		The connection to the site is encrypted, but some contents can include unsecured information.  If you're connecting to the site via a public wireless networks, it is better to disconnect the site.
Visiting history		You've visited the site before.
		You've never visited the site before.  You can detect whether a vicious site is pretending to be a normal site.



Using shortcuts



The following shortcuts are provided for your convenience.

Pressing "**Ctrl+Alt+/'**" brings up the keyboard viewer. From here you can easily view the shortcuts.

Shortcuts	Description
Ctrl+N	Open a new window.
Ctrl+Shift+N	Open a new secret window.
Ctrl+T	Open a new tab.
Ctrl+O	Open a file via browser.
Ctrl+Shift+Q	Logout from the Google account.
Ctrl+W	Close the current tab.
Ctrl+Shift+W	Close the current window.
Ctrl+Shift+T	Open again the most-recently-closed tab.
Ctrl+1 ~ Ctrl+8	Move to N-th tab. For example, pressing Ctrl+2 moves the browser to the second tab.
Ctrl+9	Move to the lastly-opened tab.

2. Using Chromebook

17



Alt+1 ~ Alt+9	Move to the N-th window. For example, pressing Alt+2 moves the browser to the second window.
Alt+9	Move to the lastly-opened window.
Ctrl+Tab	Move to the next tab.
Ctrl+Shift+Tab	Move to the previous tab.
Alt+Tab	Move to the next window.
Alt+Shift+Tab	Move to the previous window.
Ctrl+H	Open the history page.
Ctrl+J	Open a download page.
Shift+Esc	Open the Task Manager page.
Ctrl+Alt+/'	Pop-up or remove the keyboard viewer.
Ctrl+?	Open the Help Center page.
Ctrl+Click a link	Open the link in a new tab, but do not move to the tab.
Ctrl+Shift+Click a link	Open the link in a new tab, and move to the tab.
Shift +Click a link	Open the link in a new window.

2. Using Chromebook

18




Printing



Chromebook supports Google Cloud Print service. If your printer supports the Google Cloud Print service, you can print without installing the driver in your Chromebook. If your printer does not support Cloud Print, you need a Windows computer. Then follow the steps below:

Connecting my printer to Google Cloud Print

- 1 Have a Windows XP, Vista, or Windows 7 computer ready.
In case of Windows XP, install **Microsoft XML paper specification pack** first.
- 2 Install the printer driver on the Windows computer.
- 3 Install Google Chrome browser on the Windows computer.
- 4 Run the Google Chrome browser.
- 5 Visit **<http://www.google.com/cloudprint>**.


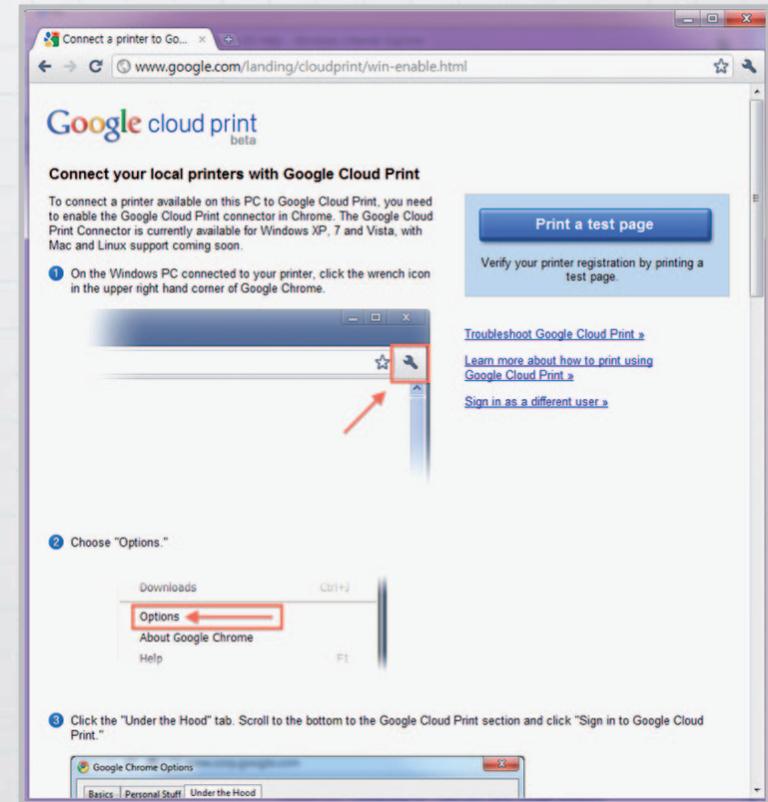


2. Using Chromebook

19



- 6 Click the wrench icon  on the top right corner.
- 7 Click **Options** > **Under the Hood** tab > **Google Cloud Print** > **Sign in to Google Cloud Print**.
- 8 Sign-in to your Google account.

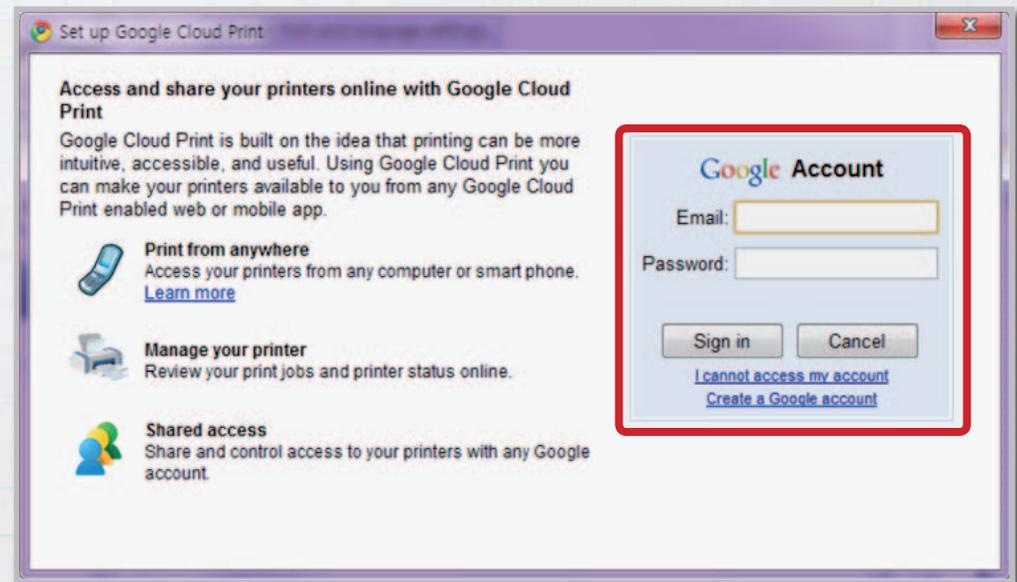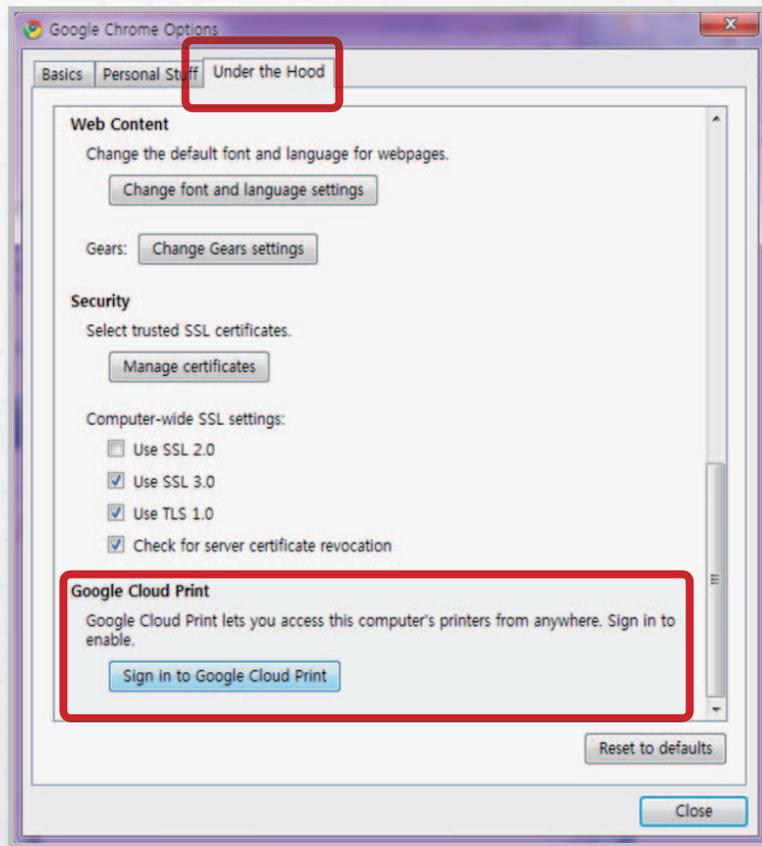

2. Using Chromebook


20



9 When you see the **Success** page, click **OK**. To print a test page, click **Print a Test Page**.



10 Click **Print a Test Page** again.

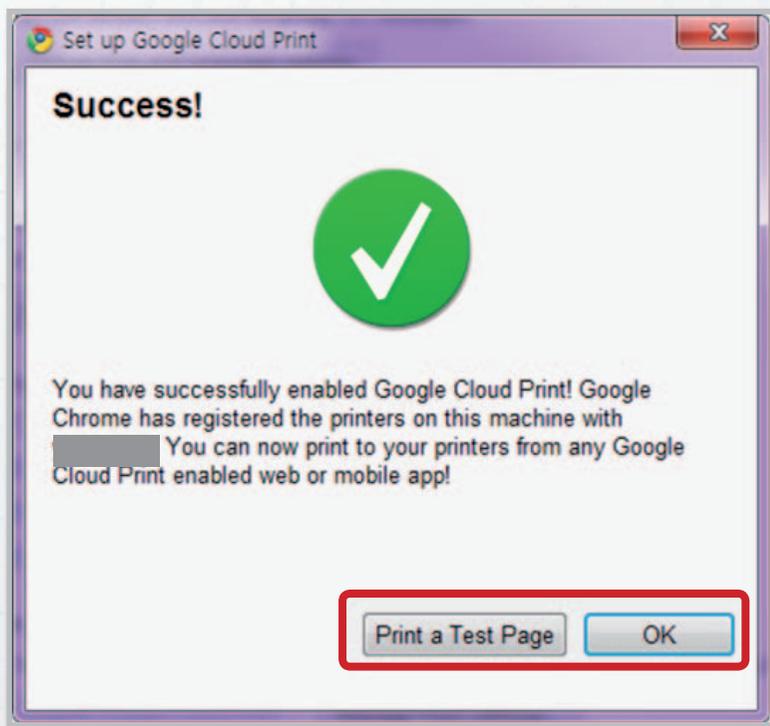


2. Using Chromebook

21



11 Select a printer to use from the list.

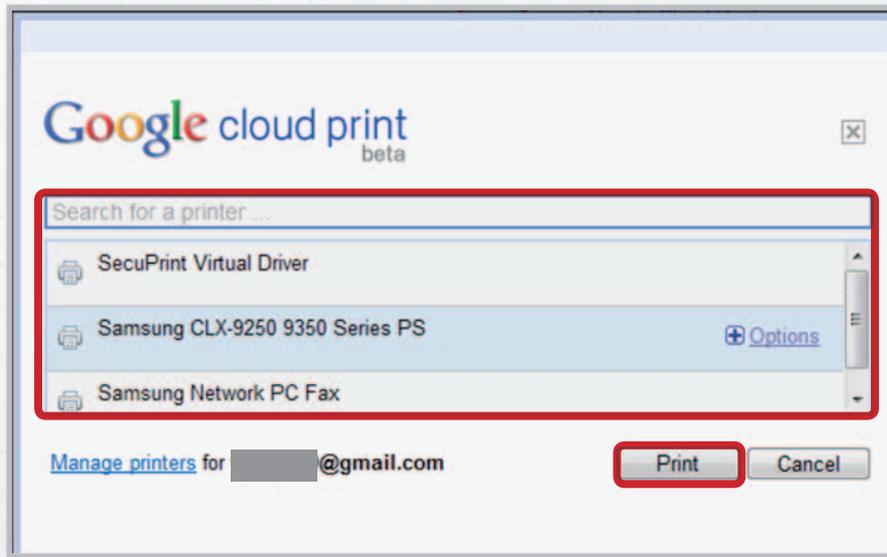

12 Click **Print**.

13 When the printer works normally, it means that the Google Cloud Print service is enabled.

14 Use the printer from your Google Chromebook.



Google Cloud Print service registers the printers in your Google account. If you share the Google Chromebook with others, each member has to enable their own service with their Google account.

2. Using Chromebook

22



Printing

- 1 Sign-in to your Google account where the printer is registered to the Google Cloud Print service.
- 2 Press **Ctrl+P** from keyboard.
- 3 A printer list dialog appears.
- 4 Select a printer to use, and click **Options** if you want to change the options.
- 5 Click **Print** to start printing.



- If the printer or the proxy computer connected to the printer is off, then the printing job is stored in your Google account. When the printer is ready, the stored jobs are automatically printed out. Visit <https://www.google.com/cloudprint/manage.html> to see the printing jobs.



Using Google Chrome web store

Google provides Chrome Web Store to buy and install applications, extensions, and themes.



- ↻ Upgrade to the latest Chrome browser before using Google Web Store.
- ↻ Google Web Store navigation can be different depending on the browser version or the system environment.
- ↻ Some applications in Google Web Store may not support Chrome OS.

- ↻ **Apps** : The application programs to run on the browser. For example, you can install the specific apps to send an email, edit documents, play music, or edit photos.
- ↻ **Extensions** : Additional features such as post-it for memo or game to run while using the web site.
- ↻ **Themes** : Background image for the browser.

2. Using Chromebook


24



Installing items from web store



1 Visit <http://chrome.google.com/webstore>.

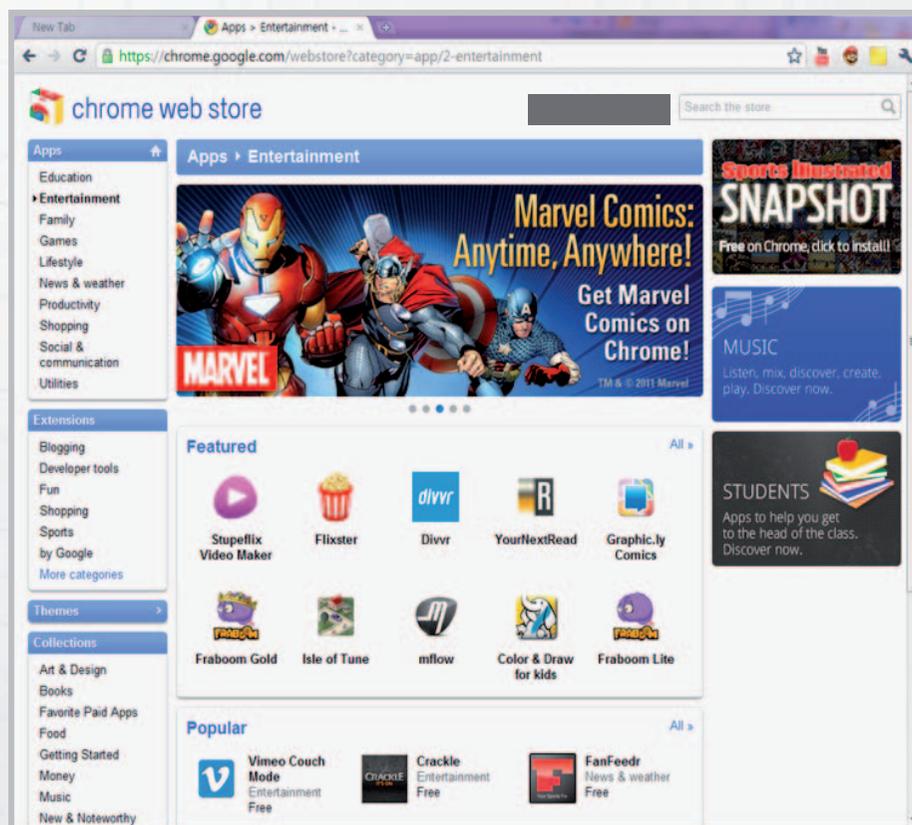


2. Using Chromebook

25



2 Select **Apps, Extensions, or Themes** to install.

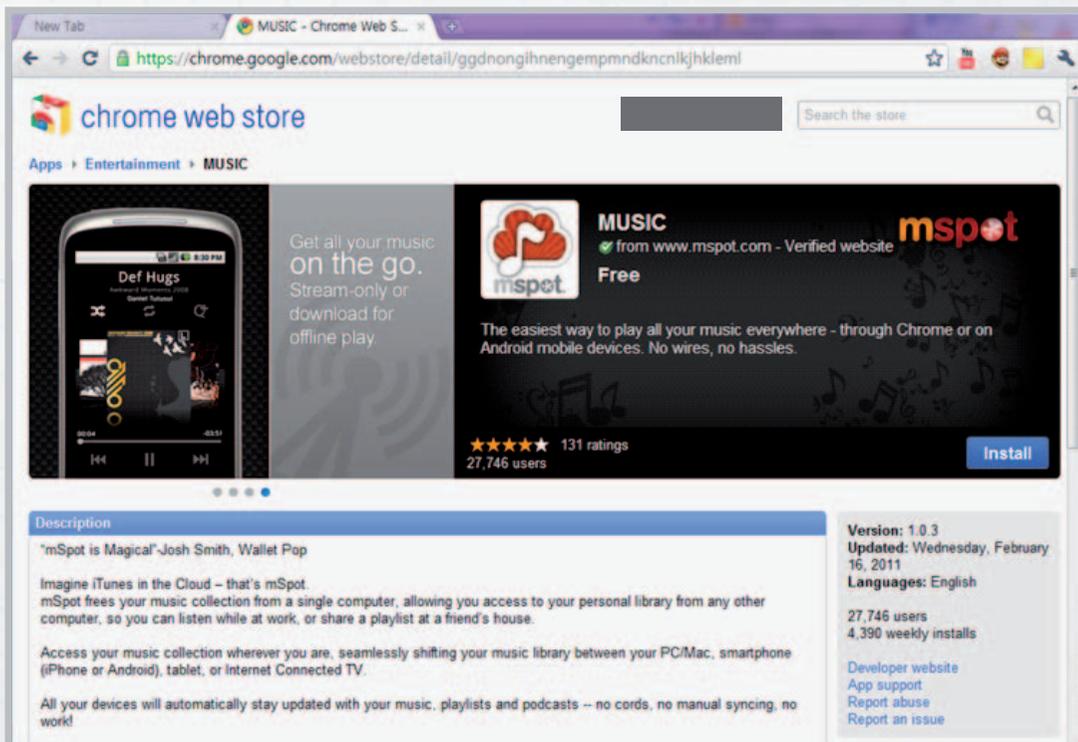

3 Click **Install**.

2. Using Chromebook


26




4 You can see the progress of installation.



9 **Apps** : When you open a new tab, you can see the new application icon on the browser.

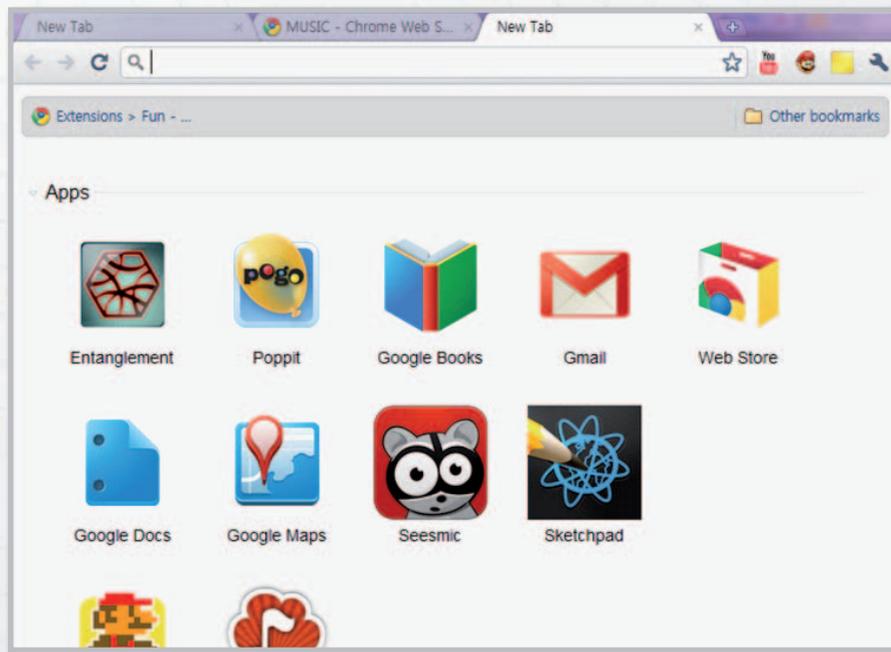

 9 **Extensions** : You can see the new extension's icon on toolbar.



9 **Themes** : The background image of the browser will be changed.



3 Changing Configurations

- Various setups
- Customizing the browser option
- Removing the browser history
- Setting up the bookmark

3. Changing Configurations

28



Various setups

Basics

On startup	Set an initial page to start. You can select home page, the last page or a specific web site.
Home page	Assign a home page. ☞ Use the New Tab page : shows installed Apps, most visited sites, or recently closed sites. ☞ Open this page : Enter a specific web site for home page.
Toolbar	Show or hide Home button at toolbar.
Search	Set a default search engine. ☞ Enable Instant for faster searching and browsing Omnibox input may be logged : Check this option to see the instant search results.

3. Changing Configurations



✔ Personal Stuff



Account	<p>See the account information for your current sign-in.</p> <ul style="list-style-type: none"> ☞ Require password to wake from sleep : Enabling this item locks the notebook when entering sleep mode. To wake up the notebook, you need to enter a password.
Synchronization	<p>Synchronize information between the Google account and the notebook. You can only define some items to synchronize. This feature allows you to create the same environment in multiple Chromebooks.</p> <ul style="list-style-type: none"> ☞ Remove synced data on Google Dashboard : You can remove the synchronization from Google dashboard (https://www.google.com/dashboard/) > Chrome sync.
Password	<p>Set password. You can configure Chrome to remember your password for automatic sign-in.</p> <div data-bbox="629 911 1957 1023" style="background-color: #e0f2f7; padding: 5px;">  When using a shared public notebook, do not enable this feature. Be careful when you enable this feature on your private notebook, other people can access your account. </div>
Form autofill	<p>Auto complete feature. Stores frequently used names, addresses and numbers, and then they pop-up while you are typing.</p>
Themes	<p>Select a background image to decorate the browser. Click Get themes > select a theme > Apply theme.</p>

3. Changing Configurations



✓ System



Date and time	Set a standard time zone for your location.
Touchpad	Set the touchpad's sensitivity. <ul style="list-style-type: none"> ☞ Enable tap-to-click : Your finger tab acts as a mouse-click.
Language	Add the display languages in Customize languages and input... <ul style="list-style-type: none"> ☞ Display Chrome OS in this language : If you added multiple languages to use, you can set a main language by clicking this button.
Accessibility	Enable accessibility features.

✓ Internet

General	Enable or disable Wi-Fi.
Wireless networks	Display the wireless networks discovered. <ul style="list-style-type: none"> ☞ Disconnect : Click to disconnect the currently connected network. ☞ Options : See detailed information. You can set this network to connect automatically when discovered. ☞ Connect : Click to connect this wireless network now.
Remembered networks	Displays network items that have been connected before. <ul style="list-style-type: none"> ☞ Forget this network : Remove the network item list.

3. Changing Configurations

31



Under the Hood



Privacy	<p>Allow or block cookies, images, JavaScript, plug-ins, pop-up windows, or location sharing.</p> <ul style="list-style-type: none">☞ Cookies : Allow or block creating cookies. Cookies are created when you visit a web site. They include the temporary record such as login information. Allowing cookies helps simple sign-in, but it increases the chance of information leakage.☞ Images : Allow or block the displaying of images.☞ JavaScript : Allow or block JavaScript-included web page.☞ Plug-ins : Some contents such as flash or movies embedded in a website need additional plug-ins to play. You can set Chrome to install the plug-ins automatically.☞ Pop-ups : Allow or block pop-ups.☞ Location : Allow or ignore the request of the location service.☞ Notifications : Allow or block websites from sending notification to the notebook.
Web Content	<p>Set the font type, font size, and page zoom used to display the web page.</p>
Network	<p>You can use the computer's system proxy settings to connect to the network. It protects your information and enhances network speed.</p>
Translate	<p>Enable the translation bar on the top of the browser window. If the languages between the web contents and OS are different, it asks whether you want to translate or not.</p>
Security	<p>Setup and manage the security certificate. You can decide whether you use SSL 3.0 or TLS 1.0.</p> <ul style="list-style-type: none">☞ Manage certificates: You can manage the certificates to identify users, servers, or certificate organization.

3. Changing Configurations

32



Users



Enable guest browsing	Allow or block guest log-in.
Show usernames and photos on the sign-in screen	To protect private information, you can decide to show usernames and photos on the sign-in screen.
Restrict sign-in to the following users	Permit access only to registered users.



Customizing the browser option



✓ *Setting up a default search engine*

- 1 Click the wrench icon  on the top right corner, and select **Settings**.
- 2 Click **Basics** > **Search**, and Select a search engine from the dropdown list. Or click **Manage search engines...** > select a search engine > **Make default**.

You can add a new search engine from Manage search engines....

- Add a new search engine : Enter a nick name.
- **Keyword** : Enter the address to link with a search engine.
- **URL with %s in place of query** :



- 1 Navigate to the search engine you want to add.
- 2 Search a keyword. Example) XYZ
- 3 You can see the address of the search result page.
Example) **http://www.google.com/search?q=XYZ**
4. Copy the address and paste it to a **URL with %s in place of query**. Replace the keyword (Example : **XYZ**) to %s.
Example) **http://www.google.com/search?q=%s**



Removing the browser history



- 1 Click the wrench icon  on the top right corner, and select **Settings**.
- 2 Click checkbox on **Clear browsing history** from **Tools > Clear browsing data**.
- 3 Select **Clear data from this period** to remove the data of specific period, and select **Everything** to remove all.
- 4 Click **Clear browsing data**.

Setting up the bookmark

Always showing the bookmarks bar (keyboard shortcut: Ctrl+Shift+B)

- 1 Click the wrench icon  on the top right corner.
- 2 Select **Tools > Always show bookmarks bar**.

Importing bookmarks

- 1 Click wrench icon  on the browser toolbar.
- 2 Select **Bookmark manager > Organize**.
- 3 Click **Import bookmarks**.
- 4 Select a file that contains the bookmark list to import.

3. Changing Configurations



Exporting bookmarks

- 1 Click wrench icon  on the browser toolbar.
- 2 Select **Bookmark manager** > **Organize**.
- 3 Select **Export bookmarks**.
- 4 Select a location to export, and click **Save**.





4 FAQ

- Login
- Network setting
- Printing





Login



✓ Q1: "Sorry, your password could not be verified." Message appears.

Reason1 You have entered a wrong e-mail address or a password.

Solution1

☞ Check your email address and password.

If you forgot the password, click <http://www.google.com/accounts/recovery> to initialize the password.

Reason2 Internet connection is not working.

Solution2

☞ Sign in as a guest, and then check the network settings.

☞ Ask the network administrator about the network connection.

☞ Enable the proxy settings from **Settings > Under the Hood > Network**. Ask the network administrator for the proxy server and port number.



Network setting



Q1 : *Cannot connect to the network.*

Reason1 The wireless network password is not entered correctly.

Solution1

☞ Confirm the password again, and enter it again. If you do not remember the password, ask your] network administrator.

Reason2 wireless network Signal that you select is too weak.

Solution2

☞ Try another network. If you have no other wireless network, try a wired network by using the USB Ethernet adapter.

Reason3 If you are using a network in a school or a company, you may have to setup the proxy.

Solution3

☞ Enable the proxy settings from **Settings > Under the Hood > Network**. Ask the network administrator for the proxy server and port number.



Printing



Q1 : *Cannot print*

Reason Google Cloud Print cannot find the printer.

Solution

- ④ Make sure the printer is powered on.
- ④ Make sure that you signed-in to your registered Google Cloud Print account.
- ④ If the printer is directly connected to a Windows computer, turn on the Windows computer.

Q2 : *Cannot see my printer from the Google Cloud Print list.*

Reason1 You are signed-in to the wrong account.

Solution1

- 1 Click the wrench icon  on the top right corner.
- 2 Check the email address that you used to sign in.
- 3 Check the email address that you used to registered the printer with Google Cloud Print from **Settings > Under the Hood > Google Cloud Print.**
- 4 Confirm that the two email addresses are the same.

4. FAQ

40



Reason2 The printer is not correctly registered at Google Cloud Print.

Solution2

- 1 Log on to the Windows computer that the printer connected with.
- 2 Visit **<http://www.google.com/landing/cloudprint/win-enable.html>** with Google Chrome browser.
- 3 Click **Print test page**.
- 4 If the test page is not correctly printed, connect your printer again to **Google Cloud Print Service**.





SAMSUNG