

# LG optimus F7™ User Guide

**This guide helps you to get started using your phone.**

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Google Play™ are trademarks *of Google, Inc.*



- 
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.

- U.S. Cellular® Customer Care 1-888-944-9400

---

Contents .....	3
Getting to know your phone .....	6
Your Home screen .....	17
Google account setup .....	25
Connecting to Networks and Devices .....	26
Calls .....	33
Contacts .....	37
Messaging .....	39
Email .....	42
Camera .....	44
Video camera .....	48
Multimedia .....	51
Utilities.....	58
The web .....	65
Settings .....	66
Troubleshooting .....	75
Safety.....	82
Limited Warranty Statement .....	112

## **Warning** Violation of the instructions may cause serious injury or death.

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*



- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not dispose of your battery near fire or with hazardous or flammable materials.



- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft)



- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



- ▶ Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.



- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

- ▶ Do not disassemble the phone.

- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- ▶ Do not hold or let the antenna come in contact with your body during a call.



- ▶ Make sure that no sharp-edged items, such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

- ▶ Store the battery out of reach of children.



- ▶ Be careful that children do not swallow any parts (such as earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- ▶ Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.

- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

- ▶ Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

### 1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

#### To uninstall applications:

1. On the Home screen, touch  > **Apps** tab > **Settings**  > **Apps** (DEVICE category).
2. Once all applications appear, scroll to and select the application you want to uninstall.
3. Touch **Uninstall** > **OK** to confirm.

### 2. Optimizing battery life

Extend your battery's life between charges by turning off features that you don't need to have running constantly in the background. You can monitor how applications and system resources consume battery power.

#### Extending your phone's battery life:

- ▶ Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- ▶ Reduce screen brightness and set a shorter screen timeout.
- ▶ Turn off automatic syncing for Gmail™, Calendar, Contacts and other applications.
- ▶ Some applications you have downloaded may reduce battery power.

**To check the battery power level:**

- ▶ On the Home screen, touch  > Apps tab > Settings  > About phone (SYSTEM category) > Battery.

The battery status (charging or not charging) and level (percentage charged) is displayed at the top of the screen.

**To monitor and control how battery power is being used:**

- ▶ On the Home screen, touch  > Apps tab > Settings  > About phone (SYSTEM category) > Battery > Battery use.

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

### 3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen panel or the Applications screen and a folder will be created with the two icons in it.

**NOTE** You can customize contents and properties of each folder. To change the folder name and color, touch the folder, then touch . To add more apps to the folder, simply drag and drop the icons into the desired folder.

### 4. Before installing an open source application and operating system (OS)

Installing an open source operating system on your phone and not using the operating system provided by the manufacturer can cause your phone to malfunction.

**Warning**

- To protect your phone and personal data, download applications only from trusted sources, such as Play Store. If some applications are not properly installed on your phone, your phone may not work properly- or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

## 5. Using the hard reset (Factory reset)

If your phone needs to be restored to its original condition, perform a hard reset to reboot your phone.

1. Turn the phone off
2. At the same time press and hold **Volume Down Key**  + **Power/ Lock Key** .
3. Release the keys when the FACTORY HARD RESET screen appears.
4. Read the warning and press the **Power/ Lock Key**  to confirm. Press any other key to cancel.
5. Press the **Power/Lock Key**  to confirm once more or press any other key to cancel.
6. Your device will perform a hard reset and reboot automatically.

**CAUTION** If you perform a hard reset, all user applications and user data will be deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

## 6. Opening and switching applications

Multi-tasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

### To view a list of recently used applications:

Simply press and hold the **Home Key** .

### To stop applications:

1. On the Home screen, touch  > **Apps** tab > **Settings**  > **Apps** (DEVICE category) > **RUNNING** tab.
2. Scroll and touch the desired application and touch **Stop** to stop it.

## 7. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

## 8. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on.

OR

Press and hold the **Power/Lock Key**  for 8 seconds to turn it off.

If it still does not work, please contact the service center.

## Device components





### NOTE Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

### WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

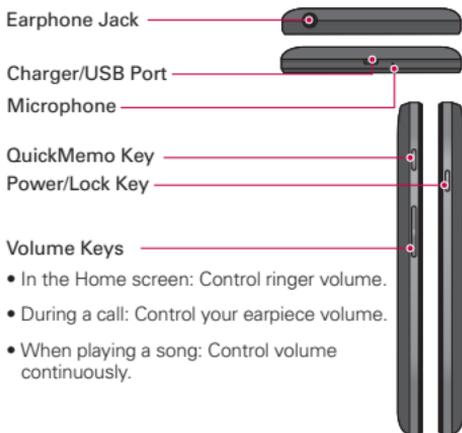

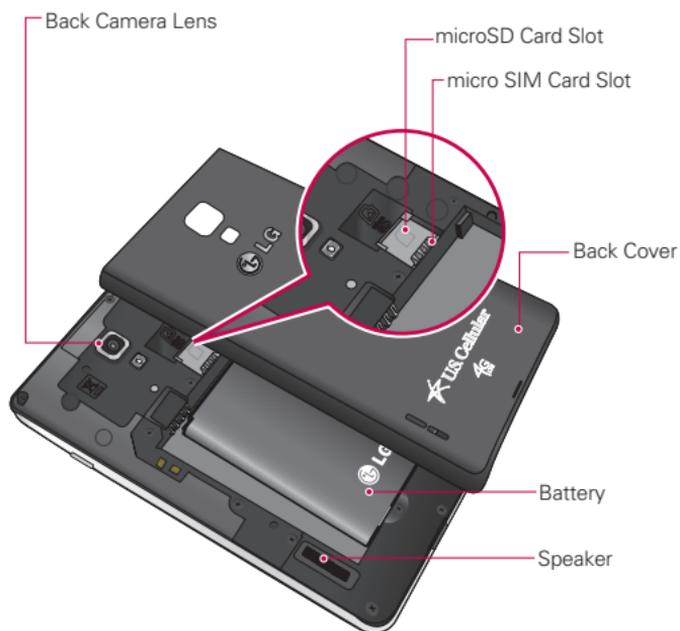


**NOTICE** The NFC antenna for this model is on the back cover. This back cover is the only one that is offered with the model.

## Installing the battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

1. To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in figure below.

**NOTE** Put your thumbnail into the Charger/USB Port hole and lift off the back cover.

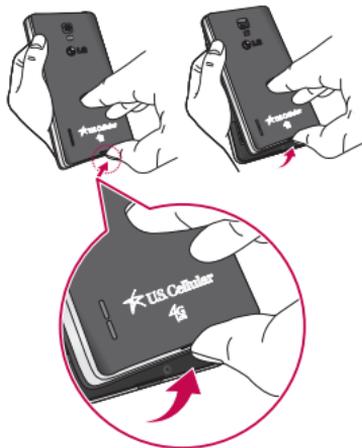

2. Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

**NOTE** Please insert the notched side of the SIM card first. Refer to the image inscribed above the SIM card slot.



3. Insert the battery into place by aligning the gold contacts on the battery and the phone **1** and pressing it down until it clicks into place **2**.




4. Align the back cover over the battery compartment and press it down until it clicks into place.



## Charging your phone

The Charger/USB Port is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

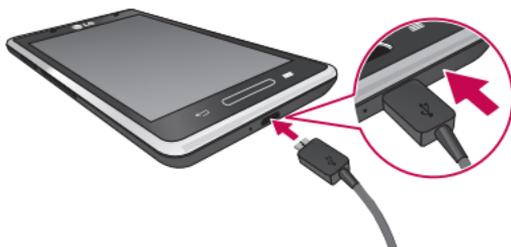

**NOTE** The battery must be fully charged initially to improve battery lifetime.

**NOTE** Do not open the back cover when charging your phone.

## Using the memory card

### To insert a memory card:

Insert the memory card (not included) into the slot. Make sure the gold contact area is facing downwards.



### WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

### To remove the memory card safely:

On the Home screen, touch  > **Apps tab** > **Settings**  > **Storage** (DEVICE category) > **Unmount SD card** > **OK**.

### To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE** All files on your memory card are deleted when it is formatted.

1. On the Home screen, touch  > **Apps tab** > **Settings**  > **Storage**.
2. Touch **Unmount SD card** and touch **OK** to confirm it.
3. Touch **Erase SD card** and then **Erase SD card** one more time to confirm your choice.
4. If you have set a pattern lock, enter the pattern lock and touch **Erase everything**.

**NOTE** If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

## Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the phone, press the **Power/Lock Key**  to lock the screen.

If there are any programs running when you set lock screen, they may still be running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock Key** . The lock screen will appear. Touch and slide the lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

## Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

### To set a screen lock

- ▶ On the Home screen, touch  > **Apps tab** > **Settings**  > **Lock screen** > **Select screen lock** > **Swipe, Face Unlock, Pattern, Pin or Password**

**NOTE** Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can enter the backup PIN or password or try again after 30 seconds.

**When you cannot recall your pattern:**

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, touch **Forgot pattern?**. You are then required to log in with your Google account to unlock your phone or enter your Backup PIN.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

For more information, refer to "5. Using the hard reset (Factory reset)" on page 8.

**To adjust the volume**

On the Home screen, touch the **Menu Key**  > **System settings** > **Sound** > **Volumes**.

You can adjust the volume for **Phone ringtone**, **Notification sound**, **Touch feedback & system**, and **Music, video, games and other media**.

Just scroll each volume button to the right or left to adjust then touch **OK**.

**TalkBack**

Before the activation process can begin, the device will prompt the TalkBack voice navigation feature. TalkBack is an Accessibility Service that helps blind and vision-impaired users interact with their devices more easily. To bypass this feature, touch **Next**.

**To disable TalkBack follow these steps:**

1. On the Home screen, touch **Menu Key**  > **System settings** > **Accessibility**
2. Touch **TalkBack** under the SERVICES section.
3. Touch  to toggle the setting.

**NOTE** When Talkback is turned on, the touchscreen settings require the user to first tap an item they wish to select, and then double tap the item again in order to access the feature.

## Touch screen tips

Here are some tips on how to navigate around your phone.

**Touch** – To choose a menu/option or open an application, touch it.

**Touch and hold** – To open an options menu or grab an object you want to move, touch and hold it.

**Drag** – To scroll through a list or move slowly, drag across the touch screen.

**Flick** – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

- NOTE**
- To select an item, touch the center of the icon.
  - Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
  - Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

## Home screen

Simply swipe your finger to the left or right to view the available Home screen canvas. You can customize each canvas with apps, downloads, widgets and wallpapers.

- NOTE** Some screen images may be different depending on your phone provider.

On your Home screen, you can access quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to access the touch screen dialpad to make a call.



Touch the **Contacts** icon to open your contacts.



Touch the **Messaging** icon to access the messaging menu, where you can create a new message.



Touch the **Apps** icon to view all your installed applications. To open any application, simply touch the icon in the applications list.

- NOTE** To add an icon, touch and hold the desired icon and drag it to the Quick Keys bar. Release it at the desired location. To remove an icon, touch and hold it, then drag it out of the Quick Keys bar.

## Customizing the Home screen

You can personalize your Home screen by adding application icons, and widgets to any Home screen canvas. You can also change the wallpaper.

### To add items on your Home screen:

1. Go to the Home screen panel where you want to add the item. Then touch and hold the empty part of the Home screen or touch .

**NOTE** If space is not available on a particular Home screen canvas, you must delete or remove an item before you can add another item. Or switch to another Home screen canvas.

2. Touch the desired tab at the bottom of the screen and select the items you want to add. You will then see added items on the Home screen.
3. Drag it to the location you want and lift your finger.



Slide the screen right or left to view different canvases.

Touch and hold the icon and drag at the screen you want to put.

Touch to access preloaded and downloaded apps, widgets, and wallpapers.

### To remove an item from the Home screen:

- ▶ On the Home screen, touch and hold the icon you want to remove, then drag it to .

**TIP!** To add an application icon to the Home screen from the Applications menu, touch and hold the application you want to add. The Applications menu closes and the Home screen will be displayed.

## Customizing an application icon from the Home screen



**NOTE** This feature allows you to make and use an icon with the pictures in your Gallery.

You can now edit the icons on the Quick Keys bar or Home screen by creating your own icons with the camera or Gallery images. This gives you the ability to replace the generic icons and have personalized images.

1. Touch and hold an icon until the canvas grid is displayed, then release the icon. An editing icon  appears at the upper right side of the application icon.
2. Touch the icon and select the desired icon design.

OR

Touch **Create photo icon** and select **Take photo** to open the Camera application and take a picture or **Select from Gallery** to choose one of the available pictures in your Gallery.

**NOTE** Touch  to use bigger icons.


## Returning to recently-used applications

1. Press and hold the **Home Key** . The screen displays a pop-up with icons of applications you used recently.
2. Touch an icon to open the application. Or touch the **Back Key**  to return to your current application.

**NOTE** Flick the application previews to the right or left to remove them from the recent apps list.

## Status Bar

The Status Bar runs across the top of your screen.

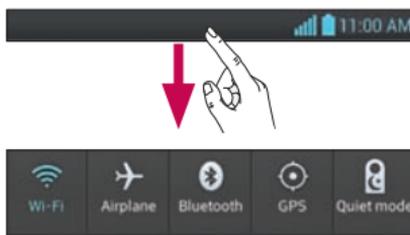

Touch and slide the Status Bar down with your finger to display the Notifications Panel. The Notifications Panel displays all of your notifications along with the Quick Settings and QSlide apps at the top.

Scroll to the right and touch > to manage your Quick Settings. You can add, remove, and rearrange Wi-Fi, Airplane mode, Bluetooth, GPS, Quiet mode, Data enabled, Portable Wi-Fi-hotspot, Miracast, NFC, Power saver, Auto-rotate screen, Sound profile, and Accounts & sync.

**NOTE** Touch and hold an icon from the Quick Settings to view the function's settings menu.

## Viewing the Status Bar

The Status Bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the Status Bar.

Icon	Description	Icon	Description
	No SIM card		No signal
	Airplane mode		Connected to a Wi-Fi network

Icon	Description	Icon	Description
	Power saver is on		Wired headset
	Call in progress		Speakerphone
	Phone microphone is muted		Missed call
	Bluetooth is on		System warning
	Alarm is set		New voicemail
	Ringer is silenced		Vibrate mode
	Battery fully charged		Battery is charging
	Phone is connected to PC via USB cable		Downloading data
	Uploading data		Acquiring GPS
	Receiving location data from GPS		Data is syncing
	New Google Talk message		New Gmail message
	New text or multimedia message		Song is playing
	Song is playing using SmartShare		SmartShare is running
	Direct/Android Beam enabled		NFC On

## On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text

 Tap once to capitalize the next letter you type. Double-tap for all caps.

  Tap to switch to the numbers and symbols keyboard. Tap to switch to the numbers and symbols keyboard.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.


### Entering special characters

The on-screen keyboard allows you to enter special characters (e.g. "á").

For example, touch and hold the "a" key until the desired special character is displayed. Then select the special character you want.

## QuickMemo

The **QuickMemo** feature allows you to create memos and capture screen shots. You can use QuickMemo to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

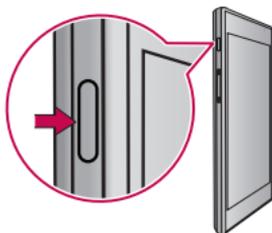

1. While viewing the screen you want to capture and create a memo on, press the **QuickMemo Key**  on the left side of the phone.
2. Create a memo using the available options.

**NOTE** Please use a fingertip while using the QuickMemo feature. Do not use your fingernail.



Touch to lock the front keys  
(Back Key/ Home Key/ Menu Key).

-  - Touch to keep the memo on top and continue using the phone.  
Touch  to exit the overlay mode.
-  - Touch to select if you want to use the current screen as the background screen or a note image.
-  - Touch to undo the most recent action.
-  - Touch to redo the most recently deleted action.
-  - Touch to select the pen type and color.



- Touch to erase the memo that you created.



- Touch to share the memo with others via any of the available applications.



- Touch to save the memo you've created.

Touch the **Menu Key**  > **Signature off** if you want not to display "LG QuickMemo" label on the right bottom of the screen.

3. Touch . You can also crop the image using the triangles in each corner. Touch and drag the triangles to the desired part of the screen.
4. Touch  from the Edit menu and select  to save the memo.

### Viewing the saved QuickMemo

Open the **Gallery** or **Notebook** and touch the **QuickMemo** album.

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

### To set up your Google account:

- ▶ Sign into a Google Account from the prompted setup screen.

OR

- ▶ On the Home screen, touch  > **Apps** tab > **Settings**  > **Accounts & sync** > **ADD ACCOUNT** > **Google** > **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch .

Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronized with your phone. (Depending on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

## Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

### Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

**NOTE** If you are out of the Wi-Fi zone or turn Wi-Fi off, additional charges may be applied by your mobile operator for mobile data use.

### Turning Wi-Fi on and connecting to a Wi-Fi network

1. On the Home screen, touch  > **Apps** tab > **Settings**  > **Wi-Fi** from the WIRELESS & NETWORKS category.
2. Touch the switch  to turn it on and start scanning for available Wi-Fi networks.
3. Touch a network to connect to it.
  - ▶ If the network is open, you will be connected to that network by touching it.
  - ▶ If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
4. The Status Bar displays an icon that indicates the Wi-Fi status.

## Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

### Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

1. On the Home screen, touch  > **Apps** tab > **Settings**  > **Bluetooth** from the WIRELESS & NETWORKS category.
2. Touch the switch  to turn Bluetooth on. Your phone will scan for and display the IDs of all available Bluetooth in-range devices. If the device you want to pair with isn't on the list, make sure the target device is set to be discoverable, then tap **Search for devices**.
3. Choose the device you want to pair up with from the list. Depending on the type of device, you will have to confirm pairing, enter a code, or it will automatically pair.
4. Once the pairing is successful, your device will connect to the device.

### Sending pictures using Bluetooth

1. Open the **Gallery** and touch a picture, then touch  > **Bluetooth**
2. Check if **Bluetooth** is on, then select **Search for devices**.
3. Choose the device you want to send data to from the list.

## Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the Status Bar and as an ongoing notification in the Notifications Panel.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

### **To change Portable Wi-Fi hotspot settings:**

- On the Home screen, touch  > **Apps** tab > **Settings**  > **Tethering & Networks** > **Portable Wi-Fi hotspot** > **Set up Wi-Fi hotspot**. Choose options that you want to adjust

### **To rename or secure your portable hotspot**

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

1. On the Home screen, touch  > **Apps** tab > **Settings** .
2. Touch **Tethering & Networks** from the WIRELESS & NETWORKS category and select **Portable Wi-Fi hotspot**.
3. Touch **Set up Wi-Fi hotspot**.
  - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
  - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
  - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
4. Touch **Save**.

#### **ATTENTION!**

If you set the security option as Open, you cannot prevent unauthorized usage of online services by other people and additional charges can be incurred. To avoid unauthorized usage, you are advised to keep the security option active.

## Using Wi-Fi Direct

You can share your music, picture and video content between users who use Android phones connected via the same Wi-Fi and Wi-Fi Direct network.

Check your Wi-Fi and Wi-Fi Direct network in advance and make sure the users are connected to the same network.

1. On the Home screen, touch  > **Apps** tab > **Settings**  > **Wi-Fi**.
2. Touch the switch  to turn on Wi-Fi.
3. Touch the **Menu Key**  > **Wi-Fi Direct**.
4. Select a device to connect from the scanned device list.

**CREATE GROUP** – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in the Information for Wi-Fi section.

**NOTE** When your phone becomes a group owner, it will consume more battery power than when it is a client. Wi-Fi Direct connection does not provide Internet service. Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

5. To share data after connecting, use SmartShare on the device.

## Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and lists them as they are found. You can select a specific device to share multimedia data through SmartShare.

### Using SmartShare

**SmartShare** uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

#### To turn SmartShare on and allow sharing contents

1. On the Home screen, touch  > **SmartShare** .
2. Touch the **Menu Key**  > **Settings**.
3. Touch **Contents share** to allow your device to be detected by other devices.
  - ▶ Touch **Sharing requests** if you would like to select how to accept sharing requests from other devices. Choose from **Always accept**, **Always ask**, and **Always deny**.
  - ▶ Touch **Receive files** if you would like to allow the other devices to upload media files to my phone.

**NOTE** Make sure that the microSD card is correctly mounted and the **Receive files** option in the Settings menu is checked.

4. Touch **Shared contents** to checkmark the types of content you would like to share. Choose from **Photos**, **Videos**, and **Music**.
5. SmartShare is now activated and ready to share contents.

#### To control your renderer devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

**NOTE** Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

1. On the Home screen, touch  > **SmartShare** .
2. Touch the **Player** icon  and select the device from the renderer device list.
3. Touch the **Library** icon  and select the device of the remote content library.
4. You can browse the content library.
5. Touch and hold a content thumbnail and touch **Play** or touch the **Menu Key**  > **Play**.

### To share contents from your phone to your renderer device(e.g. TV)

**NOTE** Make sure that your renderer device is properly configured.

1. While playing your music using the Music application, touch tab  /  at the top of the screen.

: Select the device on network.

: Currently, the content is being shared through SmartShare.

2. Select the device from renderer lists to play the files.

**NOTE** Follow the similar steps to use the **Gallery**, **Video Player**, or **Polaris Viewer 4** to share contents.

**NOTICE** Check that your device is connected with your home network using Wi-Fi connection to use this application.

Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list.

Your device might not be able to play some contents.

### To download contents from remote content library

1. On the Home screen, touch  > **SmartShare** .
2. Touch the **Library** icon  and select the device of the remote content library.
3. You can browse the content library.
4. Touch and hold a content thumbnail and then touch **Download** or touch the **Menu Key**  > **Download**.

**NOTICE** Some contents are not supported.

### To upload contents to the remote content library

1. On the Home screen, touch  > **SmartShare** .
2. Touch the **Library** icon  and select **My phone**.
3. You can browse the local content library to find the content(s) you want.
4. Touch and hold a content thumbnail and then touch **Upload** or touch the **Menu Key**  > **Upload**.
5. Select the device of the remote content library to be uploaded.

**NOTICE** Some DLNA enabled devices do not support the DMS upload functionality and will not upload files.

Some contents are not supported.

## Making a call

1. On the Home screen, touch  to open the keypad.
2. Enter the number using the keypad. To delete a digit, touch .
3. Touch  to make a call.
4. To end a call, touch .

**TIP!** To enter "+" to make international calls, touch and hold .

## Calling your contacts

1. On the Home screen, touch  to open your contacts.
2. Scroll through the contact list or enter the first few letters of the contact you want to call by touching the **Search contacts** field. You can also touch the letters along the right side of the screen.
3. In the list, touch the contact you want to call.
4. Touch the phone number you want to dial.

## Answering and rejecting a call

### Locked screen

- ▶ Swipe  in any direction to answer an incoming call.
- ▶ Swipe  in any direction to decline an incoming call.

### Unlocked screen

- ▶ Touch  to answer an incoming call.
- ▶ Touch  to decline an incoming call.

**TIP!** Touch or swipe the **Decline with message Key**  if you want to send a message to the caller. If the caller is unknown, the **Decline with message Key** is not available.

## Adjusting call volume

To adjust the in-call volume during a call, use the Volume Keys on the left side of the phone.

## In-call options

Once you initiate a call, you will see these on-screen options.

**Add call** - Touch to initiate a 3-way call.

**End** - Touch to end the call.

**Dialpad** - Touch to display the dialpad.

**Speaker** - Touch to turn the speakerphone on or off. The Speaker button lights up to indicate that the speakerphone is on.

**WARNING** Because of higher volume levels, do not place the phone near your ear while using the speakerphone.

**Mute** - Touch to mute the microphone during a call. The Mute button lights up to indicate the microphone is muted. To unmute the microphone, touch it again.

**Bluetooth (Only available when a Bluetooth headset is connected to your phone)** - Touch to conduct the call via the Bluetooth headset for hands-free conversation.

When another call is coming while you are in a call, touch **Swap calls** to receive the new call and put the current call on hold.

## Making a second call

1. During your first call, touch **Add call** and dial the number. You can also go to your recently dialed list by touching  or search contacts by touching  and select the number you want to call.
2. Touch  to make the call.
3. Both calls are displayed on the call screen. Your initial call is put on hold.
4. To merge the calls, touch . To end active calls, touch .

**NOTE** You are charged for each call you make.

## Viewing your call logs

On the Home screen, touch  and choose the **Call logs** tab .

View a complete list of all dialed, received and missed voice calls.

**TIP!** Touch any call log entry to view the date, time and duration of the call.

**TIP!** Touch the **Menu Key** , then touch **Delete all** to delete all the recorded items or touch **Delete** to select individual items.

## Call settings

You can configure phone call settings such as call reject and other special features offered by your carrier.

1. On the Home screen, touch .
2. Touch the **Menu Key** .
3. Touch **Call settings** and choose the options that you want to adjust.

**Save unknown numbers** – Add unknown numbers to contacts after a call.

### Voicemail

**Service** - Allows you to select your carrier's voicemail service.

**Setup** – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

**Notification sound** - Allows you to select the sound to notify you of new voicemail receipt.

**Vibrate** - Allows you to choose the vibration setting.

**Incoming call popup** - Checkmark if you want to display incoming call popup when using Camera and Videos.

**Decline with messages** – Add or edit a message to send out when you decline incoming call.

**Privacy keeper** - Choose whether to hide the caller name and/or number for incoming calls or not.

**Power button ends call** - Checkmark if you want to end a call with the Power/Lock Key, besides the **End Key**  on the screen.

**Auto retry** – Set the auto retry option. After the time you set (10 seconds, 30 seconds, 60 seconds), the phone will automatically redial in case a call is failed to be connected.

**TTY mode** – Allows you to set the TTY mode to communicate with other TTY devices.

**DTMF tones** – Set the length of DTMF tones.

**Auto answer** – Enable Auto answer with Handsfree.

**Call restrictions** – Set the call restrictions options.

**Call duration** – Allows you to view the call duration.

**Voice privacy** – Checkmark to enable enhanced privacy mode.

Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

## Searching for a contact

1. On the Home screen, touch  to open your contacts.
2. Touch the **Search contacts** field and enter the contact name using the keyboard or touch the letters along the right side of the screen and scroll to the contact.

## Adding a new contact

1. On the Home screen, touch , enter the new contact's number, then touch  **Add to Contacts** >  **Create new contact**.
2. If you want to add a picture to the new contact, touch  and choose from **Take photo** or **Select from Gallery**.
3. Touch  at the top of the screen to select the account where you want to save the contact.
4. Touch a category of contact information and enter the details about your contact.
5. Touch **Save**.

## Editing Contacts

1. Open the **Contacts** application.
2. Touch the Contact entry you want to edit.
3. Touch the **Edit** icon  at the top of the screen.
4. Make the changes to the entry as needed.
5. Touch **Save**.

**NOTE** If you touch the **Menu Key**  from the contact info screen, you can choose from **Delete**, **Share**, **Join**, **Export** or **Add to Home screen**.

## **Favorite contacts**

You can classify frequently called contacts as favorites.

### **Adding a contact to your favorites**

1. On the Home screen, touch  to open your contacts.
2. Touch a contact to view their details.
3. Touch the star to the right of the contact's name. The star turns yellow, indicating that the contact has been added to your contacts.

### **Removing a contact from your favorites list**

1. On the Home screen, touch  to open your contacts.
2. Touch the **Favorites** tab  tab and choose a contact to view its details.
3. Touch the yellow star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Your phone combines text (SMS) and multimedia (MMS) messages into one intuitive, easy-to-use menu.

## Sending a message

1. Touch  on the Home screen, and touch  to create a new message.
2. Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE** You will be charged for a text message for every person you send the message to.

3. Touch the text field and start to compose your message.
4. Touch  to attach an image, video, audio, contact, or add another slide.
5. Touch the **Menu Key**  to open the Options menu. Choose from **Add subject**, **Insert smiley**, **Quick messages**, **Discard**, **Set priority**, and **Change skin**.
6. Touch **Send** (or **Send MMS**) to send your message.

### WARNING

The 924-character limit(6 Segments) may vary from language and how the SMS is coded.

### WARNING

If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

## Conversation view

Messages (SMS, MMS) exchanged with another party are displayed in chronological order so that you can conveniently see an overview of your conversation.

## Using Smilies

Liven up your messages using Smilies.

When writing a new message, touch the **Menu Key** , then choose **Insert smiley**.

## Changing your message settings

Your phone's message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Open the **Messaging** application and touch the **Menu Key**  > **Settings**. Set your preferences as desired.

### Storage

- **Delete old messages:** Enable this option to delete older text messages when the limit for maximum number of text messages is exceeded.
- **Text message limit:** Sets the maximum number of text messages that can be stored on the phone (per conversation).
- **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the phone (per conversation).
- **Signature:** Tap this to automatically add signature (blue checkmark displays).
- **Callback number:** Check this to automatically add callback number (blue checkmark displays).

### Text Message

- **Set priority:** Select Normal or High.

### Multimedia Message

- **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your multimedia message. When checked, the multimedia message header, message body, and any attachments will automatically download to your phone.
- **Roaming auto-retrieve:** Disable this option if you only desire the multimedia message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
- **Set priority:** Select Low, Normal, or High.

## Conversation skin

Allows you to select the desired conversation skin.

## Notification

- **Notifications:** Enable this option if you wish to receive a notification in the Status Bar when a new text or multimedia message arrives.
- **Preview:** Enable this option if you wish to preview the contents of messages when new messages arrive.
- **New message popup:** Enable this option if you wish to see a new message as a pop-up.
- **Notification sound:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the phone to vibrate when a new text or multimedia message is received.
- **Message Reminder:** Enable this option if you wish the phone to remind you at every 2 minutes about the messages you haven't read.

## Quick message

Tap this to add or edit quick messages. Quick message is the specified text message to send out when you want to ignore an incoming call and respond to the caller with instead.

## Emergency alerts settings

- **Presidential alert:** Enable this option if you wish presidential alerts to be always presented. This is set to enabled by default.
- **Extreme alert:** Enable this option to receive extreme alerts.
- **Severe alert:** Enable this option to receive severe alerts.
- **AMBER alert:** Enable this option to receive AMBER alerts on child abduction.

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide the account settings you need.

## Managing an email account

The first time you open the **Email** application, a setup wizard opens to help you to set up an email account.

### To add another email account:

- ▶ Open **Email**  and touch the **Menu Key**  > **Accounts** > **Menu Key**  > **Add Account**.

After the initial setup, Email displays the contents of your Inbox. If you have added more than one account, you can switch among accounts.

### To change an email account's settings:

- ▶ Open **Email**  and touch the **Menu Key**  > **Account settings**.

### To delete an email account:

- ▶ Open **Email**  and touch the **Menu Key**  > **Account settings** > **Remove account** > **Yes**.

## Email account screen

 – Touch the folder icon to open the account folders.

 – Touch to search your email.

 – Touch to compose a new email.

Touch the **Menu Key**  to access additional options.

## Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

## Composing and sending email


### To compose and send a message

1. Open the **Email** application and touch .
2. Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
3. Touch the **Meny Key**  to add Cc/Bcc and add attachment files if required.
4. Enter the message.
5. Touch  to send the message.

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed if you touch .

**TIP!** When a new email arrives in the inbox, you will receive a notification by sound or vibration (depending on your settings). You will also receive a notification in the Status Bar.

## Getting to know the viewfinder

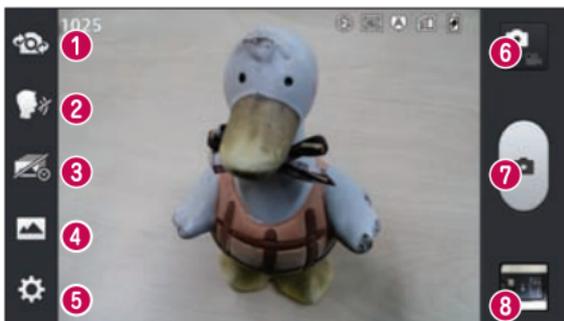

- 1 **Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 **Cheese shutter** – Take photo with voice command (saying "Cheese", "Smile", "Whisky", "Kimchi" or "LG").
- 3 **Time catch shot** – Allows you to capture the missing moment by taking five sequential pictures at once before the shutter key is touched.
- 4 **Shot mode** – Choose from Normal, HDR, Panorama, Continuous shot.
- 5 **Settings** – Access the Settings menu.
- 6 **Mode switch** – Allows you to switch between camera mode and video mode.
- 7 **Capture** – Takes a photo.
- 8 **Gallery** – Allows you to view the last photo you captured. This enables you to access your Gallery and view saved photos within camera mode.

## Taking a quick photo

1. Open the **Camera** application.
2. Hold the phone and point the lens towards the subject you want to photograph.
3. Touch the subject and a focus box will appear in the center of the viewfinder screen.

4. When the focus box turns green, the camera has focused on your subject.
5. Touch  to capture the image.

### Once you've taken the photo

Touch the image preview at the bottom of the screen to view the last photo you captured.

 Touch to share via SmartShare.

 Touch to return to Camera mode to take another picture.

 Touch to share your photo using any supported applications.

**TIP!** If you have a social networking account and set it up on your phone, you can share your photo with the social networking community.

 Touch to delete the image.

Touch the **Menu Key**  to open the following options.

**Set image as** – Touch to set the image as a **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.

**Move** – Touch to move the image to another album.

**Copy** - Touch to copy the image to another folder.

**Rename** – Touch to edit the name of the selected picture.

**Rotate left/right** – Touch to rotate the image to the left or right.

**Crop** – Crop your photo. Move your finger across the screen to select the area.

**Edit** - View and edit the pictures.

 Improves color qualities in different lighting conditions.

 Applies artistic effects to the pictures.

 Applies color effects to the pictures.

 Applies additional options to the pictures.

**Slideshow** – Displays your images in a slideshow.

**Details** – Displays the picture information.


## Using the advanced settings

In the viewfinder, touch  to open the advanced options.

-  – **Edit quick menu** to edit the quick menus on the viewfinder.
-  – **Flash** to set the Flash mode. Choose from **Off**, **On**, or **Auto**.
-  – **Zoom** to zoom in or out.
-  – **Brightness** to adjust the brightness setting compatible with the environment.
-  – **Focus** to set a focus mode. Choose from **Auto** or **Face tracking**.
-  – **Image size** to set the size of your picture.
-  – **Scene mode** to choose a scene mode setting. Choose from **Normal**, **Portrait**, **Landscape**, **Sports**, **Sunset**, **Night**, and **Smart shutter**.
-  – **ISO** to control the camera's sensitivity to light. Choose from **Auto** (default), **400**, **200**, or **100**.
-  – **White balance** to select how the camera adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your pictures. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, or **Cloudy**.
-  – **Color effect** to apply different color effects to your pictures. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
-  – **Timer** to set your camera's timer. This is ideal if you want to be a part of the picture.
-  – **Geotagging** to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

-  – **Shutter sound** to adjust the sound the shutter makes when taking a picture.
-  – **Auto review** to set whether to view the picture that was just taken. Choose from **Off** (default), **On, 2 sec**, or **5 sec**.
-  – **Storage** to choose where to save your pictures.
-  – **Reset** to restore all camera default settings.
-  – **Camera help guide** to see the help guide whenever you want to know how a function operates.

## Getting to know the viewfinder

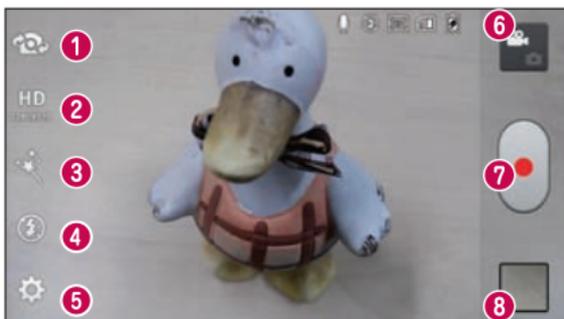

- 1 **Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 **Video size** – Define the resolution from Full HD (1920x1080), HD (1280x720), TV(720x480), VGA(640x480), MMS(320x240), MMS(176x144).
- 3 **Live Effect** – Allows you to put various effects when recording a video. Choose an effect and touch .
- 4 **Flash** – Allows you to turn on the flash when recording a video in a dark place.
- 5 **Settings** – Access the Settings menu.
- 6 **Mode switch** – Allows you to switch between video mode and camera mode.
- 7 **Record** – Touch to start recording a video.
- 8 **Gallery** – Touch to view the last video you recorded. This enables you to access your Gallery and view your saved videos from within video mode.

## Recording a quick video

1. Open the **Camera** application and touch the **Mode switch** button .
2. The video camera viewfinder appears on the screen.
3. Holding the phone, point the lens towards the subject you want to capture in your video.

4. Touch  once to start recording.
5. A red light appears at the top corner of the viewfinder with a timer showing the length of the video.
6. Touch  on the screen to stop recording.

## After recording a video

Touch the image preview at the bottom of the screen to view the last video you recorded.

-  Touch to play the video.
-  Touch to share via SmartShare.
-  Touch to return to Camera mode to take another picture or record a video.
-  Touch to share the video via any supported applications.
-  Touch to delete the video you just made. Confirm by touching **Yes**. The viewfinder reappears.

Touch the **Menu Key**  to open the following options.

**Move** – Touch to move the video to another album.

**Copy** – Touch to copy the video to another album.

**Rename** – Touch to edit the name of the selected video.

**Details** – Touch to see a detailed information, such as the name, date, time, size and type.

## Using the advanced settings

Using the viewfinder, touch  to open the the advanced options.

-  – **Edit quick menu** to edit the quick menus on the viewfinder.
-  – **Zoom** to zoom in or out.
-  – **Brightness** to adjust the brightness setting compatible with the environment.
-  – **White balance** to select how the camcorder adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your videos. Choose from **Auto**, **Incandescent**, **Sunny**,

Fluorescent, or Cloudy.

-  – **Color effect** to apply different color effects to your videos. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
-  – **Geotagging** to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.
-  – **Audio recording** to choose whether to turn on or off voice recording.
-  – **Auto review** to enable auto review of your video.
-  – **Storage** to choose where to save your videos.
-  – **Reset** to restore all camera default settings.
-  – **Video help guide** to see the help guide whenever you want to know how a function operates.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the Volume Keys on the left side of the phone.

You can store multimedia files on a memory card for easy access to all your image and video files.

## Gallery

On the Home screen, touch  > **Apps** tab > **Gallery** . Open a list of albums that store all your image and video files.

## Playing a video

1. On the Home screen, touch  > **Apps** tab > **Videos** .
2. Select the video you want to play.

	Touch to pause playback.
	Touch to resume playback.
	Touch to fast-forward playback by 10 seconds.
	Touch to go rewind playback by 10 seconds.
	Touch to manage the video volume.
	Touch to change the ratio of the video screen.
	Touch to activate the QSlide function.
	Touch to share your video via the SmartShare function.
	Touch to lock the touch keys on the screen.

To change the volume while watching a video, press the up and down Volume Keys on the left side of the phone.

Touch and hold a video in the list to access **Share**, **Trim**, **Delete** and **Details**.

## Live Zooming

Live Zooming allows you to zoom in or zoom out on a portion of a video that is being played to make the desired scan appear larger or smaller.

When viewing the video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.



- NOTE**
- When in video playback mode, slide the screen up or down to adjust the brightness.
  - When in video playback mode, slide the screen left or right to rewind or fast-forward.
- NOTE** Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.


## Video Editor

You can edit the photos or videos stored on the phone.

To access, on the Home screen, touch  > **Video Editor** .


- NOTE** Video Editing function is supported only for photos or videos which recorded with this phone.

### < Project list screen >

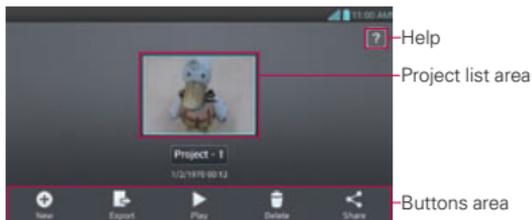

	Create project.
	Projects should be exported to play in applications such as videos.
	Play project.
	Delete project.
	Share project with application such as YouTube.

### < Project edit screen >

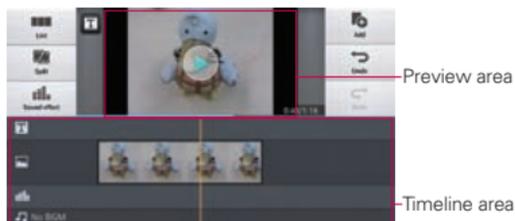


	Move to the main project list screen. Currently edited project is saved automatically.
	Split the video clip into two portions.
	Add sound effect.
	Add video, image or audio clip.
	Undo an action.
	Redo an action.
	Add text to video or image clip.

## Video Wiz

You can make your own movie using your images/video and music.

1. On the Home screen, touch  > **Video Wiz** .
2. After seeing the brief introduction on the steps to follow, touch **OK**.

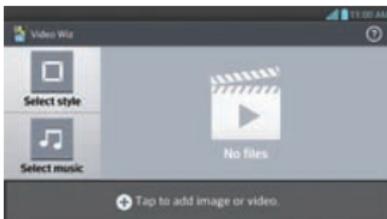

3. Touch  to add images or video to your movie.
4. Touch the desired images or videos, then touch .
  - To remove images or videos, touch  and touch . Then touch .
  - To rearrange them, touch and hold an image/video, and drag and drop it to the desired position.
5. Touch **Select style** to select the desired movie style.
  - Scroll through and select the style you want. As you scroll through the styles, a preview will be displayed.
6. Touch **Select music** to set the background music.
7. Touch  to play your movie.
8. Touch  to edit the video clip using Text, Sticker or Magic Spot.
  - After editing the video, touch .
9. Touch  to save the video.

**NOTE** Touch  to view the help information on using this feature.

## Music

Your phone has a music player that lets you play all your favorite tracks. To access the music player, on the Home screen, touch  > **Music** .

### Add music files to your phone

Start by transferring music files to your phone:

- Transfer music using Media sync (MTP).
- Download from the Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.

### Transfer music using Media sync (MTP)

1. Connect the phone to your PC using the USB cable.
2. Select the **Media sync (MTP)** option. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.
3. When you're finished transferring files, swipe down on the Status Bar and touch **USB connected** > **Charge only**. You may now safely unplug your device.

### Playing a song

1. On the Home screen, touch  > **Music** .
2. Touch **Songs**.
3. Select the song you want to play.

	Touch to find the song on YouTube.
	Touch to share your music via SmartShare.
	Touch to set shuffle mode.
	Touch to set repeat mode.
	Touch to manage the music volume.

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track on the album or in the, playlist.
	Touch to go back to the beginning of the song. Touch twice to return to the previous song.
	Touch to set the song as a favorite.
	Touch to see the current playlist.
	Touch to set Dolby audio effect when connected with a headset jack.

To change the volume while listening to music, press the up and down Volume Keys on the left side of the phone.

Touch and hold any song in the list to access **Play**, **Add to playlist**, **Share**, **Set as ringtone**, **Delete**, **Details** and **Search**.

- NOTE**
- Some file formats are not supported, depending on the device software.
  - If the file size exceeds the available memory, an error can occur when you open files.

- NOTE** Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

## Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS Outlook or MS Office Outlook Web Access.

### To Synchronize MS Exchange

1. On the Home screen, touch  > **Settings** .
2. Touch **Accounts & sync** > **ADD ACCOUNT**.
3. Touch **Microsoft Exchange** to add your Microsoft Exchange account.
4. Make sure if you checkmark **Sync Tasks**.

## To open the Tasks application

On the Home screen, touch  > **Tasks** .

## Tasks options

: Tap to view All tasks, Overdue tasks, and Due today tasks.

: Tap to refresh your task list.

: Tap to search for tasks.

: Tap to create a new task.

Tap the **Menu Key**  to access the following options:

- **Sort by:** Allows you to sort tasks by Creation order, Due date, Subject, and Priority.
- **Accounts and Lists:** Allows you to select which accounts and lists to display.
- **Import/Export:** Allows you to import or export tasks to the SD card or internal storage.
- **Settings:** Allows you to set advanced settings.

## QSlide

The QSlide function enables an overlay on your phone's display for easy multi-tasking.



1. Open the Notifications Panel and touch the desired app from the QSlide apps section.

OR

While using an application that supports QSlide, touch . The function will be continuously displayed as a small window on your screen.

2. You can make a call, browse the Web, or choose other phone options. You can also use the QSlide window by adjusting the transparency bar



**NOTE** The QSlide function can support up to two windows at the same time.

## VuTalk


Use VuTalk to collaboratively communicate using real-time interactive handwriting.

- NOTE**
- VuTalk is compatible with other VuTalk-capable LG devices.
  - During a voice call, you can use VuTalk only when connected to the 3G data network or Wi-Fi.
  - The screen may lock if no input is made for a period of time.

## Registering VuTalk


1. From the Home screen, touch  > Contacts .

2. Tap  and agree to the terms and conditions.
- You can also register the VuTalk service by selecting  on a call screen.

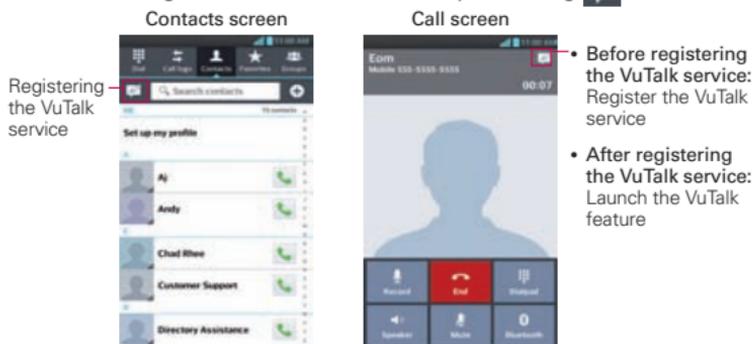

## Using VuTalk


1. Open the **Contacts** application and touch  to display only the contacts who use the VuTalk feature.
2. Touch the desired contact, then touch  to send an invitation to the contact.

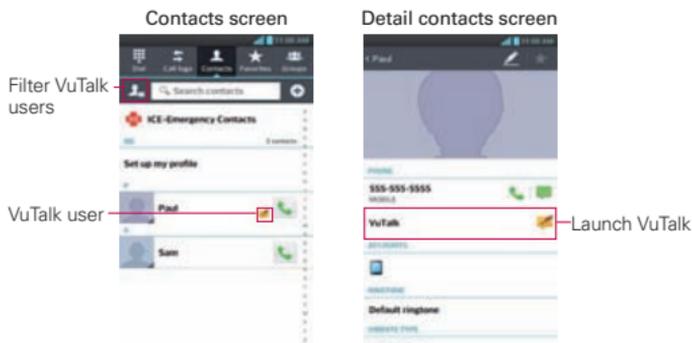

VuTalk agreement screen




VuTalk request screen

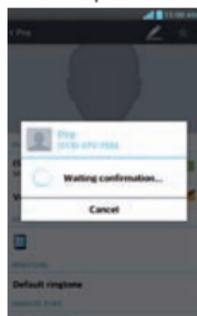

- Touch  to attach an image, take a photo, or insert a map view or sticker.

A example of use 1

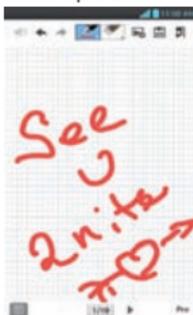

A example of use 2



3. Touch  or the **Back Key**  to end the VuTalk feature.
  - You may save VuTalk contents to the Notebook when exiting VuTalk.
  - The VuTalk feature will not be ended by pressing the Home Key.

## Setting your alarm

1. On the Home screen, touch  > **Apps tab** > **Alarm/Clock** .
2. Touch  to add a new alarm and enter the desired time.
3. Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**.
4. Touch **Save** to save the alarm.

## Using your calculator

1. On the Home screen, touch  > **Apps** tab > **Calculator** .
2. Touch the number keys to enter numbers.
3. For simple calculations, touch the function you want (, ,  or ) followed by .

**NOTE** For more complex calculations, touch the **Menu Key** , select **Advanced** panel, then choose the desired function.

## Adding an event to your calendar

1. On the Home screen, touch  > **Apps** tab > **Calendar** .
2. Touch  to select from the following Calendar views: **Day**, **Week**, **Month**, **Agenda**.
3. Touch on the date you want to add an event on.
4. Touch  and select the account where you want to save the event (if applicable).
5. Touch the **Event name** field and enter the event name.
6. Touch the **Location** field and enter the location. Check the date and enter the time you want your event to start and finish.
7. If you want to add a note to your event, touch the **Description** field and enter the details.
8. If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
9. Touch **Save** to save the event in the calendar.

## Polaris Viewer 4

Polaris Viewer 4 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

On the Home screen, touch  > **Apps tab** > **Polaris Viewer 4** .

### Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Viewer 4, the objects and layout remain the same as in their original documents.

## Your Navigator Deluxe

With Your Navigator Deluxe, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS. Search for any destination including gas stations, ATMs, restaurants, and more. Get detailed maps of any location.

1. In order to use Your Navigator Deluxe, you must first turn on your phones location and GPS settings. On the Home screen, touch  > **Settings**  > **Location access**. Touch . Make sure that **GPS satellites** is active.
2. After activating your location and GPS settings, press the **Home Key**  and touch  > **Your Navigator Deluxe** .

From the Your Navigator Deluxe Home screen you can select

- **"Drive To"** for turn by turn direction to an address, airport, contacts addresses and more.
- **"Maps"** to see where you currently are located on a map and what traffic is in the area.
- **"Places"** to search for nearby businesses, the cheapest gas prices and more.

## Play Store

Play Store allows you to browse and search for free and paid applications.

### To open the Play Store application

- ▶ On the Home screen, touch  > **Play Store** . When you open the **Play Store** application for the first time, you must read and accept the terms of service to continue.



Touch here to search for the apps.

### To download the applications

**NOTE** Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.
2. Touch the **Install** button (free apps) or **Price** button (paid apps). The screen will display if the application requires access to your data or control of any functions on your phone. The Play Store application tells you what it can access if you continue with the download.
3. If you agree to the application's access requirements, touch **Accept & download** (for free applications) or **Accept & buy** (for paid applications.).

### To get help with Play Store

Play Store Help web pages are available from all Play Store screens.

Touch the **Menu Key**  > **Help**.

The **Browser** application opens to the Play Store Help page, with links to many help topics.

**NOTE** After you open an app, you can usually adjust its settings by touching the **Menu Key** .

## Browser

The Browser gives you a fast, full-color world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

**NOTE** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.



Enter the URL and touch here to search.

## Using the web toolbar

-  Touch to go back a page.
-  Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back Key** , which goes to the previous page.
-  Go to the home page.
-  Touch to add a new window.
-  Touch to access your bookmarks.

## Using options

Touch the **Menu Key**  to view the following options.

**Refresh** – Update the current web page.

**Save to bookmarks** – Add the current web page as bookmark.

**Share page** – Allows you to share the web page with others.

**Find on page** – Allows you to find letters or words on the current web page.

**Desktop view** – Allows you to view the web page in desktop view.

**Save for offline reading** – Allows you to save the current page offline so you can read it later.

**Settings** – Displays Browser settings.

**Exit** – Exits the web page and closes the Browser.

## To access your phone's settings

On the Home screen, touch  > Apps tab > Settings .

OR

On the Home screen, tap the Menu Key  > System settings.

## Wireless & Networks

### <Airplane mode>

After switching to airplane mode, all wireless connections are disabled.

### < Wi-Fi >

Touch the switch  to turn on Wi-Fi to connect to available Wi-Fi networks.

**TIP!** How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG OPTIMUS F7™ into the router.

You can find the MAC address in the following user interface: On the Home screen, touch  > Apps tab > Settings  > Wi-Fi > Menu Key  > Advanced > MAC Address.

### < Bluetooth >

Touch the switch  to turn on Bluetooth to connect to Bluetooth devices.

### < Mobile data >

Displays the data usage and set mobile data limit.

### < Call >

You can configure phone call settings such as **Voicemail** and other special features offered by your carrier.

### < Share & Connect >

NFC - Touch the switch  to toggle NFC on and off.

**NOTE** NFC (Near Field Communication) is a wireless technology that enables data transmission between two objects when they are brought within a few inches of each others. When you enable NFC on your phone, your phone can exchange data with other NFC-enabled devices or read information from smart tags embedded in posters, stickers, and other

products. From the NFC settings menu, you can manage direct sharing and pairing Bluetooth via NFC.

**Direct/Android Beam** - Touch the switch  to toggle Direct/Android Beam on and off.

When this feature is turned on, you can beam app contents or files to other NFC and Wi-Fi Direct (and Android Beam devices) devices by holding the devices close together.

For example, you can beam Browser pages, YouTube videos, contacts, and more. And you can beam images/videos from the Gallery, music from the Music, and documents from the Polaris Viewer 4. Just bring the devices together (typically back to back) and then touch your screen. The app determines what gets beamed.

**Miracast** - You can mirror phone screen and sound onto LG Miracast dongle or TV wirelessly.

**NOTE** To start the Miracast feature quickly, touch the Miracast icon  in the Notifications Panel. While mirroring, Wi-Fi or Mobile Hotspot cannot be used simultaneously.

**SmartShare Beam** - Enable to receive file from LG phones.

**File networking** - File Networking requires wireless connection. Make sure that devices are using same AP (Access Point). Network folder sharing may use more battery.

## < Tethering & Networks >

**Portable Wi-Fi hotspot** - You can configure the portable Wi-Fi hotspot settings.

**Help** - Displays help information about the portable Wi-Fi hotspot feature.

**VPN** - Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

**Mobile networks** - Allows you to enable/disable data, data roaming, and select a network mode and system.

## DEVICE

### < Sound >

**Quiet time** – Set times to turn off all sounds except alarm and media.

**Sound profile** – You can choose **Sound**, **Vibrate only** or **Silent**.

**Volumes** – You can manage the volumes for various phone settings.

**Ringtone with vibration** – Vibration feedback for calls and notifications.

**Phone ringtone** – Allows you to set your default incoming call ringtone.

**Notification sound** – Allows you to set your default notification ringtone.

**Vibrate type** - Allows you to choose the vibration type.

**Gentle vibration** - Gradually increases the vibration up to the current strength set.

**Vibrate strength** - Set the vibrate strength for calls, notifications, and touch feedback.

**Incoming call vibration** - Select the type of vibration to use for incoming calls.

**Dial pad touch tones** – Allows you to set the phone to play tones when using the dial pad to dial numbers.

**Touch sounds** – Allows you to set your phone to play a sound when you touch buttons, icons and other on-screen items that react to your touch.

**Screen lock sound** – Allows you to set your phone to play a sound when locking and unlocking the screen.

**Emergency tone** – Allows you to set emergency tone as **Off**, **Alert** or **Vibrate**.

**Vibrate on touch** - Checkmark if you want the phone to vibrate when touching keys.

### < Display >

**Brightness** – Adjust the screen brightness.

**Screen timeout** – Set the time for screen timeout.

**Smart screen** - Checkmark if you want to keep screen on when the phone detects your eyes looking at the screen.

**Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.

**Font type** - Choose the desired font type.

**Font size** – Change the size of the display font.

**Front touch key light** – Set the front key LED time.

**Home button LED** - Select the item you wish to apply LED lighting.

**Motion sensor calibration** - Improve the accuracy of the tilt and speed of the sensor.

### < Home screen >

**Theme** - Allows you to set the screen theme for your device.

**Screen swipe effect** - Allows you to select the effect to use when you swipe to change screens.

**Wallpaper** - Allows you to set the wallpaper to use on your Home screen.

**Scroll screens circularly** - Checkmark to set the Home screens to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach one end.

**Portrait view only** - Checkmark this setting so that the Home screen is always displayed in portrait view.

**Home backup & restore** - Allows you to backup and restore app, widget and theme configurations.

### < Lock screen >

**Select screen lock** – Set a screen lock to secure your phone. You can set **Swipe**, **Face Unlock**, **Pattern**, **PIN**, **Password** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to enter your unlock sequence to unlock the screen.

**Wallpaper** – You can set the lock screen wallpaper from the **Gallery** or **Wallpaper gallery**.

**Clocks & shortcuts** - Customize clocks and shortcuts on the lock screen.

**Screen effect** - Choose the desired screen effect when you swipe the screen to unlock the phone.

**Owner info** – Show owner information on the lock screen.

**Lock timer** - Select the lock timer duration.

**Power button instantly locks** - Checkmark so that pressing the **Power/Lock Key**  instantly locks the phone.

**Vibrate on touch** - Checkmark if you want the phone to vibrate when entering your unlock sequence.

### **< Gestures >**

**Move Home screen items** - If you checkmark this, you can move to other Home screen canvases by tilting the phone while you press and hold an item.

**Tilt sensitivity** - When the Move home screen items option is checkmarked, you can test and adjust sensitivity of tilt sensor for the Home screen and applications.

**Silence incoming calls** - Checkmark to set the phone to silence incoming calls by just flipping the phone.

**Snooze or stop alarm** - Checkmark to set the phone to snooze or stop the alarm by just flipping the phone.

**Pause video** - Checkmark to set the phone to pause videos by just flipping the phone.

**Help** - Provides help information on some of the gestures features

### **< One-handed operation >**

**Dial keypad** - Allows you to touch the arrow to adjust the position of the dial keypad to the left or right.

**LG keyboard** - Allows you to flick the keyboard or touch the arrow to adjust the position of the LG Keyboard to the left or right.

**Lock screen** - Allows you to touch the arrow to adjust the position of the PIN entry screen to the left or right.

**Help** - Displays help information about the available options.

### < Storage >

**INTERNAL STORAGE** – Displays internal storage availability and the types of data that is using up internal storage.

**SD CARD** - Displays internal storage availability and the types of data that is using up internal storage.

**Mount/Unmount SD card** - Mounts and unmounts the microSD card from your phone so that you can access the data on it, format the card or safely remove it.

**Erase SD card** - Permanently erases everything on the microSD card and prepares it for use with your phone.

### < Battery >

Here you can manage the battery and check the power saving items. You can also check the battery use.

### < Apps >

Use this menu to view details about the applications installed on your phone, manage their data, and force them to stop.

## PERSONAL

### < Accounts & sync >

Allows you to manage your accounts and to synchronize data in the background, whether or not you are actively working in them. Turning the **Auto-sync data** option off can save battery power and lowers (but does not eliminate) data usage.

**< Location access >**

**Access to my location** – Allows app that have asked your permission use your location information.

**GPS satellites** – Lets apps use GPS to pinpoint your location.

**Wi-Fi & mobile network location** – Lets apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.

**< Security >**

**Encrypt phone** – Encrypt all data on phone including system data. Require a numeric PIN or password to decrypt your phone each time you turn it on.

**Password typing visible** – Show password as you type.

**Phone administrators** – View or deactivate device administrators.

**Unknown sources** – Allows you to install non-Market applications.

**Trusted credentials** – Display trusted CA certificates.

**Install from storage** – Choose to install encrypted certificates from your SD card.

**Clear credentials** – Remove all certificates.

**< Language & input >**

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

**< Backup & reset >**

Change the settings for managing your settings and data.

**Back up my data** – Set to back up your settings and application data to the Google server.

**Backup account** – Set the account you want to back up information to.

**Automatic restore** – Set to restore your settings and application data when the applications are reinstalled on your device.

**Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started your phone.

## SYSTEM

### < Date & time >

Use **Date & time** settings to set how dates are displayed.

### < Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

**NOTE** Requires additional plug-ins.

### < PC connection >

**USB connection type** – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software** or **Camera (PTP)**).

**Ask on connection** – Ask USB connection mode when connecting to a computer.

**Help** - Displays information about the USB connection types.

**On-Screen Phone** - Allows you to activate this feature to display the screen and control the phone using the PC via USB, Bluetooth or Wi-Fi connection.

### <Developer options>

Allows you to select developer options.

### < About phone >

Allows you to view information about your phone and network. Also provides legal and patent information.

**DivX Mobile** 

ABOUT DIVX VIDEO: DivX<sup>®</sup> is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified<sup>®</sup> device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified<sup>®</sup> device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

DivX Certified<sup>®</sup> to play DivX<sup>®</sup> video up to HD 720p, including premium content.

DivX<sup>®</sup>, DivX Certified<sup>®</sup> and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

**Dolby Digital Plus License notice**

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

Category	Sub-Category	Question	Answer
Bluetooth	Bluetooth Devices	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit, FTP server is possible. When it's connected to another phone via Bluetooth, you can receive Contacts data.
Bluetooth	Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data	Contacts Backup	How can I back up Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data	Synchronization	Is it possible to set up oneway- sync with Gmail?	Only two-way synchronization is available.
Data	Synchronization	Is it possible to synchronize all the Email folders?	The Inbox is automatically synchronized. You can view other folders by touching  and selecting the desired folder.
Data	Synchronization	Is it possible to transfer Contacts data from a feature phone to an Android™ phone?	Yes, if your contacts can be extracted into a .CSV file. How to transfer: 1.Create ".CSV" file with the contacts on your current phone. 2.Log into Gmail with your PC. 3.Click Contacts. 4.Click Import. 5.Attach the ".CSV" file. 6.Your contacts will then be synchronized between your Android phone and Gmail.

Category	Sub-Category	Question	Answer
Google™ Service	Gmail Log-In	Should I have to log into Gmail whenever I want to access Gmail?	Once you log into Gmail, you don't need to log in Gmail again.
Google Service	Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function	YouTube™	Is it possible to play YouTube videos?	Yes, YouTube videos are supported but may have to be viewed through the YouTube application (and not the Browser).
Phone Function	Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function	Ringtone	Is there a file size limitation for when I want to use an .MP3 file as a ringtone?	There is no file size limitation.
Phone Function	Message Time	My phone does not display the time of receipt for messages older than 24 hours. How can I change this?	No settings can be changed but follow the steps below to view the times. 1.Open the conversation that contains the desired message. 2.Touch and hold the message. 3.Touch <b>View message details</b> .
Phone Function	microSD Card	What is the maximum supported size for a memory card?	32GB memory cards are compatible.
Phone Function	Navigation	Is it possible to install another navigation application on my phone?	Any application that is available on Play Store and is compatible with the hardware can be installed and used.

Category	Sub-Category	Question	Answer
Phone Function	Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (Company Email Server) contacts can be synchronized.
Phone Function	Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the Wait &amp; Pause functions saved into the number, those functions will not be recognized. You will need to re-save each number.</p> <p><b>How to re-save numbers with Wait and Pause:</b></p> <ol style="list-style-type: none"> <li>1. On the Home screen, touch .</li> <li>2. Dial the number, then touch the <b>Menu Key</b> .</li> <li>3. Touch <b>Add 2-sec pause</b> or <b>Add wait</b>.</li> <li>4. Enter the remaining number(s) and continue saving the number as necessary.</li> </ol>
Phone Function	Security	What are the phone's security functions?	You are able to set the phone to require the entry of an unlock sequence (Swipe, Face Unlock, Pattern, PIN, or Password) before the phone can be accessed or used.
Phone Function	Unlock Pattern	What should I do if I forget my Unlock Pattern?	After attempting the Unlock Pattern 5 times, you can touch <b>Forget Pattern?</b> and use your Google Account information to unlock your phone. In addition, if you forgot the unlock pattern, you can unlock using the Backup Pin.

Category	Sub-Category	Question	Answer
Phone Function	Unlock Pattern	What should I do if I forgot the Unlock Pattern and I didn't create a Google Account on the phone?	<p>Without entering the Unlock Pattern, you will not be able to access your phone.</p> <p><b>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.</b></p> <p><b>How to perform a factory reset:</b></p> <ol style="list-style-type: none"> <li>1. Turn the phone off.</li> <li>2. At the same time press and hold <b>Volume Down Key</b>  + <b>Power/Lock Key</b> .</li> <li>3. Release the keys when the <b>FACTORY HARD RESET</b> screen appears.</li> <li>4. Read the warning and press the <b>Power/Lock Key</b>  to confirm. Press any other key to cancel.</li> <li>5. Press the <b>Power/Lock Key</b>  to confirm once more or press any other key to cancel.</li> <li>6. Your device will perform a hard reset and reboot automatically.</li> </ol>
Phone Function	Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> <li>1. On the Home screen, touch the <b>Menu Key</b> .</li> <li>2. Touch <b>Lock screen settings</b>.</li> <li>3. Touch <b>Select screen lock</b>.</li> <li>4. Touch <b>Pattern</b>. The first time you do this, a short tutorial about creating an unlock pattern appears.</li> <li>5. Set up by drawing your pattern once &gt; <b>Continue</b> &gt; draw again &gt; <b>Confirm</b>.</li> </ol>

Category	Sub-Category	Question	Answer
Phone Function	Speed Dial	Is Speed Dialing supported?	<p>Yes. You can set Speed Dials as well as save a contact directly on your Home screen.</p> <p><b>To set a Speed Dial:</b></p> <ol style="list-style-type: none"> <li>1. Open the <b>Contacts</b> application.</li> <li>2. Touch the <b>Menu Key</b>  &gt; <b>Speed dial</b>.</li> <li>3. Touch the empty speed dial location and select the desired contact and phone number.</li> </ol> <p><b>To set a Direct Dial shortcut to your Home screen:</b></p> <ol style="list-style-type: none"> <li>1. Touch and hold an empty area on your Home screen.</li> <li>2. Touch <b>Widgets</b> &gt; <b>Direct dial</b>.</li> <li>3. Select a contact from your Contacts List.</li> </ol>
Phone Function	Memory	Is it possible to save a picture to the internal memory while taking a picture?	<p>While using the camera, touch  &gt; <b>Storage</b> &gt; <b>Internal storage</b>.</p>
Phone Function	Memory	Will I know when my memory is full?	<p>Yes, you will receive a notification.</p>
Phone Function	Language Support	Is it possible to change the language?	<p>The phone has multi-lingual capabilities.</p> <p>To change the language:</p> <ol style="list-style-type: none"> <li>1. On the Home screen, touch the <b>Menu Key</b>  &gt; <b>System settings</b>.</li> <li>2. Touch <b>Language &amp; input</b> &gt; <b>Language</b>.</li> <li>3. Touch the desired language.</li> </ol>
Phone Function	VPN	How do I set up a VPN?	<p>VPN access configuration is different according to each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.</p>

Category	Sub-Category	Question	Answer
Phone Function	Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> <li>1. On the Home screen, touch the <b>Menu Key</b> .</li> <li>2. Touch <b>System settings &gt; Display &gt; Screen timeout</b>.</li> <li>3. Touch the preferred screen backlight timeout time.</li> </ol>
Phone Function	Wi-Fi & 3G	When Wi-Fi and 3G are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, use the 3G or Wi-Fi icon at the top of your screen.</p>
Phone Function	Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until  appears at the top-center of the screen. Then, without lifting your finger, drag the icon to  and release it.
Phone Function	Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> <li>1. On the Home screen, touch the <b>Menu Key</b> .</li> <li>2. Touch <b>System settings &gt; Apps</b>.</li> <li>3. Touch the application and then touch <b>Uninstall</b>.</li> </ol>
Phone Function	Alarm	Can I use music files for my alarm?	<p>Yes. After saving a music file as a ringtone, you can use it for your alarm.</p> <ul style="list-style-type: none"> <li>• Touch and hold a song in a library list. In the Context menu that opens, touch <b>Set as ringtone</b>.</li> </ul>
Phone Function	Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function	Alarm	If my Ringer Volume is set to Off or Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.

Category	Sub-Category	Question	Answer
Phone Spec	Battery Time	What is the maximum amount of time my phone's battery will last before I need to recharge it?	Talk Time: 15hr (900 min.) Standby Time: 300Hr (12.5 Days)
Phone Spec	Band	Which wireless bands are supported by the phone?	Your phone is able to operate on the 800MHz, 1900MHz , and 2100MHz bands.
Recovery Solution	Factory Reset	How do I perform a factory reset?	<ol style="list-style-type: none"> <li>1.On the Home screen, touch the <b>Menu Key</b> .</li> <li>2.Touch <b>System settings &gt; Backup &amp; reset &gt; Factory data reset.</b></li> </ol> <p><b>NOTE</b> You can touch the checkbox to also erase all contents from your microSD card when the phone is reset.</p> <ol style="list-style-type: none"> <li>3.Read the warning and touch <b>Reset phone.</b></li> <li>4.Touch <b>Erase everything.</b></li> </ol> <p><b>Attention: If a factory reset is performed, all installed application and user data will be erased. Please remember to back up any important data before performing a factory reset.</b></p>

## HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

## FCC Part 15 Class B Compliance

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that causes undesired operation. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations. Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## FCC RF Exposure Information

### **WARNING! Read this information before operating the phone.**

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

## Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

## Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations. Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## Wi Fi Caution

This device is capable of operating in 802.11a/n mode.

For 802.11a/n devices operating in the frequency range of 5.15 - 5.25 GHz, they are restricted for indoor operations to reduce any potential harmful interference for Mobile Satellite Services (MSS) in the US.

Wi-Fi Access Points that are capable of allowing your device to operate in 802.11a/n mode(5.15 - 5.25 GHz band) are optimized for indoor use only.

If your Wi-Fi network is capable of operating in this mode, please restrict your Wi-Fi use indoors to not violate federal regulations to protect Mobile Satellite Services.

## Consumer Information About Radio Frequency Emissions

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

### Are wireless phones safe?

Scientific research on the subject of wireless phones and radio frequency (“RF”) energy has been conducted worldwide for many years, and continues. In the United States, the Food and Drug Administration (“FDA”) and the Federal Communications Commission (“FCC”) set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, “The scientific community at large ...believes that the weight of scientific evidence does not show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under “c” in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted. The FCC issued its own website publication stating that “there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety of other problems, including headaches, dizziness or memory loss.” This publication is available at <http://www.fcc.gov/cgb/cellular.html> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

### What does “SAR” mean?

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model

is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by the FCC. One of these limits is expressed as a Specific Absorption Rate, or "SAR." SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue. Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported SAR value. This is because the SAR value may vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone to the body while in use, and the use of hands-free devices. For more information about SARs, see the FCC's OET

Bulletins 56 and 65 at [http://www.fcc.gov/Bureaus/Engineering\\_Technology/Documents/bulletins](http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins) or visit the Cellular Telecommunications Industry Association website at [http://www.ctia.org/consumer\\_info/index.cfm/AID/10371](http://www.ctia.org/consumer_info/index.cfm/AID/10371). You may also wish to contact the manufacturer of your phone.

### **Can I minimize my RF exposure?**

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that "hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit." Also, if you use your wireless phone while in a car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your

wireless phone manufacturer's instructions for the safe operation of your phone.

### **Do wireless phones pose any special risks to children?**

The FDA/FCC website states that "the scientific evidence does not show a danger to users of wireless communication devices, including children." The FDA/FCC website further states that "some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all". For example, the Stewart Report from the United Kingdom ["UK"] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. [The UK's] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy of the UK's leaflet is available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at [www.iegmp.org.uk](http://www.iegmp.org.uk) and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

### **Where can I get further information about RF emissions?**

For further information, see the following additional resources (websites current as of April 2005):

#### **U.S. Food and Drug Administration**

FDA Consumer magazine November-December 2000

Telephone: (888) INFO-FDA

<http://www.fda.gov> (Under "c" in the subject index, select Cell Phones > Research.)

#### **U.S. Federal Communications Commission**

445 12th Street, S.W. Washington, D.C. 20554

Telephone: (888) 225-5322

<http://www.fcc.gov/oet/rfsafety>

**Independent Expert Group on Mobile Phones**

<http://www.iegmp.org.uk>

**Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices**

283 Sparks Street Ottawa, Ontario K1R 7X9 Canada

Telephone: (613) 991-6990

[http://www.rsc.ca/index.php?page=Expert\\_Panels\\_RF&Lang\\_id=120](http://www.rsc.ca/index.php?page=Expert_Panels_RF&Lang_id=120)

**World Health Organization**

Avenue Appia 20 1211 Geneva 27 Switzerland

Telephone: 011 41 22 791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

**International Commission on Non-Ionizing Radiation Protection**

c/o Bundesamt für Strahlenschutz

Ingolstaedter Landstr. 1

85764 Oberschleissheim Germany

Telephone: 011 49 1888 333 2156

<http://www.icnirp.de>

**American National Standards Institute**

1819 L Street, N.W., 6th Floor Washington, D.C. 20036

Telephone: (202) 293-8020

<http://www.ansi.org>

**National Council on Radiation Protection and Measurements**

7910 Woodmont Avenue, Suite 800 Bethesda, MD 20814-3095

Telephone: (301) 657-2652

<http://www.ncrponline.org>

**Engineering in Medicine and Biology Society, Committee on Man and Radiation (COMAR) of the Institute of Electrical and Electronics Engineers**

<http://ewh.ieee.org/soc/embs/comar/>

## Consumer Information on SAR

### (Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.78W/kg and when worn on the body, as described in this user guide, is 1.14 W/kg (bodyworn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR

levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID ZNFUS780.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>.

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## **FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices**

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way

to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard. When you’re talking over the cell phone, it’s recommended you’d turn the BT (Bluetooth) or WLAN mode off for HAC. This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It

is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

### **For information about hearing aids and digital wireless phones**

#### **FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

#### **Gallaudet University, RERC**

<http://tap.gallaudet.edu/Voice/>

#### **Hearing Loss Association of America [HLAA]**

<http://hearingloss.org/content/telephones-and-mobile-devices>

#### **The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

#### **Wireless Phones and Hearing Aid Accessibility**

<http://www.accesswireless.org/hearingaid/>

## Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## **Electronic Devices**

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers.

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### **Health Care Facilities**

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use

equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

### **Aircraft**

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

### **Potentially Explosive Atmosphere**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

### **For Vehicles Equipped with an Air Bag**

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in

the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### **Part 15.19 statement**

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

\* Information subject to change.

### **Part 15.21 statement**

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.

### Caution

#### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the LG-approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

#### Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please read the manual of proper installation and removal of the battery.
- Please read the manual of specified charger about charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.

- Please use only an LG-approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Never store your phone in temperature less than -4°F or greater than 122°F. Charge the battery in range of 0°C ~ 45°C.
- Charging temperature range is regulated between 0°C and 45°C. Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has protection circuit to avoid the danger. Do not use nearby the place where generates static electricity more than 100V which gives damage to the protection circuit. If the protection circuit were broken, the battery would generate smoke, rupture or flame.
- When the battery has rust, bad smell or something abnormal at first-time-using, do not use the equipment and go to bring the battery to the shop which it was bought.
- In case younger children use the battery, their parents should teach them how to use batteries according to the manual with care.
- If the skin or cloth is smeared with liquid from the battery, wash with fresh water. It may cause the skin inflammation. Remove and do not use the battery.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.

- Insert the battery pack charger vertically into the wall power socket.
- Only use the LG-approved battery charger. Otherwise, you may cause serious damage to your phone and risk of overheating, fire or explosion may occur.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never use and unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

### **Explosion, Shock, and Fire Hazards**

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone and may cause an explosion. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag or contact with sharp objects including animal bites may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Shortcircuit of the terminal may damage the battery and cause an explosion.

### **General Notice**

- Using a damaged battery or placing a battery in your mouth or animal's mouth may cause serious injury including a fire or explosion.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged

antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.

- Do not immerse your phone in water, liquid, or expose to high humidity. If this happens, turn it off immediately and remove the battery. Immediately, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

## FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such

findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## **2. What is the FDA's role concerning the safety of wireless phones?**

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following.

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well. The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting

results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer-promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy. The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

### **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### **9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from

your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## **11. What about wireless phone interference with medical equipment?**

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by

the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## **12. Where can I find additional information?**

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

National Radiological Protection Board (UK) (<http://www.hpa.org.uk/radiation/>)

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless nonemergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special nonemergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

## Limited Warranty Statement

### 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

### 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications,

unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that is covered under this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

#### 4. STATE LAW RIGHTS:

No other express warranty is applicable to this product.

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

#### 5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:




**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.**

   Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

